

Pro-Bel

Requirements

- Router Control software option
- Serial Interface Cable (DB9 to DB9)
- Control DeviceMaster or Sealevel SeaLINK
- Ethernet Cable


Port Connections

Communications			
Router PRI CTL Port	>	DeviceMaster or SeaLINK RS-422	
DeviceMaster or SeaLINK Ethernet	>	Local Area Network Ethernet	
Video			
Switcher Input BNC	>	Router Video Out BNC	

For More Information on...

- configuring switcher inputs, refer to the *Caprica User Guide*.

Serial Interface Cable Pinouts

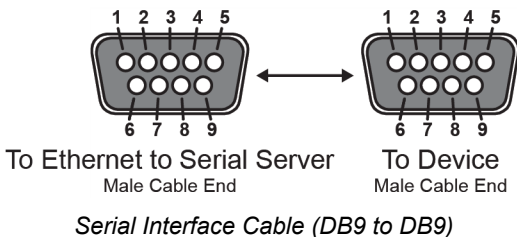

DeviceMaster

DeviceMaster		Pro-Bel	
Pin	Signal	Pin	Signal
2	RxA (Rx-)	>	8 TxA (Tx-)
7	TxB (Tx+)	>	7 RxB (Rx+)
8	RxB (Rx+)	>	3 TxB (Tx+)
3	TxA (Tx-)	>	2 RxA (Rx-)

SeaLINK

SeaLINK		Pro-Bel	
Pin	Signal	Pin	Signal
2	RxA (Rx-)	>	8 TxA (Tx-)
4	TxB (Tx+)	>	7 RxB (Rx+)
1	RxB (Rx+)	>	3 TxB (Tx+)
3	TxA (Tx-)	>	2 RxA (Rx-)

- ★ When using a SeaLINK Ethernet to serial server in your OverDrive system, terminate any control signals that are not going to be used. The most common way to do this is connect RTS to CTS, connect positive to positive and negative to negative.

Configuring the Ethernet to Serial Server

The Ethernet to serial server in an OverDrive system handles the communication between your Pro-Bel router and Caprica Server. OverDrive systems can contain a DeviceMaster or SeaLINK Ethernet to serial server. Use one of the following sections to configure the Ethernet to serial server in your OverDrive System:

- “DeviceMaster” on page 4–1
- “SeaLINK” on page 4–2

DeviceMaster

The Pro-Bel router connects to a serial port on the DeviceMaster. Use the following procedure to configure the DeviceMaster for your Pro-Bel router:

1. Use a web browser to open the **Server Status** web page for your DeviceMaster. The default IP address for a DeviceMaster is 192.168.250.250.
The **Server Status** web page opens in the web browser.
2. Click **Port #** link, where # is the port number on the DeviceMaster to which you connect your Pro-Bel.
The **Edit Port # Configuration** web page opens for the selected port.
3. In the **Port Name** box, enter `Pro-Bel`.
4. In the **Serial Configuration** section, use the **Mode** list to select **RS-422**.
5. Use the **Baud** list to select **38400**.
6. Use the **Parity** list to select **odd**.

7. Use the **Data Bits** list to select **8**.
8. Use the **Stop Bits** list to select **1**.
9. Use the **DTR** list to select **off**.
10. Use the **EOL** list to select **disabled**.
11. In the **TCP Connection Configuration** section, select the **Enable** check box.
12. Select the **Listen** check box.
13. In the **Port** box, enter the port number that the DeviceMaster uses to listen for communication from the Pro-Bel.
14. Click **Save**.
The **Port Configuration Updated** web page opens.
15. Click **OK**.
The **Server Status** web page opens.
16. Click **Reboot**.
The DeviceMaster reboots with the new configuration.


SeaLINK

The Pro-Bel router connects to a serial port on the SeaLINK. You must configure the connected SeaLINK serial port to communicate with the Pro-Bel router.

Hardware Configuration

The SeaLINK Ethernet to serial server is primarily configured using the web interface. Before using the web interface, the SeaLINK DB9 port that connects the Pro-Bel router to your OverDrive system requires DIP Switch configuration.

Inside the SeaLINK each DB9 serial port has a set of eight DIP Switches. To communicate with the Pro-Bel router the RS Mode of the DB 9 serial port that connects the Pro-Bel router must be set to RS-422. Set the DIP Switches associated with the connected port as follows:

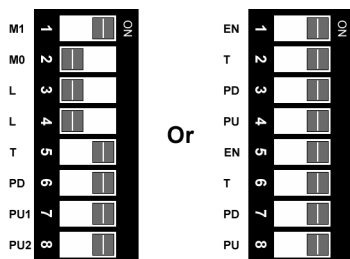

DB9 DIP Switch Settings for RS-422

For More Information on...

- configuring the DIP Switches for SeaLINK DB9 ports, refer to the **Hardware Configuration** section in the *SeaLINK User Manual | Ethernet Serial Server Family*.

Web Interface Configuration

After setting the DIP Switches associated with the DB9 port on the SeaLINK used to connect the Pro-Bel router, you can use the SeaLINK web interface to complete the SeaLINK configuration.

Use the following procedure to configure the SeaLINK for your Pro-Bel router:

1. Use a web browser to open the **Summary** web page for your SeaLINK. The URL of the Summary web page is the IP address of the SeaLINK.
The **Summary** web page opens in the web browser.
 2. Click the **Port Settings** tab.
The **Port Settings** web page opens.
 3. In the **Port # Defaults Section** section, where # is the port number on the SeaLINK to which you connect your Pro-Bel router, enter 38400 in the **Baud Rate** box.
 4. Use the **Data Bits** list to select **8**.
 5. Use the **Stop Bits** list to select **1**.
 6. Use the **Parity** list to select **None**.
 7. Use the **Flow Control** list to select **None**.
 8. Use the **RS Mode** list to select **RS 422/488**.
 9. Use the **Protocol** list to select **Ignored**.
 10. Click **Submit**.
 11. Click the **Administration** tab.
The **Administration** web page opens.
- ★ Values set for settings on the **Administration** web page are set for all SeaLINK serial ports.
12. In the **General Settings** section, enter a name to identify the SeaLINK in the **Name** box.
 13. Use the **Connection Protocol** list to select **Raw Data**.
 14. At the bottom of the **Administration** web page, select the **Reboot** check box.
 15. Click **Submit**.
The SeaLINK reboots with the new configuration.

Remote Device Port Configuration Settings

Use the following procedure to configure a remote device for your Pro-Bel router on the Caprica Server:

1. Use the current version of **DashBoard** software to connect to your **Caprica Server**.
2. In the **DashBoard Tree View**, double-click the **Port Configuration** node of your Caprica Server.
3. In the **Port Configuration Summary** table, double-click a **REMOTE#** port in the **Port** column.
4. In the **Configure REMOTE#** panel, click **Router**.
5. Click **NPro-Bel**.
6. Click **Network Settings**.
7. Use the following settings to configure the **Network Settings** for your Pro-Bel router:

- **Ethernet Role** — Client
- **Remote IP Address** — IP address of the Ethernet to serial server in your OverDrive system
- **Remote Port** — Port number on the Ethernet to serial server to which you connect your Pro-Bel router.

When using a SeaLINK Ethernet to serial server in your OverDrive system the Remote Port number is associated with the SeaLINK serial port number to which you connected your Pro-Bel router. The SeaLINK serial port to Remote Port associations are as follows:

SeaLINK Serial Port	Remote Port
1	4680
2	4681
3	4682
4	4683

- **Local IP Address** — 0.0.0.0
 - **Local Port** — 0
 - **Protocol** — TCP
8. Click **Apply Changes** to save the network settings.

Device Setup

Use the following procedure to configure the device settings for your Pro-Bel on the Caprica Server:

1. Click **Device Settings**.
2. Use the following settings to configure the **Device Settings** for your Pro-Bel:
 - **SRC Xpts** — enter or select **128** (default).
This setting defines the configuration of source cross points, with values between **0** to **4096**.
 - **Dest Xpts** — enter or select **128** (default).
This setting defines the configuration of destination cross points, with values between **0** to **4096**.
 - **Num Levels** — enter or select **16** (default).
This setting defines the number of levels on the device, with values from **1** to **16**.
 - **Name Length** — click **8 Chars** (default).
This setting defines the character lengths available, with options of **4 Chars**, **8 Chars**, or **12 Chars**.
 - **Src & Dest Base** — enter or select **0** (default).
This setting defines the source and destination to the base, with values of either **0** or **1**.
 - **Use Extended** — click to control support for extending over 1000 sources and destinations. The available options are as follows:
 - › **No** — do not support extending over 1000 sources and destinations.
 - › **V13** — use Version 13 (protocol SW-P-08) to support extending over 1000 sources and destinations.
 - › **V31** — use Version 31 (protocol SW-P-88) to support extending over 1000 sources and destinations.
 - **Single Names** — this setting controls whether Caprica requests single source names from the Pro-Bel router. The available options are as follows:
 - › **No** — click this button to not request single source names from the Pro-Bel router. Caprica still requests bulk src/dst names when this option is selected.
 - › **Yes** — click this button to request single source names from the Pro-Bel router.
3. Click **Apply Changes** to save the device settings.
4. Click **Done** to close the Configure REMOTE# Panel.

For More Information on...

- configuring remote devices for OverDrive systems that contain a Caprica Server, refer to the *Caprica User Guide*.

Compatibility

Video Server	Version
Pro-Bel	
Automation	
OverDrive	15.0 or higher
Caprica Server	9.6 or higher
Port Expanders	
Control DeviceMaster	Yes
Sealevel SeaLINK	Yes

Contacting Technical Support

Technical Support is staffed by a team of experienced specialists ready to assist you with any question or technical issue.

Ross Video has technical support specialists strategically located around the globe to ensure a prompt response to technical inquiries. Our primary technical support center is located in Ottawa, Ontario, Canada. In addition, we have offices in The United Kingdom (London), Australia (Sydney), and Singapore with satellite locations in New York City, The Netherlands, and China. As we expand our presence globally, we are constantly evaluating other key locations to have a local technical support specialist in order to better service our customers.

North America

Our North America center located in Ottawa, Ontario, Canada and is open Monday to Friday 8:30 a.m. to 6:00 p.m. EST, with 24/7/365 on-call service after hours.

Our telephone number is: +1-613-686-1557

Toll free within North America: +1 833-859-0499

EMEA

Our EMEA center is open Monday to Friday 8:30 a.m. to 5:00 p.m. GMT. After hours support is provided by our North America location.

Our telephone number is: +44 (0)1189502446

International toll free: +800 3540 3545

If the local support specialist is not available, your call will be transferred automatically to our North America center.

Australia

Our Sydney, Australia office is located in Alexandria, NSW.

Our local support telephone number is: 1300 007 677

If the local support specialist is not available, your call will be transferred automatically to our North America center.

Online

E-mail: techsupport@rossvideo.com

Website: open a support request using the link <https://support.rossvideo.com/> to open a support request.

Copyright

© 2014 - 2025 Ross Video Limited. Ross®, MLE®, OverDrive®, GlobalView®, RundownControl™, DirectControl™, DirectAudio™, DirectAUXaudio™, DirectCamera™, DirectServer™, QuickTurn™, RapidRestore™, SideShot™, SideSlide™, SideStick™, OverDrive Gateway™, LiveLink™, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.