

### Rack Mounting

#### 1 Rack Mount

Unpack and use the supplied Rack Mount Kit to mount your OverDrive Server in a 19" wide by 30" deep EIA equipment rack.

*The supplied Rack Mount Kit **MUST** be used to mount your server in a 19" x 30" EIA equipment rack to avoid damaging the server.*

#### 2 Power

Connect an **AC Power Cord** to each **AC Port** on the OverDrive Server and then to Mains Power.

*The server power supplies are auto-sensing and can use either 110 VAC or 220 VAC. Servers are equipped with two power supplies in a redundant configuration. Only one power supply is required to run the server.*

### Peripheral Cabling

#### 3 Keyboard and Mouse

**3a** Plug the supplied **Keyboard** into the left **USB** port on the back of the OverDrive Server.




**3b** Plug the supplied **Mouse** into the right **USB** port on the back of the OverDrive Server.

*Note: KVM extenders (customer supplied) are required when the server keyboard, and mouse are located remotely from the rack room.*

#### 4 Monitor

Connect a **Monitor** (customer supplied) to the **VGA** port of the OverDrive Server.

*Note: KVM extenders (customer supplied) are required when the server monitor is located remotely from the rack room.*

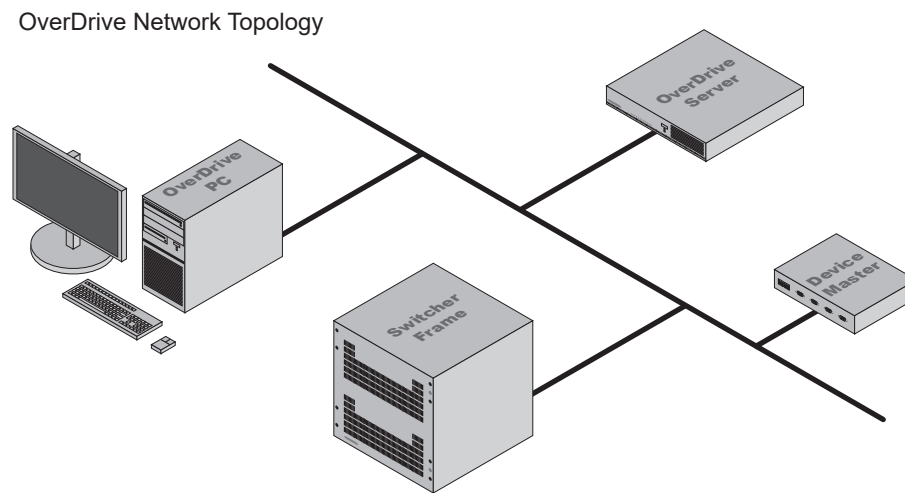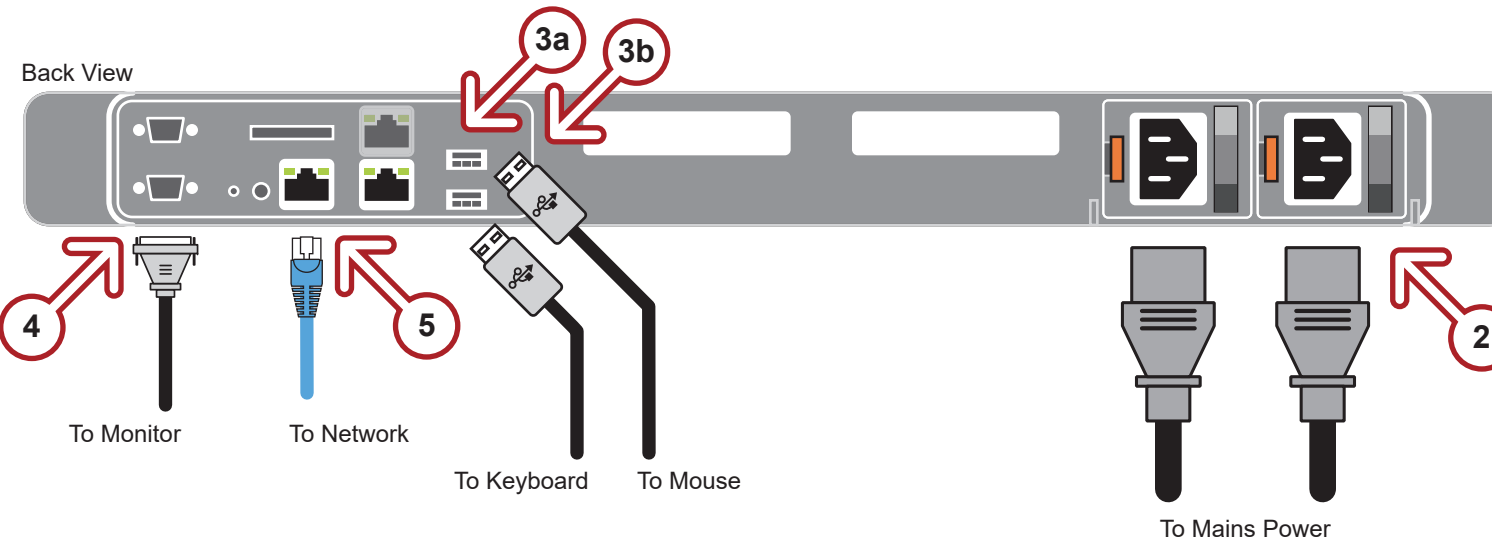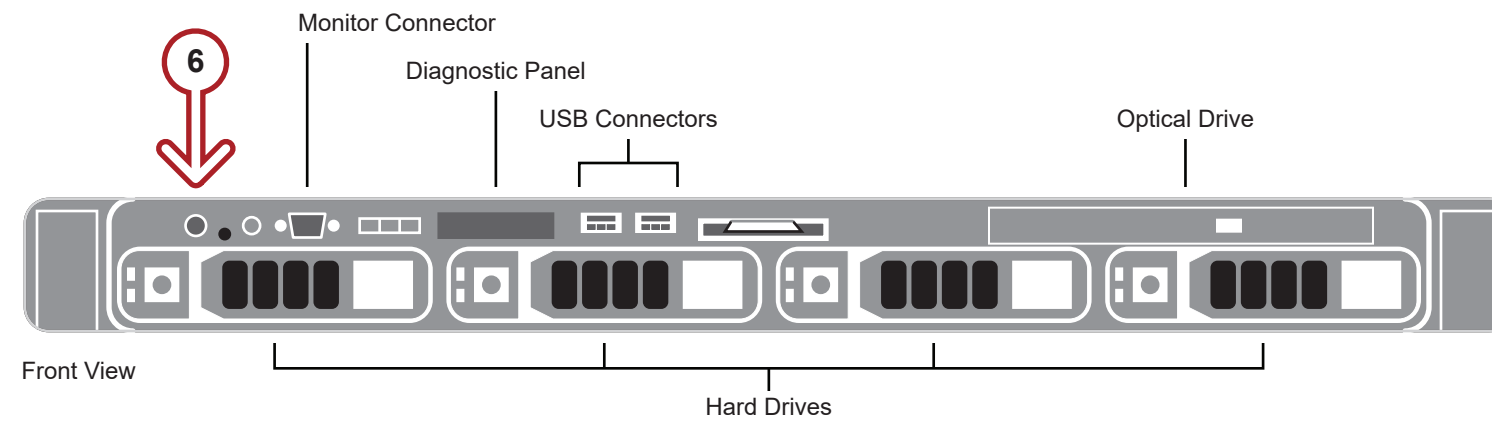

### Network Cabling

#### 5 Local Area Network

Plug an **Ethernet** cable from your Local Area Network into the **GigE Ethernet port 1** on the back of the OverDrive Server.

*Note: The server must be connected to the same network as the switcher frame and devices.*

*For information on assigning a static IP address to the v-Ethernet port, refer to the **Set the Caprica VM (Hyper -V) IP Address** section in the OverDrive Installation and Configuration Guide.*

### Startup

#### 6 Power Up

Press the **Power** button on the front of the OverDrive Server.

*The server startup process includes drive initialization, which takes a few minutes to complete.*

*Note: Ross Video recommends shutting down the server only from the Windows operating system.*

#### 7 Log On and Server Start

Use the following account information to log on to the OverDrive Server.

**User name:** overdrive  
**Password:** <your\_password>

*After you log on, the OverDrive Server automatically starts, enabling the switcher and OverDrive to connect.*

#### 8 Guides

The OverDrive shipping box contains a CD loaded with soft copies of the OverDrive Installation/Configuration and User Guide. The guides are also incorporated into the OverDrive Help menu and can be accessed directly from the GUI.

**Need Help?**  
**Technical Support:** (+1) 613 • 652 • 4886  
 techsupport@rossvideo.com