

## Rack Mounting

### 1 Rack Mount

Unpack and use the supplied Rack Mount Kit to mount your Streamline Play Server in a 19" wide by 30" deep EIA equipment rack.

*The supplied Rack Mount Kit **MUST** be used to mount your Streamline Play Server in a 19" x 30" EIA equipment rack to avoid damaging the Streamline Play Server.*

### 2 Power

Connect an **AC Power Cord** to each **AC Port** on the Streamline Play Server and then to Mains Power

*The Streamline Play Server power supplies are auto-sensing and can use either 110 VAC or 220 VAC. Streamline Play Servers are equipped with two power supplies in a redundant configuration. Only one power supply is required to run the Streamline Play Server.*

## Peripheral Cabling

### 3 Keyboard and Mouse

**3a** Plug the supplied **Keyboard** into the left **USB** port on the back of the Streamline Play Server.



**3b** Plug the supplied **Mouse** into the right **USB** port on the back of the Streamline Play Server.

***Note:** KVM extenders (customer supplied) are required when the Streamline Play Server monitor, keyboard, and mouse are located remotely from the rack room.*


### 4 Monitor

Connect a **Monitor** (customer supplied) to the **VGA** port of the Streamline Play Server.

***Note:** KVM extenders (customer supplied) are required when the Streamline Play Server monitor, keyboard, and mouse are located remotely from the rack room.*

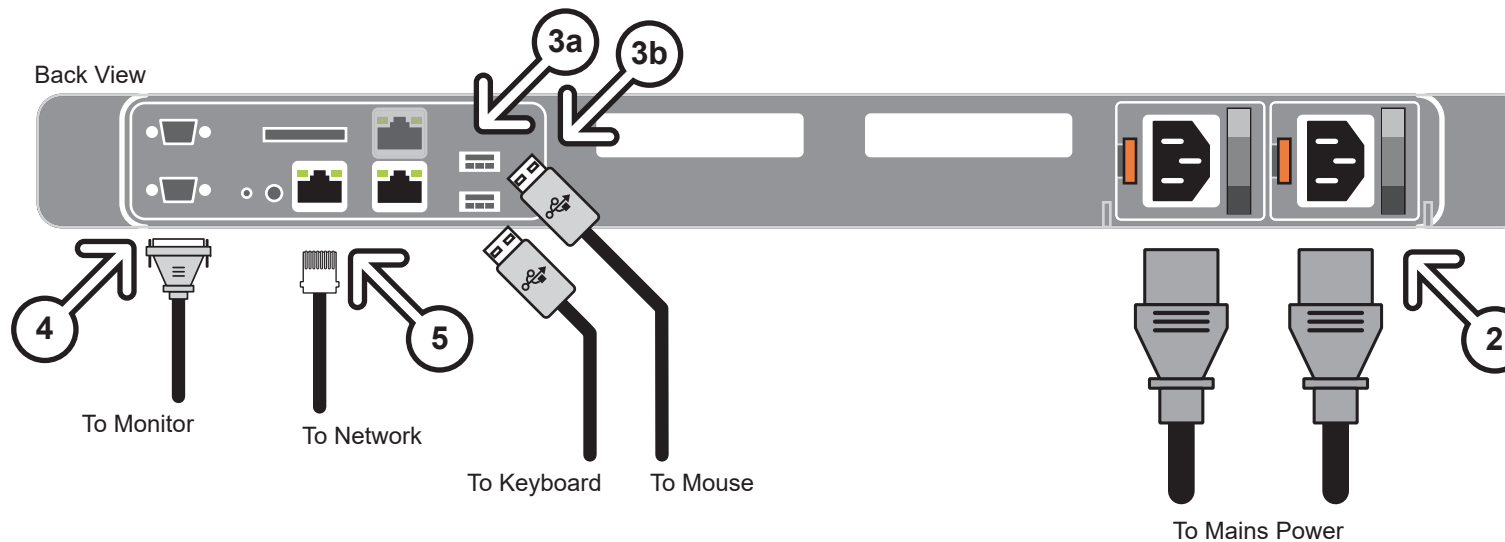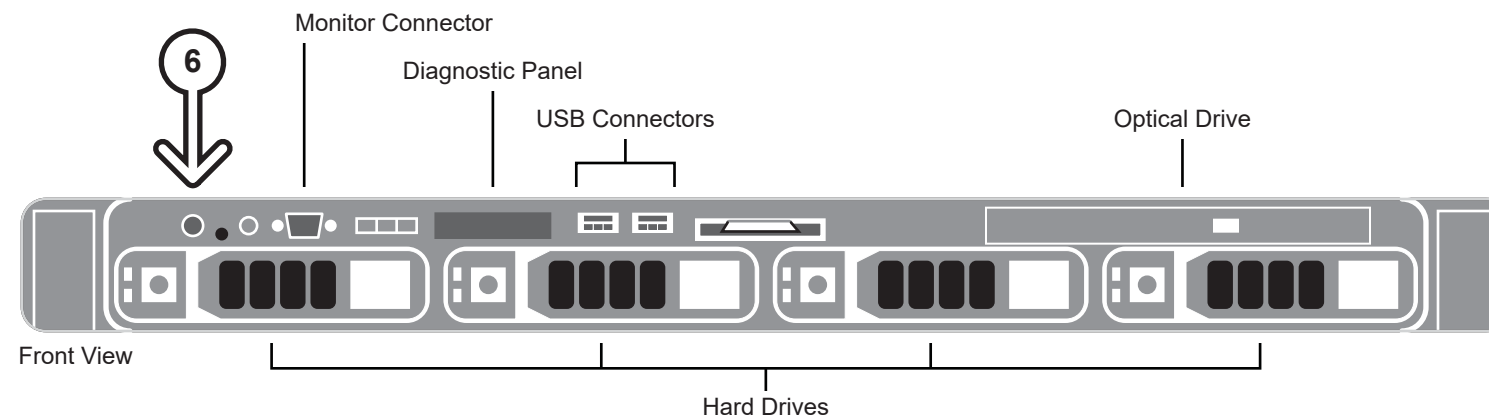

Streamline Server Network Topology

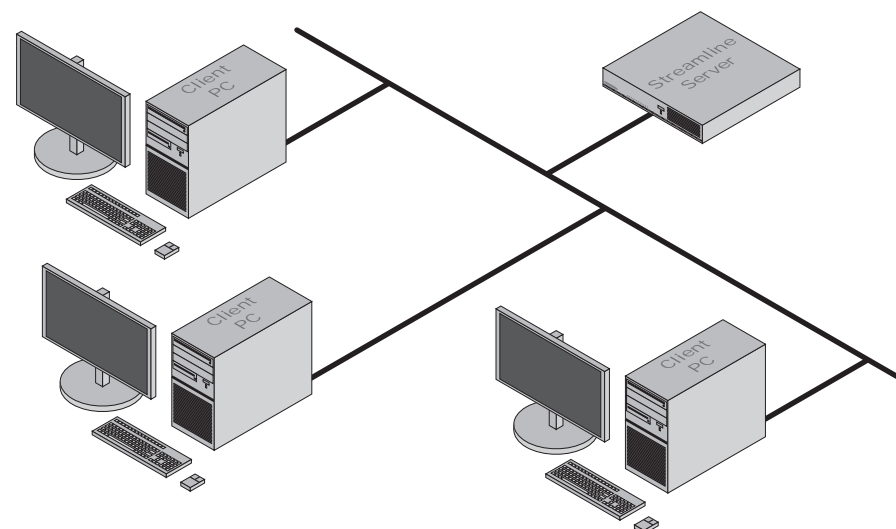

**Need Help?**  
**Technical Support:** (+1) 613 • 652 • 4886  
**Email:** techsupport@rossvideo.com

## Network Cabling

### 5 Local Area Network

Plug an **Ethernet** cable from your Local Area Network into the **Nic 1 Ethernet** port on the back of the Streamline Play Server.

***Note:** The Streamline Play Server must be connected to the same network as the client computers that will connect to the Streamline Play Server.*

## Startup

### 6 Power Up

Press the **Power** button on the front of the Streamline Play Server.

*The Streamline Play Server startup process includes drive initialization, which takes a few minutes to complete.*

***Note:** Ross Video recommends shutting down Streamline Play Servers only from the Windows operating system.*

### 7 Log On and Start Streamline Play

Use the following account information to log on to the Streamline Play Server:

**User name:** streamline  
**Password:** streamline

*After you log on, the Streamline Play Server application automatically starts, enabling users to connect to Streamline Play.*

### 8 Test or Configure Streamline Play

If you want to test or configure Streamline Play, open a supported web browser and use the following account information to log in:

**URL:** localhost  
**User name:** root  
**Password:** password

*For security reasons, we recommend you change the default root user password.*