

Power

1

Power

Connect the **AC Power Cord** to the **AC Port** on the back of the OverDrive Client PC and then to **Mains Power**.

The OverDrive Client PC power supply is auto-sensing and can use either 110 or 220 VAC.

Peripheral Cabling

2

Keyboard and Mouse

2a Plug the supplied **Keyboard** into a **USB** port on the back of the OverDrive Client PC.

2b Plug the supplied **Mouse** into a **USB** port on the back of the OverDrive Client PC.

3

Monitor

3a Connect the supplied **Mini DisplayPort to DisplayPort** adapter to a **Mini DisplayPort** port of the Nvidia T400 graphics card on the back of the OverDrive Client PC.

3b Connect a **Monitor** to the **Mini DisplayPort to DisplayPort** adapter port using a DisplayPort cable.

Network Cabling

4

Local Area Network

Plug an Ethernet cable from your **Local Area Network** into the **1G or 10G Ethernet** port on the back of the OverDrive Client PC.

Note: OverDrive Client PCs must be connected to the same network as OverDrive Server.


Front View




5



Back View

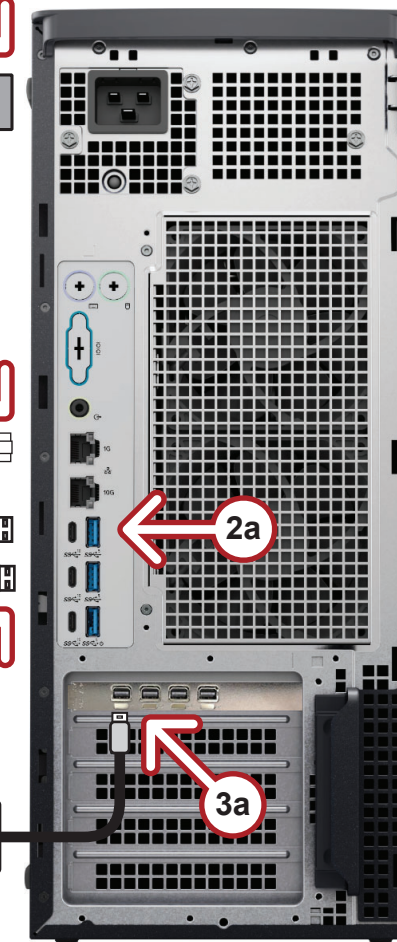


1

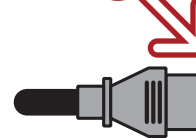

To Mains Power

 4



To Network

2a



To Keyboard

2b




To Mouse

3b



To Monitor

OverDrive Network Topology

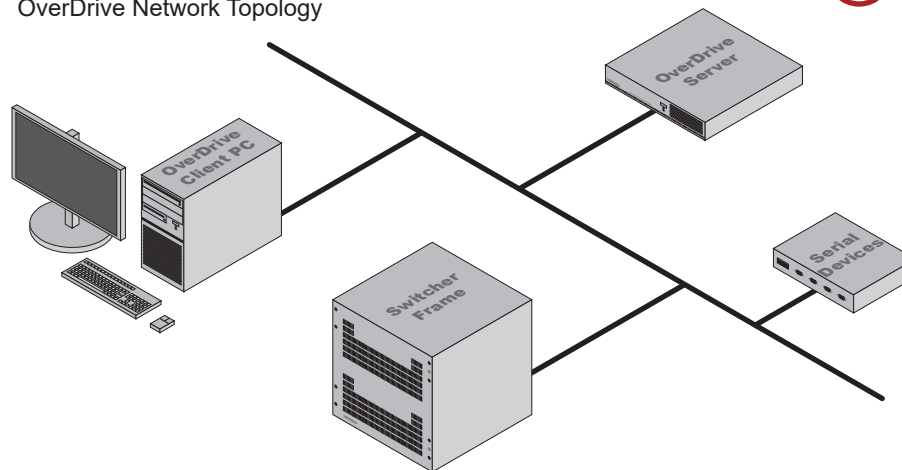

?

Need Help?

Use the **Help** menu in any OverDrive Client Application to access online and PDF versions of the *OverDrive Installation and Configuration Guide*, *OverDrive User Guide*, and *Caprica User Guide*.

Contact **Ross Video Technical Support** by email at techsupport@rossvideo.com.

Startup

5

Power Up

Press the **Power** button on the front of the OverDrive Client PC.

Note: Ross Video recommends shutting down the OverDrive Client PC only from the Windows operating system.

6

⚠ First Log On

The first time you log on to your OverDrive Client PC you must set the password for the OverDrive user account.

- Click the **OverDrive** user account icon.
- Enter a **new password** for the OverDrive user account.
- Re-enter the **password** you set for the OverDrive user account.
- Record the OverDrive user account password and store it in a safe location.

7

OverDrive Client Applications

- Use a web browser to open the **OverDrive Administration** web page. Ask the OverDrive System Administrator for the URL of the local OverDrive Administration web page.
- Click **Help** in the upper right corner of the **OverDrive Administration** web page to open the **OverDrive Online Help**.
- Follow the procedure in the **OverDrive > Installation and Configuration Guide > Software Installation > OverDrive Clients Software** section to install the OverDrive Client applications on the OverDrive Client PC.