


Basic Cabling

⚠ CAUTION: Before you set up and operate this product, refer to the Important Safety and Regulatory Notices document included in the shipping box.

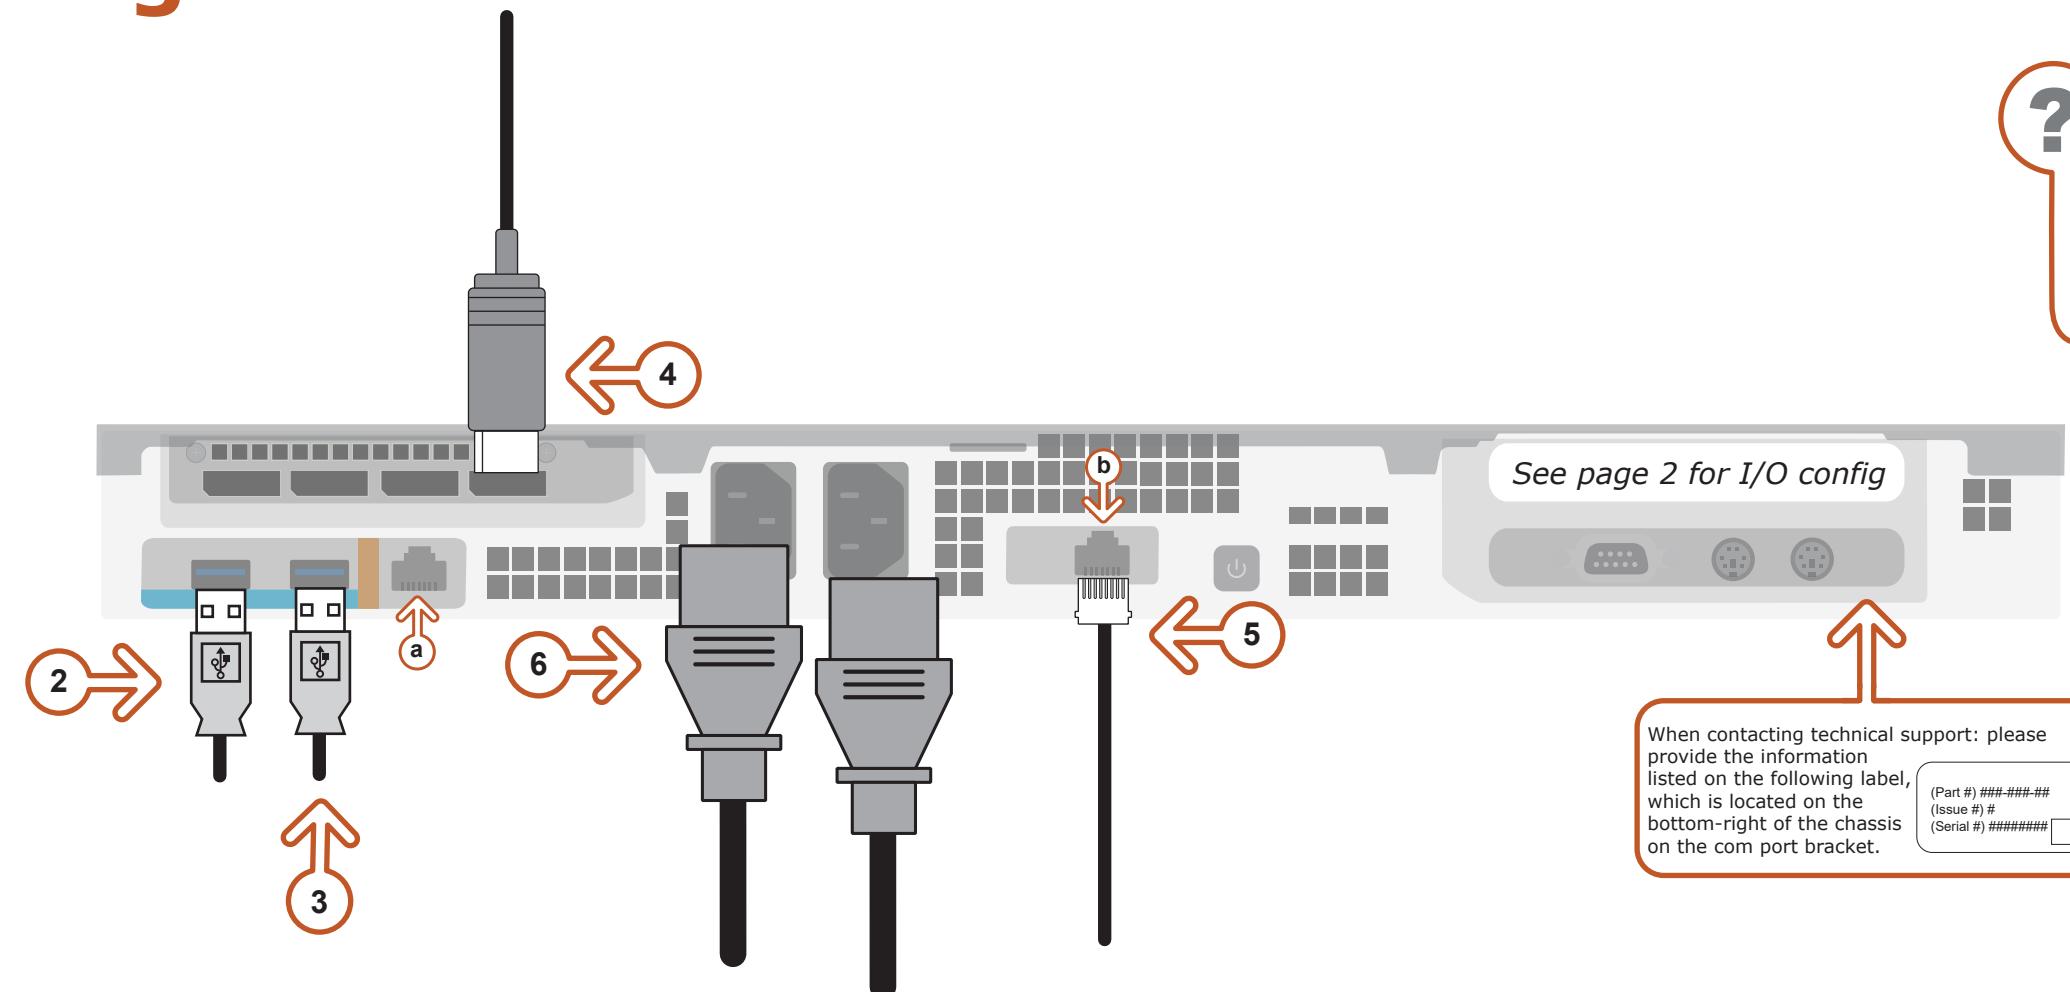

- 1 Use the supplied Rack Mount Kit to mount the PIERO system in a 19" EIA equipment rack. *For information on installing the PIERO chassis in a rack, see the provided document "Installing the Chassis in a Rack".*
- 2 Plug the supplied Keyboard into one of the **USB** ports.
- 3 Plug the supplied Mouse into one of the **USB** ports.
- 4 Connect a Monitor (customer supplied) to any of the four display ports. *KVM extenders (customer supplied) are required when the PIERO system monitor, keyboard, and mouse are located remotely from the rack room.*

- 5 Plug an Ethernet cable from your Local Area Network into either the **1G (a)** or **10G (b) Ethernet** port. *PIERO systems can be connected to the Internet or restricted production network. The network connection is also used to distribute assets.*
- 6 Connect power cords from the AC ports on the PIERO system to the mains power. *PIERO system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.*

Continued on other side...



Card Cabling

To connect the DSX LE5 12G:


- 1 Connect the HD-BNC end of the pigtail cables to the HD-BNC connectors and attach the SDI cables to the BNC end of the pigtails according to their required destination.

See the table to the right for I/O configuration.

- 2 Connect your house reference Genlock signal to the **REF** HD-BNC connector.

PIERO accepts analog blackburst or tri-level sync as reference inputs. Tri-level sync is recommended for HD installations.

Connector Physical Label	Launcher Label	12G Capable
1	SDI 1	N
2	SDI 2	Y
3	SDI 3	N
4	SDI 4	Y
5	SDI 5	N
6	SDI 6	Y
7	SDI 7	N
8	SDI 8	Y

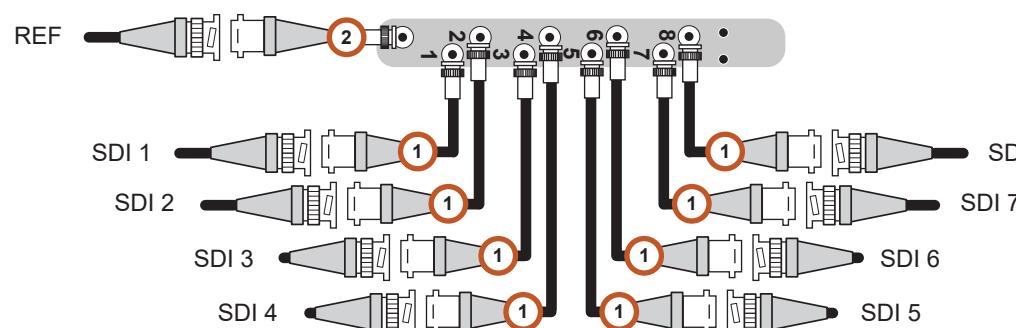

12G Card Diagram

To launch and configure PIERO:

- 1 Press the **Power** button on the front of the PIERO system.
- 2 Select the **PIERO** user account icon to log onto the system.
- 3 Select the **PIERO** icon on the desktop to open the **PIERO Launcher**.
- 4 The default configuration of the DSX LE5 12G is 1-4 inputs and 5-8 outputs. If you want to change the default input/output settings to 1-7 inputs and 8 outputs, please contact Ross Video Technical Support.

For information on...

- operating PIERO, see the *PIERO User Guide* available in the PIERO Launcher.
- other PIERO features and functions, see the documents available in the PIERO Launcher.