


Getting Started

⚠ CAUTION: Before you set up and operate this product, see the "Important Safety Instructions" in your Manual.

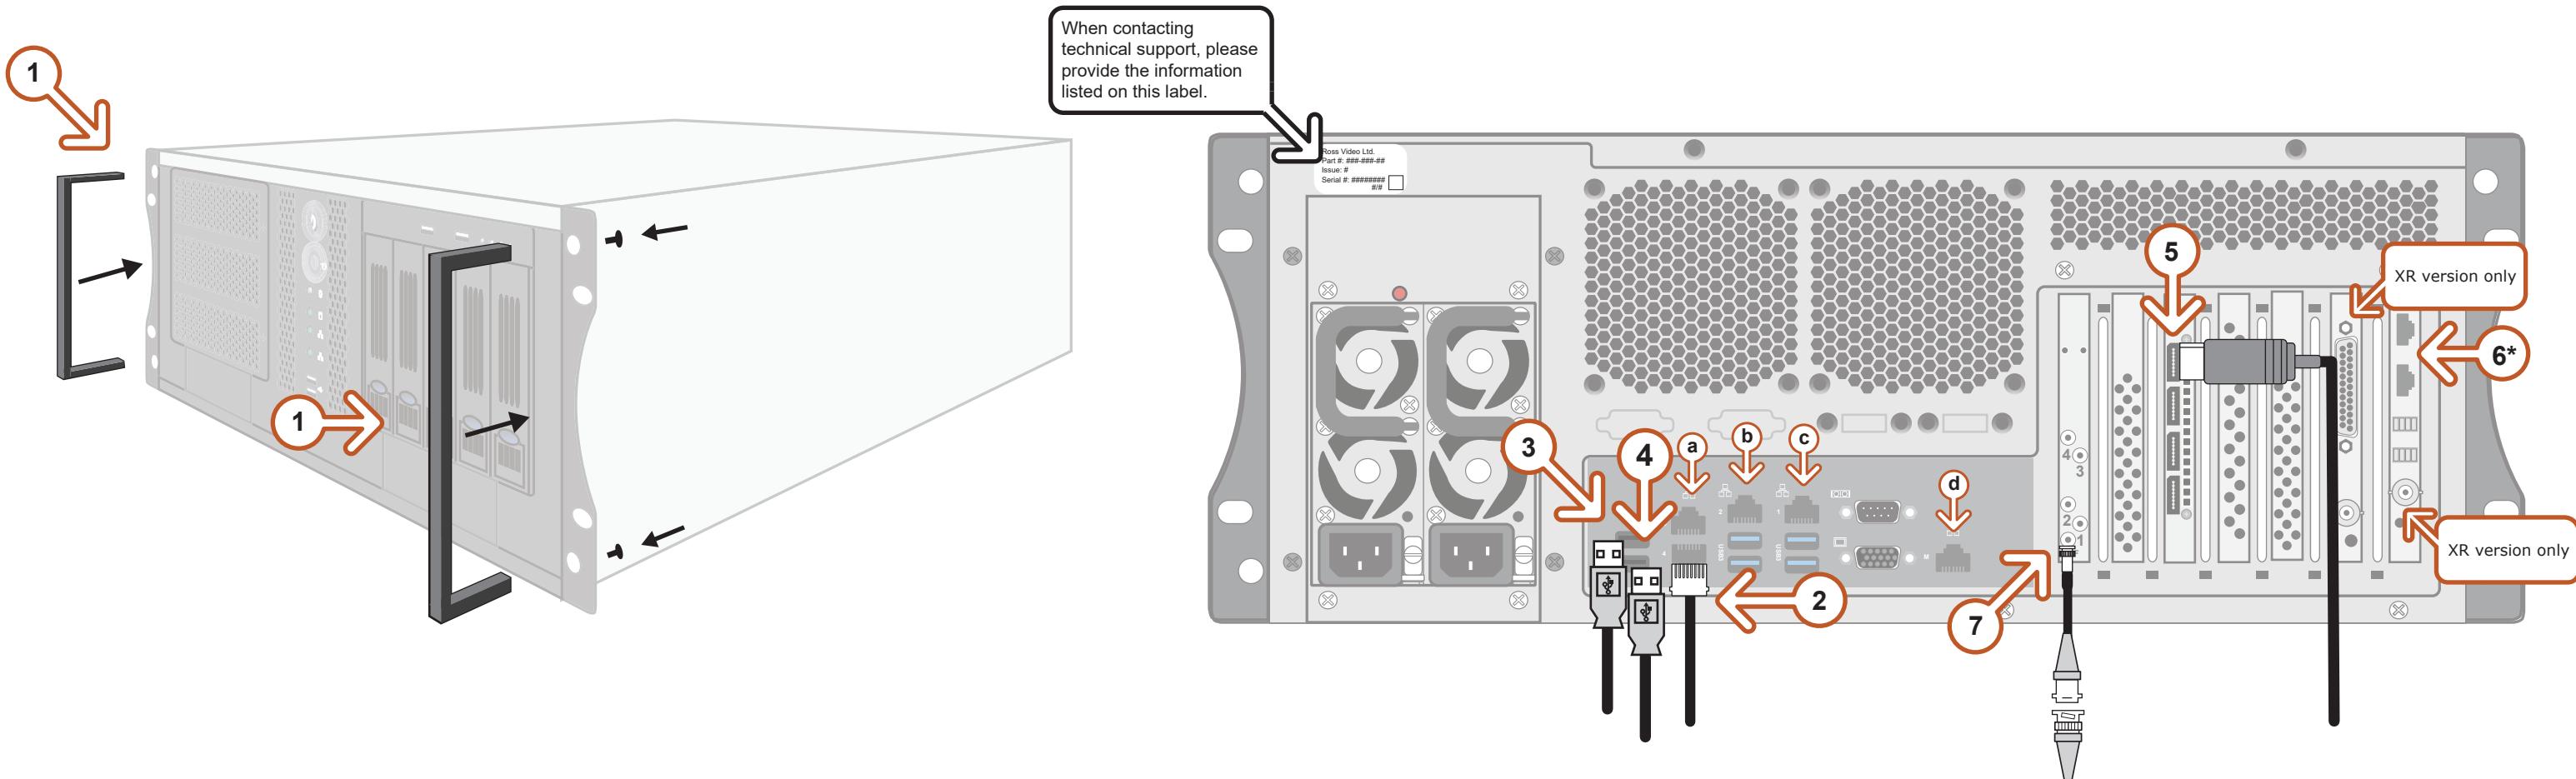

1 Attach the handles to the front rack-mount tabs by aligning the handle with the round holes and fastening from the rear with the supplied screws.

Use the supplied Rack Mount Kit to mount the Voyager system in a 19" EIA equipment rack.

For information on installing the Voyager chassis in a rack, see the provided document "Installing the Chassis in a Rack".

2 Plug an Ethernet cable from your Local Area Network into one of the Ethernet ports (a) 2 x 10GbE, (b) 1 x 2.5GbE, (c) 1 x 1.0 GbE.

For information on the IPMI port (d) refer to the Voyager Maintenance Guide.

Voyager systems can run standalone or accept a connection to a production network. The network connection is also used for the RossTalk / Smart GPI feature.

3 Plug the supplied keyboard into a **USB** port.

4 Plug the supplied mouse into a **USB** port.

5 Connect a Monitor (customer supplied) to any of the four display ports.

6* *XR version only.* Use CAT-6 UTP Ethernet cables to connect the Frame Lock connectors of each Voyager engine in a multiple display network. It does not matter which connector you use.

Make the master node in the network the timing master to control the timing on all other nodes.

If possible, set up an isolated 10 Gbps network using the secondary network interfaces available in Voyager machines.

7 Connect your house reference Genlock signal to the **REF HD-BNC** connector.

Voyager systems accept analog blackburst or tri-level sync as reference inputs. Tri-level sync is recommended for HD installations.

Continued on other side...

Getting Started continued

8 Connect the HD-BNC video cables to spigots 1 and 2.

See table below for supported configurations.

9 Connect the HD-BNC video cables to spigots 3 and 4.


See table below for supported configurations.

10 Connect power cords from the **AC Ports** on the Voyager system to the mains power.

Voyager system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.

Label	Channel (1 in, 1 out)
1	IN 1 FILL
2	OUT FILL
3	OUT KEY*
4	IN 1 KEY*

*If required

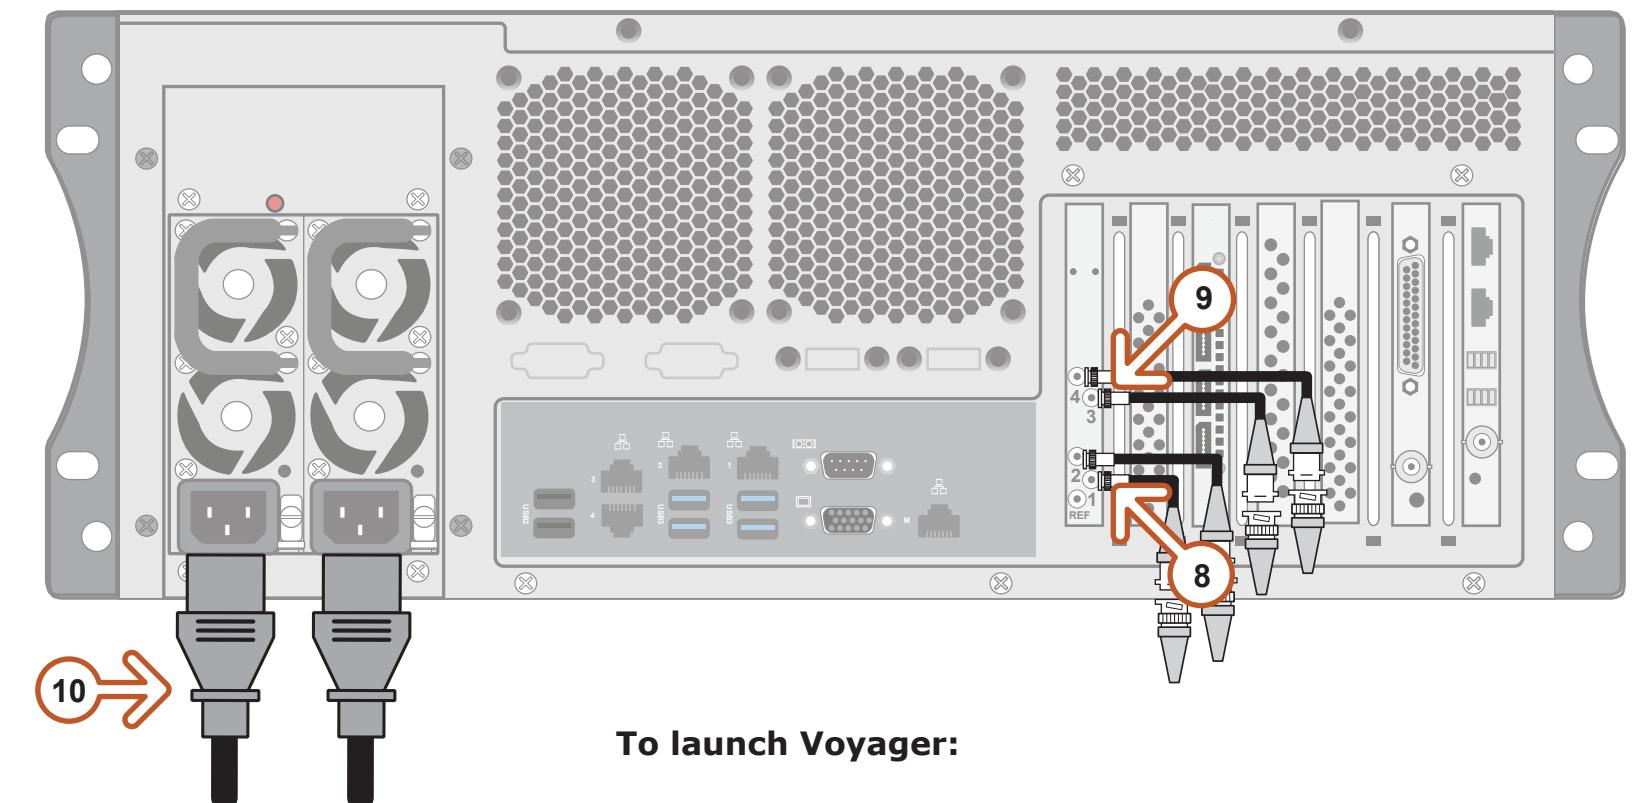

To launch Voyager:

1 Press the **Power** button on the front of the Voyager system.

Ross Video recommends shutting down Voyager systems from the Windows operating system.

2 Click the Voyager user account icon on the desktop.

3 Log onto the system using the following credentials:

Username: Voyager

Password: beyondinfinity

4 Launch Voyager from the **Start** menu.

For information on..

- setting up Voyager, see the Voyager Setup Guide available in the C:\Archive folder
- maintenance of the Voyager system, see the Voyager Maintenance Guide in the C:\Archive folder

