

## Configuring ENPS and XPression

This app note describes how to configure ENPS to interface with XPression.

### System Requirements

The ActiveX NCS plugin must be installed on a PC with the ENPS client installed. Ensure that this PC meets the newsroom system requirements.

Ensure that network connectivity exists between the ENPS server, all ENPS client PCs, the XPression PC and XPression Gateway PC (if the Gateway is installed on a different PC than XPression).

Install the NCS ActiveX plugin as an administrator or user. During installation, your computer may display security warnings depending on the security policies at your installation. Please allow the installation to proceed. If you have questions about safely installing software, consult your IT department.

### Licensing

The XPression ActiveX NCS plugin requires a license to operate. Licenses are verified by the XPression Gateway PC when the XPression ActiveX NCS plugin communicates with it.

If the number of concurrent connections exceeds the number of floating plugin licenses you have purchased, you will be unable to access the XPression ActiveX NCS plugin until a license is available.

### Configuring ENPS

You must configure ENPS with the network address of your XPression Gateway PC and an ID for the XPression ActiveX plugin.

#### To configure ENPS:

1. In ENPS, from the **System Maintenance** menu, select **MOS Configuration**.

The **MOS Configuration** page is displayed.

2. Select **New** to add a new line item for the XPression Gateway PC.
3. Enter the new ID.

The new ID should be a fully qualified MOS ID and should match the MOS ID entered in the XPression configuration, including case.

4. Select **OK**.
5. In the **Description** column, enter a description to identify the XPression Gateway PC.

6. In the **IP** column, enter the network address of the XPression MOS Gateway machine.  
You can enter either a hostname or dotted quad notation for the network address.
7. In the **ActiveX** column, enter the name of the plugin.  
The name of the ActiveX plugin is: xpMOSPlugin.MOSPluginENPS.
8. Configure the remaining columns as follows:
  - **Default Settings** – blank
  - **MOS Version** – 2.8.1
  - **Local Drag and Drop** – OFF
  - **Story Send** – ON
  - **Export Formatted Text** – Off
9. Select **Save** and quit the ENPS client.
10. Restart the ENPS client.

Address	Description	IP	ActiveX	Program	Default Settings	MOS Version	Local DragDrop
DEV.CG.DEVXPN02	DEV.CG.DEVXPN02	172.16.7.216	xpMOSPlugin.MOSPluginENPS	XPEN		2.8.1	Off
QA.CG.QAXPN02	QA.CG.QAXPN02	172.16.7.65	xpMOSPlugin.MOSPluginENPS	XPEN		2.8.1	Off
QA.CG.XPNQA2	QA.CG.XPNQA2	172.16.7.62	xpMOSPlugin.MOSPluginENPS	XPEN		2.8.1	Off
QA.INCEPTIONSVR	QA Inception Svr		inceptionsvr	OD		2.8	Off
QA.OD.QA000305	QA.OD.QA000305	172.16.7.107	Ross.ENPS	OD	RNPC="QA000305"	2.8.1	Off
QA.OD.QA000306	QA.OD.QA000306	172.16.7.108	Ross.ENPS	OD	RNPC="QA000306"	2.8.1	Off
QA.OD.QA00082	QA.OD.QA00082 Sys	172.16.7.110	Ross.ENPS	OD	RNPC="QA00082"	2.8.1	Off
QA.QAINC01	QA-INC-01 Inception Server	172.16.7.214		OD		2.8	Off
QA.QAINC02	QA-INC-02 Inception Server	172.16.7.215		OD		2.8	Off
QA.SS.QA-SLINGSHOT-01	SlingShot Server	172.16.7.49		OD		2.8	Off
QAODXP5	QAODXP5	QAODXP5	Ross.ENPS	OD	RNPC="QAODXP5"	2.8	Off
QAODXP6	QAODXP6	QAODXP6	Ross.ENPS	OD	RNPC="QAODXP6"	2.8	Off
QAXPNC03	QAXPNC03	172.16.7.66	xpMOSPlugin.MOSPluginENPS	XPEN		2.8.1	Off

**Note:** The GUID can be found in the following directory: C:\Program Files\XPression NCS Plugin\Help

## Configuring the ActiveX NCS Plugin

You must install and configure the XPression ActiveX NCS plugin on each ENPS client machine. Ensure the following settings are configured in the ActiveX NCS plugin:

- **Host Address** – set to the address of the XPression Gateway PC.
- **MOS ID** – if you have not enabled the **Enforce the Gateway's MOS ID** option in the XPression Gateway, enter the MOS ID for your facility.

Refer to the app note, *Installing the XPression ActiveX NCS Plugin* for more detailed instructions.

## Configuring the XPression Gateway

You must install and configure the XPression Gateway to enable communication between XPression and ENPS. Ensure the following settings are configured in the XPression MOS Gateway.

### To configure the XPression Gateway:

1. In the XPression Gateway, in the Gateway panel, configure the following settings:
  - **Primary MOS ID** – enter the MOS ID for your facility.
  - **NCS ID** – enter the NCS ID for your facility.
  - **Use UTF8** – deselect this checkbox.
2. In the **Client Plugins** panel, select the **Enforce the Gateway's MOS ID** checkbox.
3. Select **OK**.

Refer to the Appnote, *Installing and Configuring the XPression Gateway* for more detailed instructions.

**Note:** Consult your facility engineer if you do not know the MOS ID or NCS ID for your facility.