



XPression GO! AJA® Io®XT and AJA® Io®4K+ Driver Installation

This document explains how to install the AJA IoXT and Io4K+ driver for XPression GO! systems running XPression version 7.0 or higher, except XPression version 7.0 with the AJA Legacy driver.

Prerequisites

XPression GO! has been qualified to work with AJA Driver version 12.5.1.

- ★ Prior to beginning installation, uninstall all previous versions of the AJA IoXT or Io4K+ driver from the Windows® **Control Panel**.
- ★ Install the AJA IoXT or Io4K+ driver prior to adding the **AJA NTV2 Video** framebuffer into XPression.

Installation

To install the AJA IoXT or Io4K+ driver:

1. Connect the AJA IoXT or Io4K+ to the laptop with a Thunderbolt™ cable.
2. Turn on the AJA IoXT or Io4K+.
3. Turn on the laptop.
4. Download and install the driver package onto the laptop.
5. Run the **ntv2driver-12.5.1.msi** driver package.


To verify the driver has been installed:

1. In the Windows **Start** menu search bar, type **Device Manager**.
2. In the Windows **Start** menu, select **Device Manager**.

The **Device Manager** window opens.

XPression

2. In the **Device Manager** window, verify that **AJA IOXT SDI I/O** or **AJA IO4K PLUS SDI I/O** appears under **Sound, video and game controllers**.

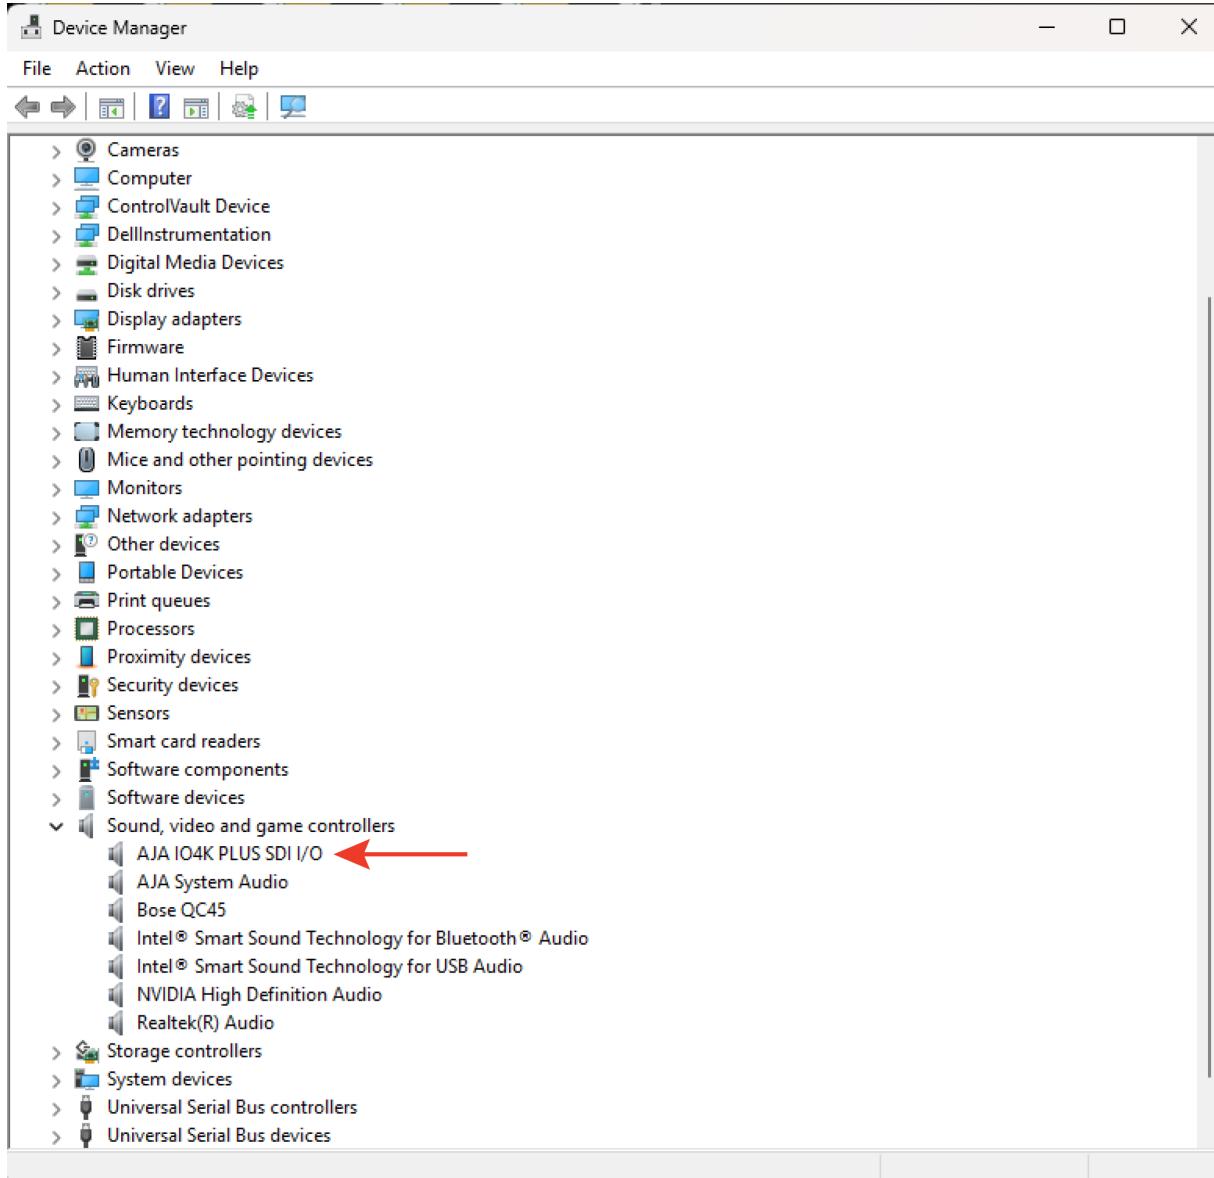

3. Select **AJA IOXT SDI I/O** or **AJA IO4K PLUS SDI I/O**.

The **AJA IOXT SDI I/O Properties** or **AJA IO4K PLUS SDI I/O Properties** window opens.

4. Verify that the **Driver Version** is 12.5.1.