

XPression™ GO! AJA® Io®XT and Io®4K Driver Installation

- ★ This document explains how to install the AJA IoXT and Io4K driver for XPression GO! systems running XPression version 6.5 or higher, except XPression version 6.5 with the AJA Legacy driver.

Prerequisites

XPression GO! has been qualified to work with AJA Driver version 12.3.7.85.

- ★ Prior to beginning installation, uninstall all previous versions of the AJA IoXT or Io4K driver from the Windows® **Control Panel**.
- ★ Install the AJA IoXT or Io4K driver prior to adding the **AJA NTV2 Video** framebuffer into XPression.

 
Installation

To install the AJA IoXT or Io4K driver:

1. Connect the AJA IoXT or Io4K to the laptop with a Thunderbolt™ cable.
2. Turn on the AJA IoXT or Io4K.
3. Turn on the laptop.
4. Insert the supplied driver disk into the laptop.
5. Run the **ntv2driver-12.3.7.85.msi** driver package.


To verify the driver has been installed:

1. In the Windows **Control Panel**, click **Hardware and Sound**.

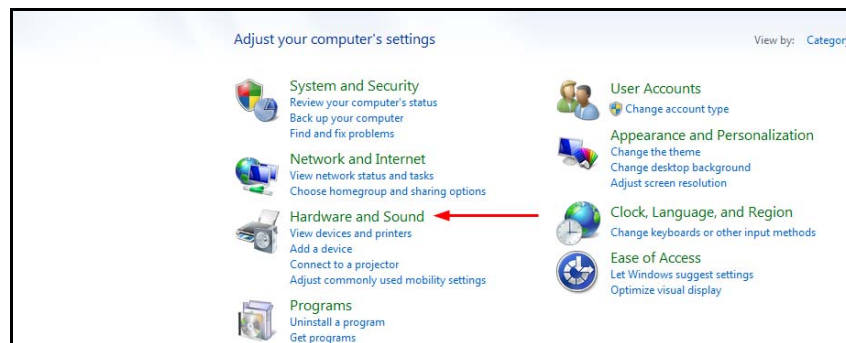


The **Hardware and Sound** screen opens.

 2. Click **Device Manager**.

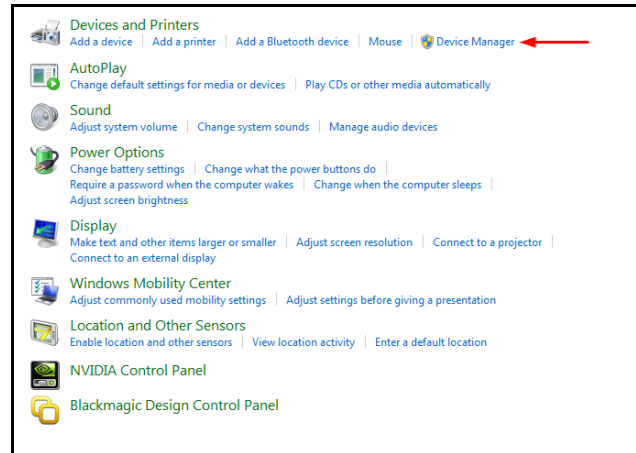

The **Device Manager** window opens.

 3. Verify that **AJA IOXT SDI I/O** or **AJA IO4K SDI I/O** appears under **Sound, video and game controllers**.

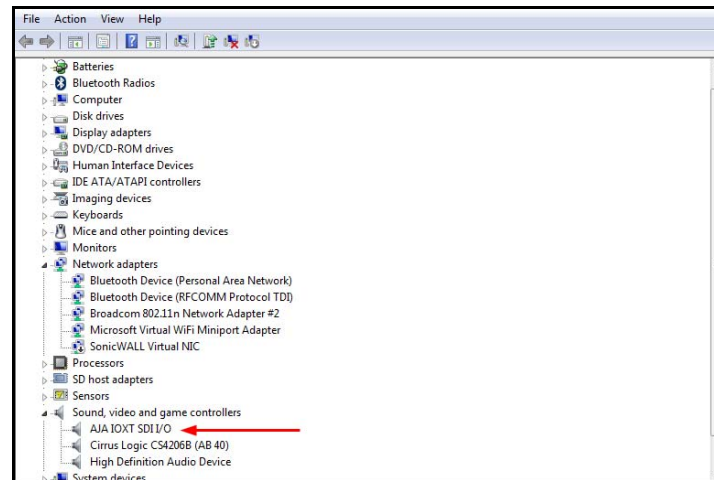

4. Double-click **Sound, video and game controllers**.

The **AJA IOXT SDI I/O Properties** or **AJA IO4K SDI I/O Properties** window opens.

5. Verify that **Driver Version** is 12.3.7.85.

