


# XPression

## Getting Started

⚠ CAUTION: Before you set up and operate this product, see the “Important Safety Instructions” in your Manual.

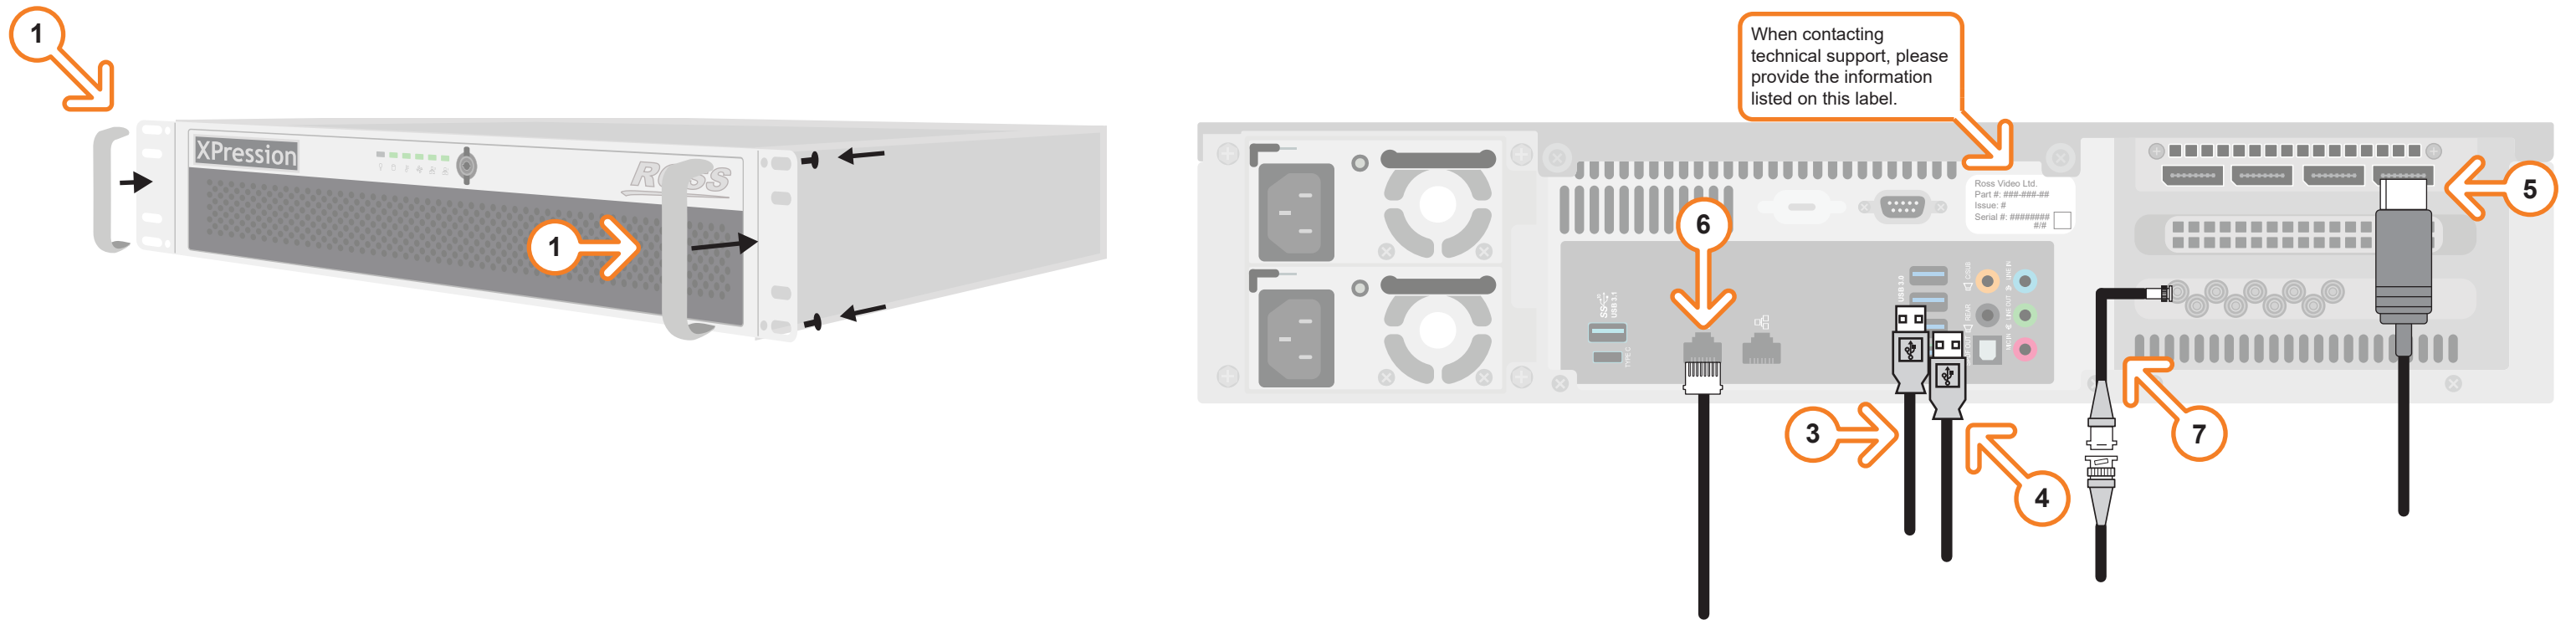

- 1 Attach the handles to the front rack-mount tabs by aligning the handle with the round holes and fastening from the rear with the supplied screws.
- 2 Use the supplied Rack Mount Kit to mount the XPression system in a 19" EIA equipment rack.  
*For information on installing the XPression chassis in a rack, see the provided document “Installing the Chassis in a Rack”.*  
*To avoid overheating, DO NOT obstruct the front air intake, rear exhaust vents, or side exhaust vent of the chassis.*
- 3 Plug the supplied Keyboard into a **USB** port.
- 4 Plug the supplied Mouse into a **USB** port.
- 5 Connect a Monitor (customer supplied) to any of the four display ports.  
*KVM extenders (customer supplied) are required when the XPression system monitor, keyboard, and mouse are located remotely from the rack room.*

- 6 Plug an Ethernet cable from your Local Area Network into one of the **Ethernet** ports.  
*XPression systems can run standalone or accept a connection to a production network. The network connection is also used for the RossTalk / Smart GPI feature.*
- 7 Connect your house reference Genlock signal to the **REF** HD-BNC connector.  
*XPression systems accept analog blackburst or tri-level sync as reference inputs. Tri-level sync is recommended for HD installations.*


*Continued on other side...*



### Need Help?


Technical Support:  
1-844-652-0645 (North America)  
+800 1005 0100 (International)  
Email: [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

## Getting Started continued

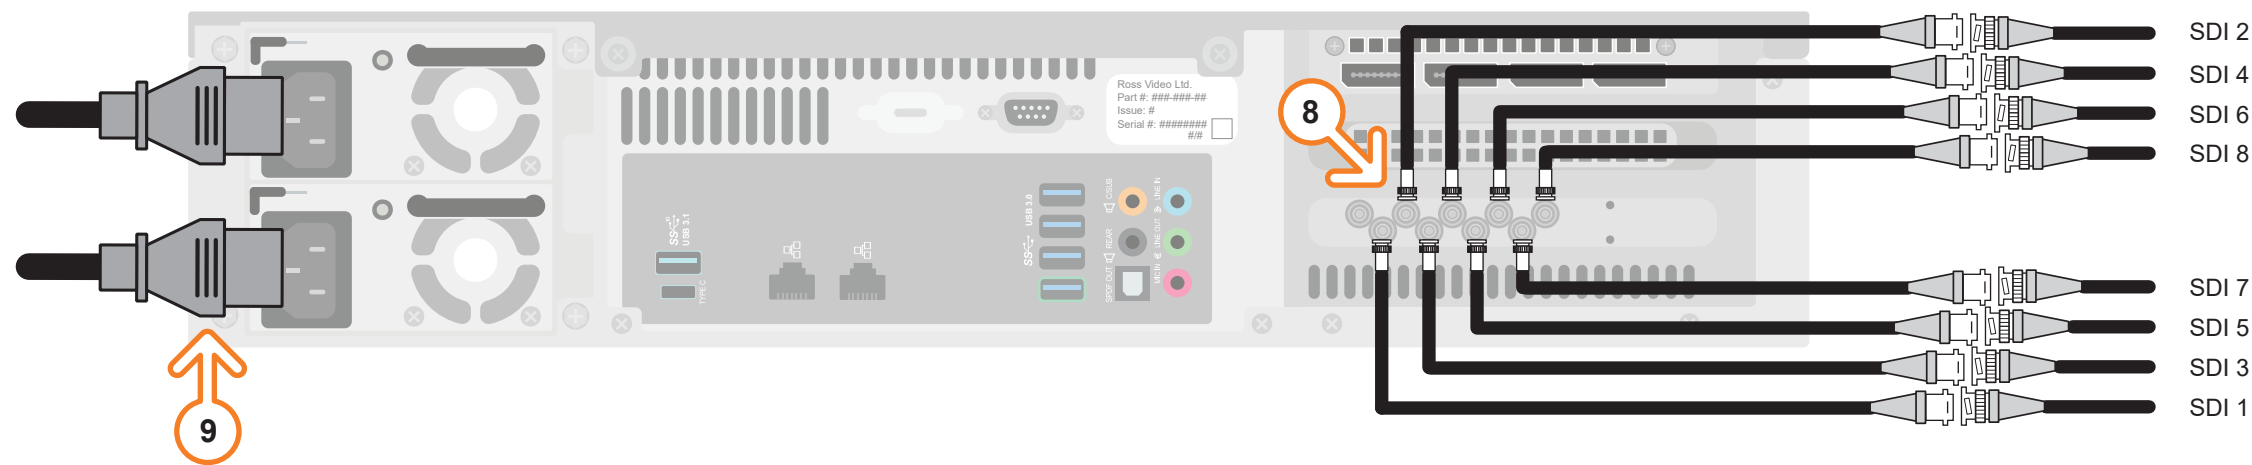

HD-BNC	Default (2 in 6 out)	UHD Mode <sup>^</sup> (8 out)
1	In 1	Fill 1
2	Out 1 Fill	Fill 2
3	Out 2 Fill	Fill 3
4	Out 3 Fill*	Fill 4
5	In 2*	Key 1
6	Out 1 Key	Key 2
7	Out 2 Key	Key 3
8	Out 3 Key*	Key 4

\*Not available on SCE  
<sup>^</sup>Flex editions only

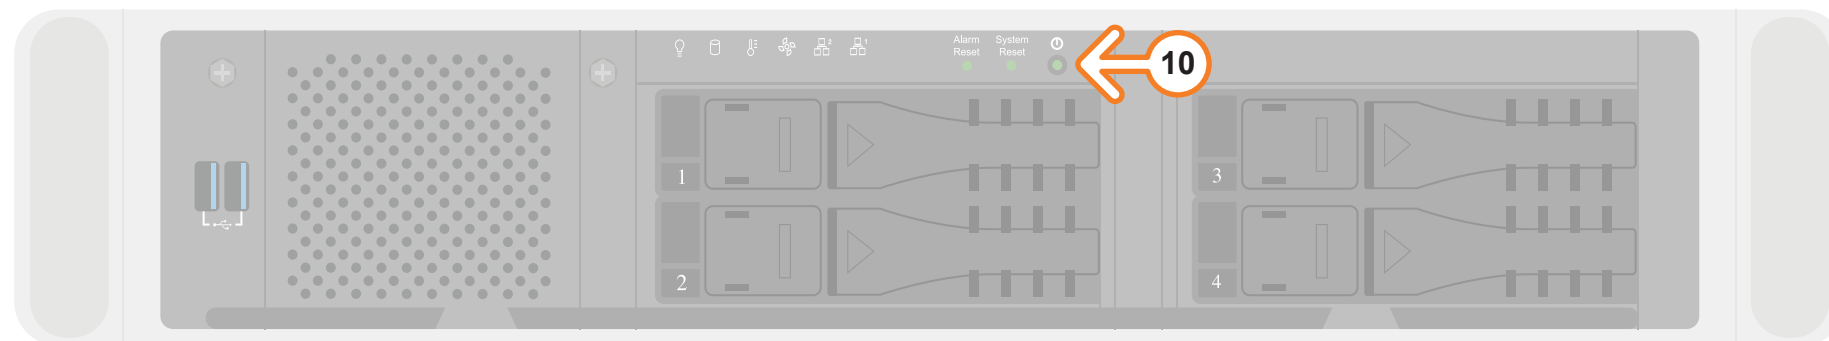

**8** Connect the HD-BNC end of the pigtail cables to the HD-BNC connectors and attach the SDI cables to the BNC end of the pigtails according to their required destination (see the *XPression User Guide* or Help file for information about configuring the key and fill for the HD-BNC connectors). The default and UHD configuration is displayed in the table above.

*Not all HD-BNC connectors will be active depending on the XPression software edition. Keep any unused pigtail and SDI cables in a safe place for future use.*

*If your facility requires analog outputs, additional outboard digital to analog conversion equipment is available from Ross Video.*

*Inputs/outputs can be configured in the Hardware Setup in the XPression User Guide or Help file.*

**9** Connect power cords from the AC Ports on the XPression system to the mains power.

*XPression system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.*

**10** Press the **Power** button (⏻) on the front of the XPression system. *Ross Video recommends shutting down XPression systems from the Windows operating system.*

**11** Click the **XPression** user account icon to log onto the system.

**12** Launch XPression from the **Start** menu.

### For information on...

- operating XPression, see the "XPression User Guide" available in the C:\Archive folder
- maintenance of the XPression system, see the "XPression Maintenance Guide" in the C:\Archive folder
- other XPression features and functions, see the documents available in the C:\Archive folder