XPression

XPression[™] GO! AJA[®] Io[®]XT Driver Installation

This document explains how to install the AJA IoXT driver for XPression GO! systems running XPression version 6.2 or lower and XPression version 6.5 with the AJA Legacy driver.

Prerequisites

XPression GO! has been qualified to work with AJA Driver version 10.3.5.25. Driver versions 10.4 and higher are not supported with the Legacy driver.

- * Prior to beginning installation, uninstall all previous versions of the AJA IoXT driver from the Windows® Control Panel.
- ★ Install the AJA IoXT driver prior to adding the AJA Video (legacy) framebuffer into XPression.

Installation

To install the AJA loXT driver:

- 1. Connect the AJA IoXT to the laptop with a Thunderbolt[™] cable.
- **2.** Turn on the AJA IoXT.
- 3. Turn on the laptop.
- 4. Insert the supplied driver disk into the laptop.
- 5. Run the KonaDrivers-10.3.5.25.msi driver package.

To verify the driver has been installed:

1. In the Windows Control Panel, click Hardware and Sound.



The Hardware and Sound screen opens.

Phone: +1 613-652-4886 • Technical Support: +1 613-652-4886 • 3500DR-520-07 • August 2017 © 2017 Ross Video Limited. Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Vide assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.




XPression

2. Click Device Manager.

AutoPlay Change default settings for media or devices Play CDs or other media automatically Sound Sound Require a password when Change system sounds Manage audio devices Power Options Change battery settings Change what the power buttons do Require a password when the computer wakes Change when the computer sleeps Adjust screen brightness Display Make text and other items larger or smaller Adjust screen resolution Connect to a projector Connect to a netheral display Windows Mobility Center Adjust commonly used mobility settings Adjust settings before giving a presentation Location and Other Sensors Enable location and other sensors View location activity Enter a default location NVIDIA Control Panel NVIDIA Control Panel	-	Devices and Printers Add a device Add a printer Add a Bluetooth device Mouse 🎯 Device Manager 🔫
 Adjust system volume Change system sounds Manage audio devices Power Options Change battery settings Change what the power buttons do Require a password when the computer wakes Change when the computer sleeps Adjust screen brightness Display Make text and other items larger or smaller Adjust screen resolution Connect to a projector Connect to an external display Windows Mobility Center Adjust scommonly used mobility settings Adjust settings before giving a presentation Location and Other Sensors Enable location and other sensors View location activity Enter a default location 		
 Change battery settings Change what the power buttons do Require a password when the computer wakes Change when the computer sleeps Adjust screen brightness Display Make text and other items larger or smaller Adjust screen resolution Connect to a projector Connect to an external display Windows Mobility Center Adjust settings Adjust settings before giving a presentation Location and Other Sensors Enable location and other sensors View location activity Enter a default location 		
Make text and other items larger or smaller Adjust screen resolution Connect to a projector Connect to an external display Windows Mobility Center Adjust commonly used mobility settings Adjust settings before giving a presentation Location and Other Sensors Isolate location and other sensors View location activity Enter a default location	٦	Change battery settings Change what the power buttons do Require a password when the computer wakes Change when the computer sleeps
Adjust commonly used mobility settings Adjust settings before giving a presentation Location and Other Sensors Location and other sensors View location activity Enter a default location	2	Make text and other items larger or smaller Adjust screen resolution Connect to a projector
Enable location and other sensors View location activity Enter a default location	4	
NVIDIA Control Panel		
	<u>@</u>	NVIDIA Control Panel
Blackmagic Design Control Panel	6	Blackmagic Design Control Panel

The Device Manager window opens.

3. Verify that AJA IOXT SDI I/O appears under Sound, video and game controllers.

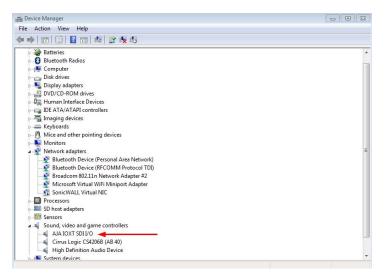

4. Double-click Sound, video and game controllers.

The AJA IOXT SDI I/O Properties window opens.

5. Verify that Driver Version is 10.3.5.25.



