


Getting Started

⚠ CAUTION: Before you set up and operate this product, see the “Important Safety Instructions” in your Manual.

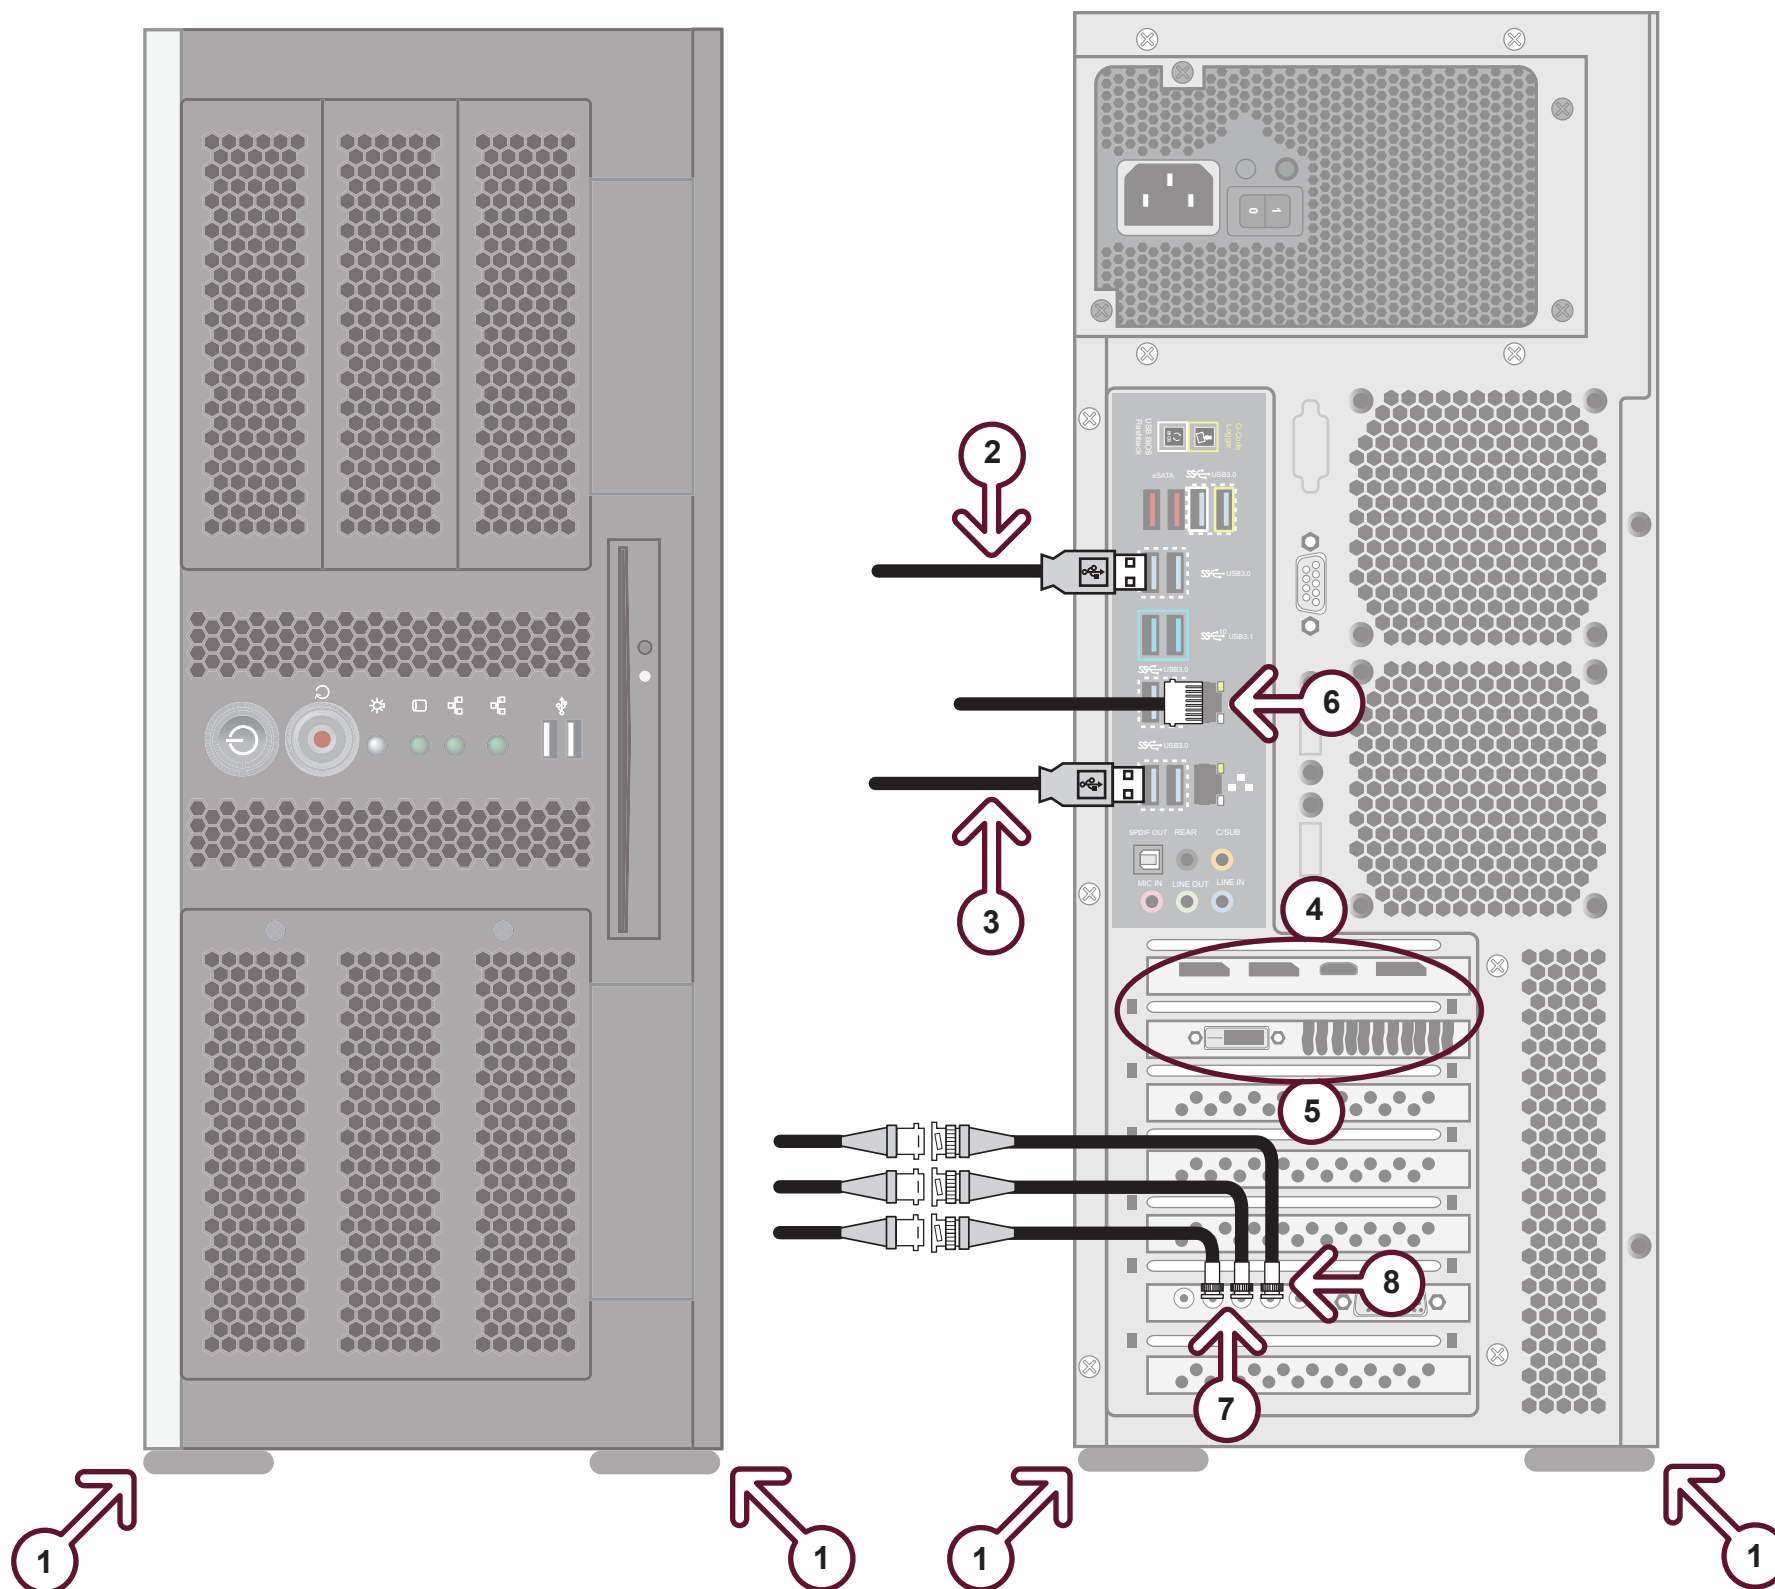

- 1** Rotate the 4 feet outwards to provide additional stability.
- 2** Plug the supplied Keyboard into one of the **USB** ports.
- 3** Plug the supplied Mouse into one of the **USB** ports.
- 4** Connect a Monitor (customer supplied) to either the **DVI-D**, **HDMI**, or display port (**DP**).
- 5** (Optional) Connect a second monitor to any of the remaining monitor ports to use a second display.
If using analog output, connect a second monitor to the display port connector directly above the DVI-I port using display port to VGA converter.
- 6** Plug an Ethernet cable from your Local Area Network into one of the **Ethernet** ports.

KVM extenders (customer supplied) are required when the XPression System monitor, keyboard, and mouse are located remotely from the rack room.

XPression Systems can run standalone or accept a connection to a production network. The network connection is also used for the RossTalk/Smart GPI Feature.

If you are configuring an XPression Workstation or Designer system, skip ahead to step 10.

- 7** Use the supplied 1.0/2.3-to-BNC pigtail adapters to connect the HD/SDI **OUT 1** and HD/SDI **OUT 2** connectors to their required destination. Output fill is the second connector, output key is the third connector from the left.

XPression Systems provide SDI/HD-SDI outputs. If your facility requires analog outputs, additional outboard digital to analog conversion equipment is available from Ross Video.

- 8** Connect video input to the HD/SDI **IN 2** BNC connector using a mini-BNC cable.
XPression Systems support SDI/HD-SDI inputs. If your facility requires analog inputs, additional outboard analog to digital conversion equipment is available from Ross Video.


Continued on other side...



Need Help?

Technical Support: (+1) 613-652-4886
Email: techsupport@rossvideo.com

Getting Started continued

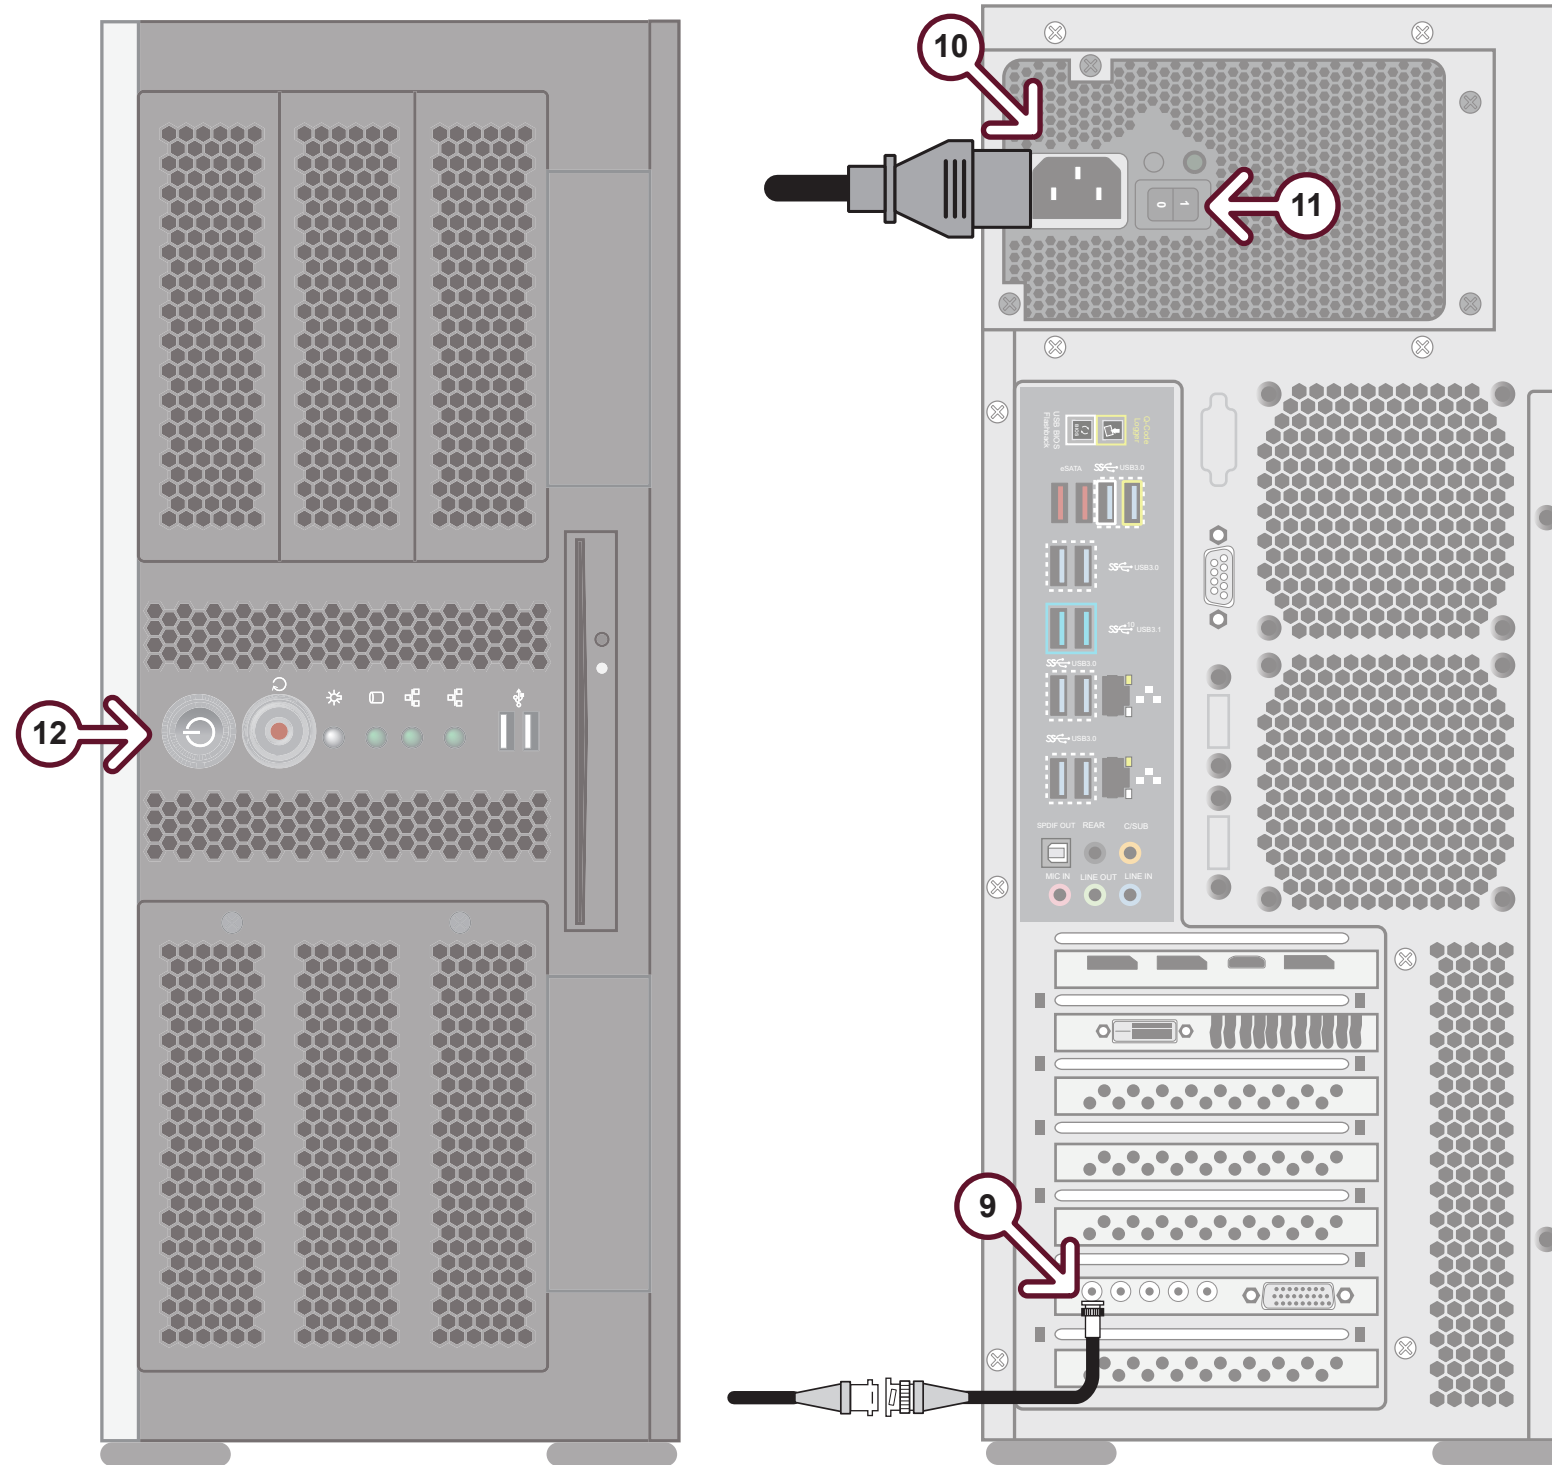

- 9 Use the supplied 1.0/2.3-to-BNC pigtail adapters to connect your house reference GenLock signal to the **REF** connector.
XPression Systems accept analog black bursts or tri-level sync as reference inputs. Tri-level sync is recommended for HD installations.
- 10 Connect a power cord from the **AC** Port on the XPression system to the mains power.
XPression system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.
- 11 Turn the power switch on the power supply to **ON** (1).
- 12 Open the front door of the chassis and press the Power button on the front of the XPression System.
Wait for the system to finish booting up.
- 13 Click the XPression user account icon to log onto the system.
- 14 Launch XPression from the **Start** menu.
Ross Video recommends shutting down XPression Systems from the Windows operating system.

For information on...

- operating XPression, see the "XPression User Guide" available in the C:\Archive folder
- maintenance of the XPression Prime system, see the "XPression Prime Maintenance Guide" in the C:\Archive folder
- other XPression features and functions, see the documents available in the C:\Archive folder