
XPression

Basic Cabling

⚠ CAUTION: Before you set up and operate this product, see the "Important Safety Instructions" in your Manual.

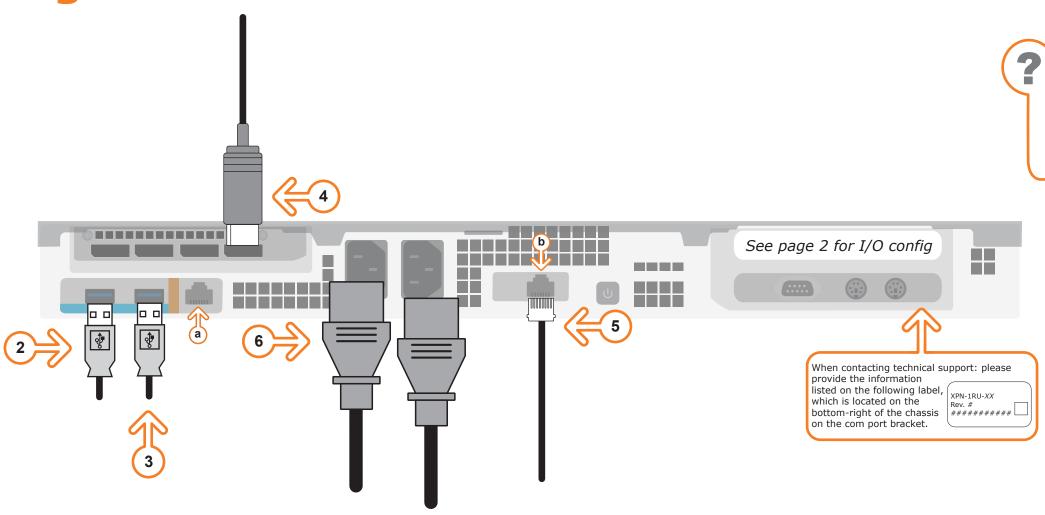

- 1 Use the supplied Rack Mount Kit to mount the XPression system in a 19" EIA equipment rack.

 For information on installing the XPression chassis in a rack, see the provided document "Installing the Chassis in a Rack".
- **2** Plug the supplied Keyboard into one of the **USB** ports.
- **3** Plug the supplied Mouse into one of the **USB** ports.
- **4** Connect a Monitor (customer supplied) to any of the four display ports.

 KVM extenders (customer supplied) are required when the XPression system monitor, keyboard, and mouse are located remotely from the rack room.
- 5 Plug an Ethernet cable from your Local Area Network into either the **1G** (**a**) or **10G** (**b**) **Ethernet** port.
 - XPression systems can be connected to the Internet or restricted production network. The network connection is also used to distribute assets and for the RossTalk/Smart GPI feature.
- Connect power cords from the AC ports on the XPression system to the mains power.

 XPression system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.

Continued on other side...



Need Help?

1-844-652-0645 (North America) +800 1005 0100 (International) Email: techsupport@rossvideo.com

Technical Support:

XPression


Card Cabling

To connect the IP D25 card:

- 1 Insert a small form-factor pluggable (SFP) (customer supplied) into SFP cage 1 and attach the necessary networking cable.
- **2** If using redundancy, insert a small form-factor pluggable (SFP) (customer supplied) into SFP cage 2 and attach the necessary networking cable.
- **3** Press the **Power** button (**(**)) on the front of the XPression system.
 - Ross Video recommends shutting down XPression systems from the Windows operating system.
- **4** Click the **XPression** user account icon to log onto the system.
- **5** Launch XPression from the **Start** menu.



1RU and 2RU

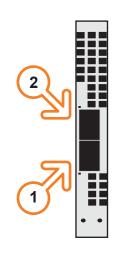

4RU

For information on...

- operating XPression, see the "XPression User Guide" available in the C:\Archive folder
- maintenance of the XPression system, see the "XPression Maintenance Guide" in the C:\Archive folder
- other XPression features and functions, see the documents available in the C:\Archive folder

