



# **ACID AC-Z50-UCHR**

## **User Manual**

**v1.0**

---

# Thank You For Choosing Ross

*know in your heart is right. (You may rent helicopters if necessary.)*

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
  - offer the best product quality and support
2. Make Cool Practical Technology
  - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at [solutions@rossvideo.com](mailto:solutions@rossvideo.com).



David Ross

CEO, Ross Video

[dross@rossvideo.com](mailto:dross@rossvideo.com)

## Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you*

# Document Information

- Ross Part Number: **5000DR-200-04**
- Release Date: Aug, 2016.

## Copyright

©2016 Ross Video Limited, Ross®, CrossOver®, MiniME™, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Microsoft®, Windows®, and Windows XP® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

## Important Regulatory and Safety Notices to Service Personnel

Before using this product and any associated equipment, refer to the “**Important Safety Instructions**” listed in the front of this manual to avoid personnel injury and to prevent product damage.

Product may require specific equipment, and/or installation procedures to be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these specific requirements.

## Symbol Meanings



**Protective Earth:** This symbol identifies a Protective Earth (PE) terminal, which is provided for connection of the supply system's protective earth (green or green/yellow) conductor.



**Important:** This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



**Warning:** The symbol with the word “Warning” within the equipment manual indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**Caution:** The symbol with the word “Caution” within the equipment manual indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



**Warning Hazardous Voltages:** This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.



**ESD Susceptibility:** This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

## Important Safety Instructions

1. **Read Instructions** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** The safety and operating instructions should be retained for future reference
3. **Heed Warnings** All warnings on the product and the operating instructions should be adhered to.
4. **Follow Instructions** All operating and use instructions should be followed.
5. **Cleaning** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. **Accessories** Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. **Moving** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from

---

overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

- 11. Power Sources** This product should be operated only from the type of power source indicated on the marking label. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12. Grounding or Polarization** This product is equipped with a three-wire grounding-type plug; a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13. Power-Cord Protection** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug, convenience receptacles, and the point where they exit from the product.
- 14. Lightning** For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
- 15. Overloading** Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 16. Object and Liquid Entry** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 17. Inflammable and Explosive Substance** Avoid using this product where there are gases, and also where there are inflammable and explosive substances in the immediate vicinity.
- 18. Heavy Shock or Vibration** When carrying this product around, do not subject the product to heavy shock or vibration.
- 19. Servicing** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**20. Damage Requiring Service** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance - this indicates a need for service.

**21. Replacement Parts** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**22. Safety Check** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**23. Wall or Ceiling Mounting** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

**24. Heat** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## EMC Notices

### United States of America — FCC Part 15

These products have been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



**Important:** Changes or modifications to this equipment not expressly approved by Hitachi Kokusai Electric could void the user's authority to operate the equipment.

## Canada

This product does not exceed the class A/class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations.

Le présent appareil n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le règlement sur le brouillage radioélectrique édicté par le ministère des communications du Canada.

## Warranty and Repair Policy

Ross Video Limited (Ross) warrants its switchers and related options, to be free from defects under normal use and service for a period of ONE YEAR from the date of shipment. Fader handle assemblies are warranted for the life of the product. If an item becomes defective within the warranty period Ross will repair or replace the defective item, as determined solely by Ross.

Warranty repairs will be conducted at Ross, with all shipping FOB Ross dock. If repairs are conducted at the customer site, reasonable out-of-pocket charges will apply. At the discretion of Ross, and on a temporary loan basis, plug in circuit boards or other replacement parts may be supplied free of charge while defective items undergo repair. Return packing, shipping, and special handling costs are the responsibility of the customer.

This warranty is void if products are subjected to misuse, neglect, accident, improper installation or application, or unauthorized modification.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profit). Implied warranties, including that of merchantability and fitness for a particular purpose, are expressly limited to the duration of this warranty.

This warranty is TRANSFERABLE to subsequent owners, subject to Ross Video's notification of change of ownership.

## Environmental Information

**The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.**

To avoid the potential release of those substances into the environment and to diminish the need for the

extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

## Company Address

**Ross Video Limited** — 8 John Street Iroquois, Ontario, Canada, K0E 1K0

**Ross Video Incorporated** — P.O. Box 880, Ogdensburg, New York, USA, 13669-0880

General Business (+1)613-652-4886  
Office:

Fax: (+1)613-652-4425

Technical (+1)613-652-4886  
Support:

After Hours (+1)613-349-0006  
Emergency:

E-Mail (Support): [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

E-Mail (General): [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website [www.rossvideo.com](http://www.rossvideo.com)

## Technical Support

At Ross Video, we take pride in the quality of our products, but if a problem does occur, help is as close as the nearest telephone.

Our 24-Hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support are provided directly by Ross Video personnel. During business hours (eastern standard time), technical support personnel are available by telephone. Outside of normal business hours and on weekends, a direct emergency technical support phone line is available. If the technical support personnel who

---

is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. Our Technical support staff are available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

---

# Contents

|                      |          |
|----------------------|----------|
| <b>Features.....</b> | <b>8</b> |
|----------------------|----------|

|                                               |          |
|-----------------------------------------------|----------|
| <b>Operational Cautions and Warnings.....</b> | <b>9</b> |
|-----------------------------------------------|----------|

|                             |           |
|-----------------------------|-----------|
| <b>Camera Overview.....</b> | <b>10</b> |
|-----------------------------|-----------|

|                                   |           |
|-----------------------------------|-----------|
| <b>Camera and Lens Setup.....</b> | <b>11</b> |
|-----------------------------------|-----------|

|                                         |    |
|-----------------------------------------|----|
| To Install a Lens.....                  | 11 |
| To Adjust the Flange Back Distance..... | 11 |
| To Adjust the White Shading.....        | 11 |
| To Select a Filter Setting.....         | 11 |
| To Adjust the White Balance.....        | 12 |
| To Adjust the Black Balance.....        | 12 |
| To Adjust the Grayscale Setup.....      | 13 |
| To Adjust the Shutter Mode.....         | 13 |

|                                 |           |
|---------------------------------|-----------|
| <b>Network Connections.....</b> | <b>14</b> |
|---------------------------------|-----------|

|                                |    |
|--------------------------------|----|
| To Change the IP Address ..... | 14 |
|--------------------------------|----|

|                       |           |
|-----------------------|-----------|
| <b>DashBoard.....</b> | <b>15</b> |
|-----------------------|-----------|

|                                                 |    |
|-------------------------------------------------|----|
| Connecting to the Camera from DashBoard.....    | 15 |
| To Connect to the Camera from<br>DashBoard..... | 15 |

|                                |           |
|--------------------------------|-----------|
| <b>Viewfinder Display.....</b> | <b>16</b> |
|--------------------------------|-----------|

|                         |           |
|-------------------------|-----------|
| <b>Menu System.....</b> | <b>17</b> |
|-------------------------|-----------|

|                        |    |
|------------------------|----|
| Color Menus.....       | 17 |
| Master Gain.....       | 17 |
| White Gain.....        | 17 |
| Black/Flare.....       | 17 |
| Gamma.....             | 18 |
| Knee/Clip.....         | 18 |
| Masking.....           | 18 |
| Details Menus.....     | 19 |
| Detail.....            | 19 |
| Skin Detail.....       | 19 |
| High Chroma.....       | 20 |
| Maintenance Menus..... | 20 |
| Auto Setup.....        | 20 |
| White Shading.....     | 20 |
| Auto Iris.....         | 20 |
| Shutter.....           | 21 |
| System.....            | 21 |
| Time/Date.....         | 21 |
| Format.....            | 21 |
| Remote.....            | 21 |
| Others.....            | 21 |

|                              |    |
|------------------------------|----|
| Check.....                   | 21 |
| File Menus.....              | 22 |
| File.....                    | 22 |
| Viewfinder Menus.....        | 22 |
| Viewfinder.....              | 22 |
| Viewfinder Detail.....       | 22 |
| Viewfinder Marker.....       | 22 |
| Marker 1/2 Selection.....    | 23 |
| Cross Setting.....           | 23 |
| Box 1/2 Setting.....         | 23 |
| Other Settings.....          | 23 |
| Side Panel.....              | 23 |
| Viewfinder Display.....      | 23 |
| Viewfinder Zebra Marker..... | 23 |

|                                   |           |
|-----------------------------------|-----------|
| <b>Serial Communications.....</b> | <b>25</b> |
|-----------------------------------|-----------|

|                                           |    |
|-------------------------------------------|----|
| To Set the Serial Communication Mode..... | 25 |
|-------------------------------------------|----|

|                             |           |
|-----------------------------|-----------|
| <b>Troubleshooting.....</b> | <b>26</b> |
|-----------------------------|-----------|

|                              |    |
|------------------------------|----|
| To Set the Video Format..... | 26 |
|------------------------------|----|

|                            |           |
|----------------------------|-----------|
| <b>Specifications.....</b> | <b>27</b> |
|----------------------------|-----------|

|                   |           |
|-------------------|-----------|
| <b>Ports.....</b> | <b>28</b> |
|-------------------|-----------|

|              |    |
|--------------|----|
| LENS.....    | 28 |
| REMOTE1..... | 28 |
| VF OUT.....  | 28 |
| DC IN.....   | 28 |

---

# Features

The AC-Z50-UCHR is a high-performance HD/SD camera that is ideal for point of view (POV), remote observation, and virtual set applications. With its 3 x 2/3-inch IT-CCD 1.0 megapixel sensor and advanced digital processing technology, the AC-Z50-UCHR provides sharp and clean image quality in multiple formats.

## Image Sensor

The 1.0 million pixels 2/3-inch CCD image sensor with micro lens and digital multi-speed signal processing.

## Multi-Definition

Formats include 1080i 59.94Hz, 1080i 50Hz, 480i 59.94Hz, 576i 50Hz.

## High Sensitivity and Signal to Noise Ratio

Low-noise circuit technology provides a signal to noise ratio of 58dB. Even at high gain, clear images are obtained with little noise. The standard sensitivity is F10 at 2000 lx. The sensitivity can be increased by Master Gain and long exposure mode to reproduce dark images with a minimum illumination of 0.02 lx at F1.4.

## DSP (Digital Signal Processing) provide advanced image handling and adjustment functions

- Knee saturation and auto-knee
- 12-Vector and Linear Matrix masking
- Variable Detail Boost Frequency
- Ultra Gamma
- Gray Scale Automatic Setup
- Automatic Shading Correction

## Extensive User-Friendly Features

- Full Auto
- Eight scene files — The scene file is provided to store and recall functions such as gain, detail, masking, gamma and other settings.
- Nine white balance memories — White balance memories are provided for each scene file.
- IRIS control is available from on screen menu.
- Computer controlled real-time auto white balance.
- ECC (Electric Color Compensating) filter.

## UltraChromeHR

Designed to address the unique imaging needs of virtual television studio productions. This patented solution takes a standard 4:2:2 YCbCr SDI video signal and a full bandwidth chroma 0:4:4 CbCr video signal into the Carbonite UltraChromeHR chroma keyer to greatly improve the quality of the already impressive UltraChrome chroma key, including exceptional edge quality.



# Operational Cautions and Warnings

## Viewfinder Lens Hazards



**Warning:** Do not look directly towards the sun or other bright light source. There is danger of physical burns and loss of eyesight.



**Warning:** Do not point the viewfinder with the lens directly toward the sun. There is a risk of burn damage to the viewfinder interior.

## Viewfinder High Voltage



**Warning:** Do not open the viewfinder cover. There is a danger of touching internal high voltage components.

## Power Supply



**Caution:** The specified power supply input voltage of this camera is 12VDC. Be sure to use the designated power supply.

## Do Not Disassemble or Modify



**Caution:** The camera contains precision internal components. Do not open the cover or disturb switches and controls other than designated. There is a risk of impaired performance and damage of the camera.

## Keep Foreign Object Out of Interior



**Caution:** Entry of water, or metallic or other foreign materials can cause failure and damage.

## Select Use and Storage Locations Carefully



**Caution:** Avoid using or storing the equipment in the following types of locations. Impaired performance and damage can be caused.

- Extremely hot or cold locations (exceeding -10 to 45°C), such as in enclosed vehicles.
- Subject to strong vibration.
- Humid or dusty locations.
- Humid or dusty locations.
- Salt spray or corrosive gases.

- Strong electromagnetic fields (e.g., near TV or radio transmitters).
- Where exposed to rain.

## When Connecting and Disconnecting



**Caution:** When working with lens, microphone, and other cables, always grasp the connector by the body, not the attached cable. Cables can be damaged by pulling on them.

## When Transporting



**Caution:** When transporting by hand, use the carrying case. If shipping by truck or other means, pack the camera in the carrying case and then use further cushioning to pack the carrying case in a sturdy carton.

## Tripod



**Caution:** Use a recommended tripod and install the camera correctly.

## Cleaning



**Caution:** Use a photographers air blower to clear dust from the lens and filters. Wipe the case with a soft dry cloth. Do not use volatile solvents, as these may deform the materials the case is made of.

## In Event of Difficulty



**Caution:** Disconnect from power and contact Ross Video Technical Support.

## Proper Ventilation




**Caution:** Do not cover or otherwise obstruct camera heat dissipation during operation.


## Damage By Laser

Laser light may do damage to image sensor. When you use laser light, be careful not to irradiate it on the image sensor surface. Damage to the image sensor resulting from laser light is not covered under warranty and must be repaired at the customer's expense.

# Camera Overview

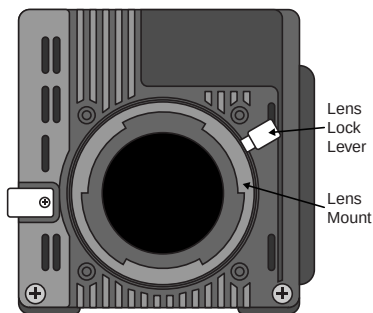

**Figure 1: AC-Z50-UCHR Front**

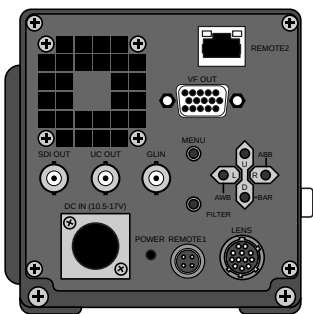

**Figure 2: AC-Z50-UCHR Back**

- **MENU** — Button used to access the menu system. The menu is shown on the MON OUT.
- **VF OUT** — DB15 connector for external viewfinder.
- **REMOTE2** — RJ-45 connector for 10/100 BASE-T ethernet control.

- **Lens Mount** — Standard bayonet type lens mount.
- **Lens Lock Lever** — Locks the lens onto the camera.
- **SDI OUT** — BNC for HD/SD-SDI video output. This is the main video output of the camera.
- **UC OUT** — BNC for UltraChromeHR signal.
- **GL IN** — BNC for Reference in. The camera accepts Tri-level or Black burst sync.
- **DC IN** — 4-Pin XLR for 12V DC power (10.5V to 17V) from external brick. Use only the external power supply provided with your camera.
- **POWER** — Power indicator shows that power is being provided to the camera (green).
- **REMOTE1** — 4-Pin Multi connector for Remote Control Unit or direct serial control.
- **LENS** — 12-Pin Multi connector for lens control.
- **FILTER** — Button used to set filter control.
- **D** — Button used for menu navigation (down) or turn on Color bar signal output. Press the button when the menu is not active to turn on the color bars.
- **R** — Button used for menu navigation (right) or to turn on Automatic Black Balance Adjustment (ABB) if held for more than 2 seconds.
- **U** — Button used for menu navigation (up).
- **L** — Button used for menu navigation (left) or to turn on Automatic White Balance (AWB) if held for more than 2 seconds.

# Camera and Lens Setup

The camera does not come with a lens, but can easily accept all Canon® or Fujinon® lenses.

## To Install a Lens

1. Disconnect power from the **DC IN** port at the back of the camera.
2. Rotate the **Lens Lock Lever** counter-clockwise to unlock the mount cap.
3. Align the lens center mark with the indent at the upper part of the lense mark and install the lens.
4. Rotate the **Lens Lock Lever** clockwise to lock the lense onto the camera.
5. Connect the lense control cable from the lens to the **LENS** port on the back of the camera.

**Note:** A cable clamp is provided at the front of the camera for cable management.

Following the installation of the lens you may need to adjust the lens flange back, white shading, auto iris speed, or iris close limit, depending on the lens you are installing.

## To Adjust the Flange Back Distance

You will need a Flange Back Adjust Chart for this procedure.

The Flange Back Distance (FBD) is the distance between the mounting flange on the camera mount and the film plane. This is the point where the lens focuses the image onto the image sensor. When you install a new lens on the camera mount, or there is an extreme change in temperature, the lens may need to be adjusted.

1. Set the Iris control on the lens to manual.
2. Set up the camera and the flange back adjustment chart about 10 feet (3 metres) away from each other.
3. Open the iris all the way and adjust the light to obtain the correct video input level.

**Tip:** If the video level is too high, use an ND filter or increase the shutter speed.

4. Loosen the setscrew on the flange back adjust ring on your lens.
5. Zoom in on the chart.
6. Adjust the focus until the image is sharp. If you are using a flange back adjustment chart, the center of the chart will appear blurry.
7. Zoom out from the chart.

8. Adjust the flange back adjustment ring until the image is sharp.
9. Repeat these steps until the image is consistently sharp at both zoom settings.
10. Tighten the setscrew on the flange back adjustment ring.

## To Adjust the White Shading

You will need an HD waveform monitor and a very even light source.

The white shading is the adjustment of the individual red, green, and blue color channels in the camera to compensate for uneven color distribution across an image. Each lens and image sensor have their own characteristics that need to be compensated for to produce a consistent color distribution.

White shading is measured vertically across the image.

**Tip:** If you notice flickering on the monitor, this can be the result of fluorescent or mercury lighting.

1. Press **MENU** and select **MAINTENANCE > SHUTTER > SHUTTER** and select **OFF**.
2. Press **MENU** and select **COLOR > MASTER GAIN > PRESET** and select **0dB**.
3. Press **MENU** and select **MAINTENANCE > WHT SHADING > EXTENDER** and select **OFF**.
4. Press **MENU** and select **MAINTENANCE > WHT SHADING** and use the RGB settings to adjust each color channel until they are equal in the waveform monitor.
5. Navigate back to the **WHT SHADING** menu.
6. Select **WHT SHADING** and press the **R** button for 1 second.  
  
Boxes will appear on the viewfinder and flash, indicating that the automatic white shading is being performed.
7. If present, turn the extender on and repeat the procedure.

## To Select a Filter Setting

The filter helps to correct for different lighting conditions and sources. The proper filter needs to be selected in the camera for proper white balancing.

1. Press and hold the **FILTER** button and use the **L** and **R** buttons to select the Neutral Density (ND) filter you are using.
  - **1** — Clear
  - **2** — 1/4ND

- **3** — 1/16ND
- **4** — 1/64ND

2. Press and hold the **FILTER** button and use the **U** and **D** buttons to select the Color Compensation (ECC) filter you are using.

- **A** — 3,200K
- **B** — 4,300K
- **C** — 5,600K
- **D** — 6,300K
- **E** — 8,000K

**Note:** The ECC filter does not operate when **W.BAL MODE** is set to **AUTO** on the **WHITE GAIN** menu.

## To Adjust the White Balance

You will need a white balance card that you can zoom in on to take up at least 1/5 of the screen width and height. The card should be placed in the same lighting conditions as the scene you want to shoot, without any high luminosity sources (such as a spotlight) in the scene.

The White Balance (WB) adjusts the colors in the image to compensate for various light sources that can tint the image. White will appear as white, without other color tints, when the image is properly white balanced.

**Tip:** You should adjust the white balance whenever there has been a change in lighting conditions.

1. Ensure that the filtering is set for the current lighting conditions.
2. Press **MENU** and select **COLOR > WHITE GAIN > W. BAL MODE** and select **MEMORY**.
3. Zoom the camera in on the white balance card and adjust the iris control as required.
4. Press **MENU** to close the menu system and hold the **L** button for 2 seconds.

The camera will adjust the white balance automatically over several seconds. When the adjustment is complete the display will show the results of the white balance adjustment. Refer to [Table 1: Auto White Balance Adjustment Results](#) on page 12 for a list of messages.

5. Take any corrective action and repeat the procedure if required.

**Table 1: Auto White Balance Adjustment Results**

| Message                         | Cause                              | Correction |
|---------------------------------|------------------------------------|------------|
| AUTO WHITE: OK<br>C. TEMP: ###K | Auto white balance was successful. | --         |

| Message                                                       | Cause                                                      | Correction                                                                                                |
|---------------------------------------------------------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| AUTO WHITE: NG<br>CHANGE TO CAM<br>TRY AGAIN                  | Camera is outputting color bars.                           | Press the <b>D</b> button to turn off color bars.                                                         |
| AUTO WHITE: NG<br>CHANGE WHITE<br>BAL TO MEM TRY<br>AGAIN     | <b>W.BAL MODE</b> is set to <b>PRESET</b> or <b>AUTO</b> . | Set <b>W.BAL MODE</b> to <b>MEMORY</b> .                                                                  |
| AUTO WHITE: NG<br>LOW LIGHT TRY<br>AGAIN                      | Light levels are too low.                                  | Increase the light levels or the master gain. If manual iris control is being used, adjust the iris stop. |
| AUTO WHITE: NG<br>LEVEL HIGH TRY<br>AGAIN                     | Light levels are too high.                                 | Decrease the master gain. If manual iris control is being used, adjust the iris stop.                     |
| AUTO WHITE: NG<br>C. TEMP. HIGH<br>CHANGE FILTER<br>TRY AGAIN | Color temperature adjustment is too high.                  | Change the ECC filter.                                                                                    |
| AUTO WHITE: NG<br>C. TEMP. LOW<br>CHANGE FILTER<br>TRY AGAIN  | Color temperature adjustment is too low.                   | Change the ECC filter.                                                                                    |

## To Adjust the Black Balance

The Black Balance (BB) is similar to white balance except that it is performed on black instead of white.

**Note:** You should adjust the white balance both before and after adjusting the black balance. Black balance should be adjusted when the camera has been idle for an extended period of time, there is a large change in ambient temperature, or when the gamma setting has changed.

1. Ensure that the filtering is set for the current lighting conditions.
2. With the menu system off, press and hold the **R** button for 2 seconds.

The lens iris will close and the camera will adjust the black balance automatically over several seconds. When the adjustment is complete the display will show the results of the black balance adjustment. Refer to [Table 2: Auto Black Balance Adjustment Results](#) on page 13 for a list of messages.

3. Take any corrective action and repeat the procedure if required.

**Table 2: Auto Black Balance Adjustment Results**


| Message                                        | Cause                              | Correction                                                                                                                                                                                                         |
|------------------------------------------------|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUTO BLACK: OK                                 | Auto black balance was successful. | --                                                                                                                                                                                                                 |
| AUTO BLACK: NG<br>CHANGE TO CAM<br>TRY AGAIN   | Camera is outputting color bars.   | Press the <b>D</b> button to turn off color bars.                                                                                                                                                                  |
| AUTO BLACK: NG<br>IRIS NOT CLOSED<br>TRY AGAIN | The iris is not closed.            | If manual iris control is being used, adjust the iris to fully closed. The camera will adjust the gain automatically during the test. Flicker or noise may appear on screen during the adjustment, this is normal. |
| AUTO BLACK: NG<br>??? TRY AGAIN                | Range is exceeded, cannot adjust.  | Check the lens cable connection. If the cable is correct there is a fault in the lens or the camera. Contact technical support.                                                                                    |

## To Adjust the Grayscale Setup

You will need an 11-Step Grayscale Chart for this procedure.

The Grayscale adjusts the exposure levels of the camera across all the steps in the grayscale chart to ensure proper color reproduction across the entire range of tones.

1. Press **MENU** and select **MAINTENANCE > AUTO SETUP > GRAY SCALE**.
2. Frame the camera on the Grayscale chart to align the 6 cursors shown on the monitor display as shown on the figure below. The camera will adjust the iris automatically once the setup is executed.

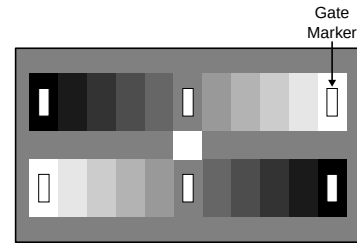

**Figure 3: Gate Marker Alignment**

3. Press and hold the **R** button for 1 second.  
The camera will automatically align **Black**, **Gain**, **Flare**, and **Gamma** to preset values.

## To Adjust the Shutter Mode

Select the shutter mode and speed for the environment you are shooting.

**Note:** Camera sensitivity declines as shutter speed increases. If the iris is set to auto, the iris opens at increased shutter speed and the depth of focus decreases.

1. Press **MENU** and select **MAINTENANCE > SHUTTER > SHUTTER** and select the shutter mode for your environment.
  - **OFF** — shutter is off.
  - **PRESET** — clear image of quick moving objects.
  - **LOCK SCAN** — prevent rolling bar when shooting a computer monitor or TV by matching the refresh rate of display.
  - **CC FRM** — increase vertical resolution
  - **AES** — shutter speed is automatically adjusted.
2. Select **SHUTTER PRE** or **SHUTTER VAR** and select the shutter speed you want to use.

---

## Network Connections

The UltraChromeHR camera can be controlled either through a menu system on the viewfinder output of the camera, or using DashBoard. To connect to the camera from DashBoard, you must establish a network connection to the camera from the DashBoard computer.

The UltraChromeHR camera comes set with a static IP address from the factory. The IP address is set to 192.168.1.10 by default and can be changed using the menu system.

You need the IP address of the camera to be able to connect to it from DashBoard.

18. Select **SET DATA** and press the **R** button to set the new network values.

### To Change the IP Address

1. Press **MENU** and select **MAINTENANCE > LAN SETTING**

The current network setting for the camera are shown on the menu.

2. Select **IP CONF** and press the **R** button.
3. Select **OCTET1**, press the **R** and **L** button to select the first part of the address.
4. Repeat these steps for the remaining octets you want to set.
5. Select **SEND** and press the **R** button to store the new value to the temporary buffer.
6. Return to the **LAN SETTING** menu.
7. Select **SUBNET CONF** and press the **R** button.
8. Select **OCTET1**, press the **R** and **L** button to select the first part of the address.
9. Repeat these steps for the remaining octets you want to set.
10. Select **SEND** and press the **R** button to store the new value to the temporary buffer.
11. Return to the **LAN SETTING** menu.
12. Select **GATEWAY CONF** and press the **R** button.
13. Select **OCTET1**, press the **R** and **L** button to select the first part of the address.
14. Repeat these steps for the remaining octets you want to set.
15. Select **SEND** and press the **R** button to store the new value to the temporary buffer.
16. Return to the **LAN SETTING** menu.
17. Verify the new temporary network setting that are shown on the **CONF** line for the IP address, subnet mask, and gateway.

---

# DashBoard

The DashBoard control system allows remote access to multiple pieces of Ross Video equipment, including openGear® cards, Carbonite production switchers, BlackStorm video servers, and ACID UltraChromeHR cameras.

Download and install the latest version of DashBoard from <http://www.opengear.tv/>. Review the documentation that comes with DashBoard for information on installing and launching DashBoard.

*Tip:* For detailed instructions on using DashBoard with ACID UltraChromeHR, navigate to the online help at <http://help.rossvideo.com/acid>.

## Connecting to the Camera from DashBoard

You must manually connect to the camera from DashBoard using the IP address of the camera. Once connected, DashBoard will remember the connection until you remove it

### To Connect to the Camera from DashBoard

You need the IP address of your camera to connect to it manually from DashBoard.

1. Click **File > New > Other...**
2. Expand the **Camera Control** folder.
3. Select **New Camera** and click **Next**.
4. In the **IP Address** field, enter the IP address of the camera.
5. Click **Finish**.  
The camera appears in the **Tree View**.

## Viewfinder Display

The status overlay provides information related to camera setting and operation. You can select what and where information is presented on the display from the **VF** menu.

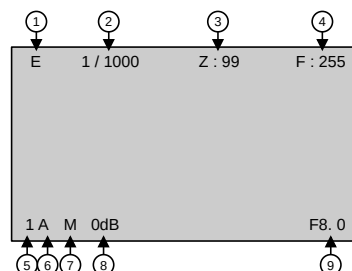


Figure 4: Viewfinder Display Overlay

| # | Item          | Status                                                                                                               | Description                                                                                                                                   |
|---|---------------|----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Extender      | -no indication-                                                                                                      | Extender is at X1 or lens cable is not connected.                                                                                             |
|   |               | E                                                                                                                    | Extender is at X2.                                                                                                                            |
| 2 | Shutter       | OFF                                                                                                                  | Off                                                                                                                                           |
|   |               | 1/100, 1/250, 1/500, 1/1000, 1/2000 second, CCFRM (59.94i) or 1/60, 1/250, 1/500, 1/1000, 1/2000 second, CCFRM (50i) | PRESET                                                                                                                                        |
|   |               | 1/59.94 to 1/11,238 second, 1.07 to 0.03 second (59.94i) or 1/50.00 to 1/9,375 second, 1.28 to 0.04 second (50i)     | LOCK SCAN                                                                                                                                     |
|   |               | AES                                                                                                                  | Automatic Electronic Shutter                                                                                                                  |
| 3 | Zoom          | 0 - 99                                                                                                               | Indicates the approximate zoom position of the lens between wide angle (0) and telephoto (99). Value is relative closeness to telephoto side. |
| 4 | Focus         | 0 - 255                                                                                                              | Indicates the focus position of the lens as a numeric value (255 = infinity).                                                                 |
| 5 | ND Filter     | 1 - 4                                                                                                                | Shows the type of ND filter currently selected.                                                                                               |
| 6 | ECC Filter    | A - E                                                                                                                | Shows the type of ECC filter currently selected.                                                                                              |
| 7 | White Balance | P                                                                                                                    | Preset Mode                                                                                                                                   |
|   |               | M                                                                                                                    | Memory Mode                                                                                                                                   |
|   |               | A                                                                                                                    | Auto Mode                                                                                                                                     |

| # | Item        | Status                                                                         | Description                                 |
|---|-------------|--------------------------------------------------------------------------------|---------------------------------------------|
| 8 | Master Gain | -3dB, 0dB, 3dB, 6dB, 9dB, 12dB, 15dB, 18dB, 21dB, 24dB, 27dB, 30dB, 33dB, 36dB | Shows the current value of the master gain. |
| 9 | Iris F-Stop | F1.4 - F22                                                                     | Current Iris F-Stop setting.                |
|   |             | CLS                                                                            | Iris is closed.                             |
|   |             | ***                                                                            | Lens cable is not connected.                |



# Menu System

The menu system is displayed on the **SDI OUT** output BNC or the viewfinder and allows you to set up and configure various aspects of the camera. The menu system is accessed by pressing the **MENU** button and using the **L**, **R**, **U**, and **D** buttons to make selections.

A menu item with a > symbol indicates that there is a sub-menu below this selection or another page of the current menu. Press **R** to go into this sub-menu, or the next page. Press **L** where you see a < symbol to go to the previous page in a menu or up a level in the menu tree.

**Tip:** The number of > symbols next to a menu item indicate the number of pages in that sub-menu.

## Color Menus

Color Menu

- Master Gain
  - Preset
  - Mode
  - AGC Limit
  - ACL Setting
  - Low Set
  - Mid Set
  - High Set
- White Gain
  - W. Bal Mode
  - R Gain
  - G Gain
  - B Gain
- Black/Flare
  - R Black
  - G Black
  - B Black
  - R Flare
  - G Flare
  - B Flare
  - Flare
  - M Black
- Gamma
  - R Gamma
  - G Gamma
  - B Gamma
  - Total Gamma
  - Gamma Table
  - Gamma
  - U Gamma TBL
  - Ultra Gamma
  - Blk Str Lev
  - Blk Stretch
- Knee/Clip
  - Total Knee
  - R Knee
  - B Knee
  - Total Slope
  - R Slope
  - B Slope
  - Knee
  - Auto Knee
  - Knee Sat
  - Knee Sat
  - White Clip
  - White Clip
- Masking
  - R Hue/Sat
  - Y-R Hue/Sat
  - Y Hue/Sat
  - G-Y Hue/Sat

- G Hue/Sat
- C-G Hue/Sat
- C Hue/Sat
- B-C Hue/Sat
- B Hue/Sat
- M-B Hue/Sat
- M Hue/Sat
- R-M Hue/Sat
- Masking
- Linear R-G
- Linear R-B
- Linear G-R
- Linear G-B
- Linear B-R
- Linear B-G
- Preset Type
- Auto Chroma
- A. Chrom Lev
- Masking
- S. Mask Sat/Hue
- Skin Mask

## Master Gain

Press **MENU** and select **COLOR > MASTER GAIN**

| Item      | Settings      |
|-----------|---------------|
| PRESET    | -3dB to 36dB  |
| MODE      | PRESET, AGC   |
| AGC LIMIT | -3dB to +18dB |
| LOW SET   | -3dB, 0dB     |
| MID SET   | 0dB to +21dB  |
| HIGH SET  | +3dB to +36dB |

## White Gain

Press **MENU** and select **COLOR > WHITE GAIN**

| Item                | Settings             |
|---------------------|----------------------|
| W. BAL MODE         | PRESET, MEMORY, AUTO |
| R GAIN (red gain)   | -128 to 127          |
| G GAIN (green gain) | -128 to 127          |
| B GAIN (blue gain)  | -128 to 127          |

**Note:** When **W. BAL MODE** is set to **AUTO** the **R GAIN**, **G GAIN**, **B GAIN**, and **ECC filter** settings are not available.

## Black/Flare

Press **MENU** and select **COLOR > BLACK/FLARE**

| Item                        | Settings    |
|-----------------------------|-------------|
| R BLACK (red black level)   | -128 to 127 |
| G BLACK (green black level) | -128 to 127 |
| B BLACK (blue black level)  | -128 to 127 |
| R FLARE (red flare level)   | -128 to 127 |
| G FLARE (green flare level) | -128 to 127 |

| Item                              | Settings    |
|-----------------------------------|-------------|
| <b>B FLARE</b> (blue flare level) | -128 to 127 |
| <b>FLARE</b>                      | ON, OFF     |
| <b>M. BLACK</b> (master black)    | -128 to 127 |

## Gamma

Press **MENU** and select **COLOR > GAMMA**

| Item                                     | Settings                                               |
|------------------------------------------|--------------------------------------------------------|
| <b>GAMMA 1</b>                           |                                                        |
| <b>R GAMMA</b> (red gamma)               | -128 to 127                                            |
| <b>G GAMMA</b> (green gamma)             | -128 to 127                                            |
| <b>B GAMMA</b> (blue gamma)              | -128 to 127                                            |
| <b>TOTAL GAMMA</b>                       | -128 to 127                                            |
| <b>GAMMA TABLE</b> (gamma curve value)   | 3.0 to 8.0                                             |
| <b>GAMMA</b>                             | ON, OFF                                                |
| <b>GAMMA 2</b>                           |                                                        |
| <b>U. GAMMA TBL</b> (ultra gamma curve)  | 1(90%), 2(85%), 3(80%), 4(75%), 5(70%), 6(65%), 7(50%) |
| <b>ULTRA GAMMA</b>                       | ON, OFF                                                |
| <b>BLK STR LEV</b> (black stretch level) | 0 to 11                                                |
| <b>BLK STRETCH</b>                       | ON, OFF                                                |
| <b>Gamma Range</b> (AC-H200-UCHR only)   | -128 to 127                                            |

## Knee/Clip

Press **MENU** and select **COLOR > KNEE/CLIP**

| Item               | Settings    |
|--------------------|-------------|
| <b>KNEE/CLIP 1</b> |             |
| <b>TOTAL KNEE</b>  | -128 to 127 |
| <b>R KNEE</b>      | -128 to 127 |
| <b>B KNEE</b>      | -128 to 127 |
| <b>TOTAL SLOPE</b> | -128 to 127 |
| <b>R SLOPE</b>     | -128 to 127 |
| <b>B SLOPE</b>     | -128 to 127 |
| <b>KNEE</b>        | ON, OFF     |
| <b>AUTO KNEE</b>   | ON, OFF     |
| <b>KNEE/CLIP 2</b> |             |
| <b>KNEE SAT</b>    | -128 to 127 |
| <b>KNEE SAT</b>    | ON, OFF     |

| Item              | Settings    |
|-------------------|-------------|
| <b>WHITE CLIP</b> | -128 to 127 |
| <b>WHITE CLIP</b> | ON, OFF     |

## Masking

Press **MENU** and select **COLOR > MASKING**

| Item                                               | Settings  |
|----------------------------------------------------|-----------|
| <b>MASKING 1</b>                                   |           |
| <b>R HUE</b> (red hue)                             | -64 to 63 |
| <b>R SAT</b> (red saturation)                      | -64 to 63 |
| <b>Y-R HUE</b> (yellow-red hue)                    | -64 to 63 |
| <b>Y-R SAT</b> (yellow-red saturation)             | -64 to 63 |
| <b>Y HUE</b> (yellow hue)                          | -64 to 63 |
| <b>Y SAT</b> (yellow saturation)                   | -64 to 63 |
| <b>G-Y HUE</b> (green-yellow hue)                  | -64 to 63 |
| <b>G-Y SAT</b> (green-yellow saturation)           | -64 to 63 |
| <b>G HUE</b> (green hue)                           | -64 to 63 |
| <b>G SAT</b> (green saturation)                    | -64 to 63 |
| <b>C-G HUE</b> (cyan-green hue)                    | -64 to 63 |
| <b>C-G SAT</b> (cyan-green saturation)             | -64 to 63 |
| <b>C HUE</b> (cyan hue)                            | -64 to 63 |
| <b>C SAT</b> (cyan saturation)                     | -64 to 63 |
| <b>B-C HUE</b> (blue-cyan hue)                     | -64 to 63 |
| <b>B-C SAT</b> (blue-cyan saturation)              | -64 to 63 |
| <b>B HUE</b> (blue hue)                            | -64 to 63 |
| <b>B SAT</b> (blue saturation)                     | -64 to 63 |
| <b>M-B HUE</b> (magenta-blue hue)                  | -64 to 63 |
| <b>M-B SAT</b> (magenta-blue saturation)           | -64 to 63 |
| <b>M HUE</b> (magenta hue)                         | -64 to 63 |
| <b>M SAT</b> (magenta saturation)                  | -64 to 63 |
| <b>R-M HUE</b> (red-magenta hue)                   | -64 to 63 |
| <b>R-M SAT</b> (red-magenta saturation)            | -64 to 63 |
| <b>MASKING</b>                                     | ON, OFF   |
| <b>MASKING 2</b>                                   |           |
| <b>LINEAR R-G</b> (red-green linear matrix offset) | -64 to 63 |

| Item                                                   | Settings                                                  |
|--------------------------------------------------------|-----------------------------------------------------------|
| <b>LINEAR R-B</b> (red-blue linear matrix offset)      | -64 to 63                                                 |
| <b>LINEAR G-R</b> (green-red linear matrix offset)     | -64 to 63                                                 |
| <b>LINEAR G-B</b> (green-blue linear matrix offset)    | -64 to 63                                                 |
| <b>LINEAR B-R</b> (blue-red linear matrix offset)      | -64 to 63                                                 |
| <b>LINEAR B-G</b> (blue-green linear matrix offset)    | -64 to 63                                                 |
| <b>PRESET TYPE</b>                                     | STANDARD, ITU-709, SMPTE-240M, SMPTE-WIDE, NTSC, EBU, OFF |
| <b>AUTO CHROMA</b>                                     | ON, OFF                                                   |
| <b>A. CHROMA LEV</b> (linear matrix saturation offset) | -64 to 63                                                 |
| <b>MASKING</b>                                         | ON, OFF                                                   |
| <b>MASKING 3</b>                                       |                                                           |
| <b>S. MASK. SAT</b> (skin masking color saturation)    | -128 to 127                                               |
| <b>S. MASK. HUE</b> (skin masking hue)                 | -128 to 127                                               |
| <b>SKIN MASK</b>                                       | ON, OFF                                                   |

## Details Menus

|              |  |
|--------------|--|
| Detail Menu  |  |
| Detail       |  |
| Level        |  |
| H Gain       |  |
| V Gain       |  |
| H Crisp      |  |
| V Crisp      |  |
| Level Dep    |  |
| DTL Freq     |  |
| D. Knee Wht  |  |
| D. Knee Blk  |  |
| Detail Knee  |  |
| P/N Balance  |  |
| Knee Detail  |  |
| DTL Source   |  |
| Detail       |  |
| Skin DTL     |  |
| Ch Select    |  |
| Chx A. Phase |  |
| S.DTL Level  |  |
| S.DTL Phase  |  |
| S.DTL Width  |  |
| Threshold    |  |
| Skin Detail  |  |
| Skin Gate    |  |
| Gate Ind.    |  |
| High Chroma  |  |
| R            |  |
| G            |  |
| B            |  |
| High Chroma  |  |

## Detail

Press **MENU** and select **DETAIL > DETAIL**

| Item                                        | Settings                          |
|---------------------------------------------|-----------------------------------|
| <b>DETAIL 1</b>                             |                                   |
| <b>LEVEL</b> (detail level)                 | -128 to 127                       |
| <b>H GAIN</b> (horizontal gain)             | -128 to 127                       |
| <b>V GAIN</b> (vertical gain)               | -128 to 127                       |
| <b>H CRISP</b> (horizontal crispness)       | -128 to 127                       |
| <b>V CRISP</b> (vertical crispness)         | -128 to 127                       |
| <b>LEVEL DEP</b>                            | -128 to 127                       |
| <b>DTL FREQ</b> (boost frequency of detail) | 13MHz to 19MHz                    |
| <b>DETAIL</b>                               | ON, OFF                           |
| <b>DETAIL 2</b>                             |                                   |
| <b>D. KNEE WHT</b>                          | -128 to 127                       |
| <b>D. KNEE BLK</b>                          | -128 to 127                       |
| <b>DETAIL KNEE</b>                          | ON, OFF                           |
| <b>P/N BALANCE</b> (positive/negative)      | 4/8, 5/8, 6/8, 8/8, 8/6, 8/5, 8/4 |
| <b>KNEE DETAIL</b>                          | -128 to 127                       |
| <b>DTL SOURCE</b>                           | G, R+G, R+G+B                     |
| <b>DETAIL</b>                               | ON, OFF                           |

## Skin Detail

Press **MENU** and select **DETAIL > SKIN DTL**

| Item                                                   | Settings                                         |
|--------------------------------------------------------|--------------------------------------------------|
| <b>SKIN DTL 1</b>                                      |                                                  |
| <b>CH SELECT</b> (channel select for skin tone detail) | 1ch, 2ch, 1ch+2ch                                |
| <b>CH1. A. PHASE/CH2. A. PHASE</b>                     | (see note*)                                      |
| <b>S. DTL LEVEL</b> (skin tone detail level)           | -128 to 127                                      |
| <b>S. DTL PHASE</b> (skin tone detail phase)           | -128 to 127 (R-Mg, Mg-B, B-Cy, Cy-G, G-Ye, Ye-R) |
| <b>S. DTL WIDTH</b> (skin tone detail phase range)     | -128 to 127                                      |
| <b>SKIN DTL 2</b>                                      |                                                  |
| <b>THRESHOLD</b>                                       | -128 to 127                                      |
| <b>SKIN DETAIL</b>                                     | ON, OFF                                          |
| <b>SKIN GATE</b> (skin tone detail gate)               | ON, OFF                                          |
| <b>GATE IND.</b>                                       | 1ch, 2ch                                         |

**Note:** \* When you select **CHX A. PHASE** a marker is shown on the monitor. Move the camera to place the marker over the skin tone you want to detect and press **R** for 1 second. This functionality can also be accessed from the **AUTO SETUP** menu.

## High Chroma

Press **MENU** and select **DETAIL > HIGH CHROMA**

| Item                                        | Settings    |
|---------------------------------------------|-------------|
| <b>R</b> (detail in high-chrominance red)   | -128 to 127 |
| <b>G</b> (detail in high-chrominance green) | -128 to 127 |
| <b>B</b> (detail in high-chrominance blue)  | -128 to 127 |
| <b>HIGH CHROMA</b>                          | ON, OFF     |

## Maintenance Menus

### Maintenance Menus

- Auto Setup
  - Chx.A.Phase
  - Gray Scale
  - Black Lev
  - Flare Lev
  - Gamma Lev
- White Shading
  - Extender
  - Wht Shading
  - R V Saw
  - G V Saw
  - B V Saw
- Auto Iris
  - Auto Iris
  - Iris Cont
  - Iris Trim
  - Iris Speed
  - Iris Gate
  - Open Limit
  - Close Limit
- Shutter
  - Shutter
  - Shutter Pre
  - Shutter Var
  - CCD Mode
- System
  - Camera ID
  - Fan Mode
  - GL H Phase
  - Para Mode
- LAN Setting
  - IP Setting
  - Subnet Setting
  - Gateway Setting
- Time/Date
  - (mode)
  - Date Disp
  - Time Disp
  - Year
  - Month
  - Day
  - Hour
  - Minute
  - Set Data
- Format
  - SDI Out
  - UC Out
  - UC Mode
  - Scan Rate

- Set Data
  - Remote
    - Baud Rate
    - Iris Return
  - Others
    - High Mix Lv
    - High Mix
  - Check
    - Test
    - Gamma
    - Detail
    - Masking
    - Knee
    - Character
    - Model
    - CPU Ver.
    - Check Sum
    - Video Ver.

## Auto Setup

Press **MENU** and select **MAINTENANCE > AUTO SETUP**

| Item                               | Settings                      |
|------------------------------------|-------------------------------|
| <b>CH1. A. PHASE/CH2. A. PHASE</b> | (see note*)                   |
| <b>GRAY SCALE</b>                  | (auto gray scale setup)       |
| <b>BLACK LEV</b>                   | 0.0% to 12.35% (0.5% steps)   |
| <b>FLARE LEV</b>                   | 0.0% to 24.70% (0.1% steps)   |
| <b>GAMMA LEV</b>                   | 42.20% to 67.70% (0.1% steps) |

**Note:** \* When you select **CHX A. PHASE** a marker is shown on the monitor. Move the camera to place the marker over the skin tone you want to detect and press **R** for 1 second. This functionality can also be accessed from the **SKIN DTL** menu.

## White Shading

Press **MENU** and select **MAINTENANCE > WHT SHADING**

| Item                            | Settings             |
|---------------------------------|----------------------|
| <b>EXTENDER</b>                 | OFF, **, x2, x0.8    |
| <b>WHT SHADING</b>              | (auto white shading) |
| <b>R V SAW</b> (red vertical)   | -128 to 127          |
| <b>G V SAW</b> (green vertical) | -128 to 127          |
| <b>B V SAW</b> (blue vertical)  | -128 to 127          |

## Auto Iris

Press **MENU** and select **MAINTENANCE > AUTO IRIS**

| Item             | Settings     |
|------------------|--------------|
| <b>AUTO IRIS</b> | REMOTE, AUTO |

| Item        | Settings                                       |
|-------------|------------------------------------------------|
| IRIS CONT   | -128 to 127 (not available when using RU unit) |
| IRIS TRIM   | -128 to 127                                    |
| IRIS SPEED  | -128 to 127                                    |
| PEAK/AVE    | 0/10, 1/9, 2/8, 3/7, 4/6, 5/5                  |
| IRIS GATE   | 1 to 6                                         |
| OPEN LIMIT  | 0 to 127                                       |
| CLOSE LIMIT | -128 to -1                                     |

## Shutter

Press **MENU** and select **MAINTENANCE > SHUTTER**

| Item        | Settings                                                                                                                                                                                                         |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SHUTTER     | OFF, PRESET, VARIABLE, AES                                                                                                                                                                                       |
| SHUTTER PRE | 1/100 (59.94i), 1/60 (50i) 1/250, 1/500, 1/1000, 1/2000, CCFRM                                                                                                                                                   |
| SHUTTER VAR | 59.94i — 1.07s(36dB), 0.53s(30dB), 0.27s(24dB), 0.13s(18dB), 0.07s(12dB), 0.03s(6dB), 1/59.94 to 1/11238<br>50i — 1.28s(36dB), 0.64s(30dB), 0.32s(24dB), 0.16s(18dB), 0.08s(12dB), 0.04s(6dB), 1/50.00 to 1/9375 |
| CCD MODE    | FIELD                                                                                                                                                                                                            |

## System

Press **MENU** and select **MAINTENANCE > SYSTEM**

| Item                                   | Settings             |
|----------------------------------------|----------------------|
| CAMERA ID                              | 1 - 99               |
| FAN MODE                               | OFF, AUTO, LOW, HIGH |
| GL H PHASE (gen-lock horizontal phase) | -512                 |
| PARA MODE                              | OFF, ON              |

## Time/Date

Press **MENU** and select **MAINTENANCE > SYSTEM > TIME/DATE**

| Item      | Settings                           |
|-----------|------------------------------------|
| (mode)    | DD-MM-YYYY, MM-DD,YYYY, YYYY-MM-DD |
| DATE DISP | OFF, ON                            |
| TIME DISP | OFF, ON                            |
| YEAR      | 2000 to 2099                       |

| Item     | Settings                                     |
|----------|----------------------------------------------|
| MONTH    | 1 to 12                                      |
| DAY      | 1 to 31                                      |
| HOURL    | 0 to 23                                      |
| MINUTE   | 0 to 59                                      |
| SET DATA | (press <b>R</b> button to set date and time) |

## Format

Press **MENU** and select **MAINTENANCE > SYSTEM > FORMAT**

| Item      | Settings                                            |
|-----------|-----------------------------------------------------|
| SDI OUT   | 1080i, 480i(16:9), 480i(4:3), 576i(16:9), 576i(4:3) |
| UC OUT    | 1080i, 480i(16:9), 480i(4:3), 576i(16:9), 576i(4:3) |
| UC MODE   | 4:2:2, 0:4:4*                                       |
| SCAN RATE | 59.94Hz, 50Hz                                       |
| SET DATA  | (press <b>R</b> button to set output formats)       |

**Note:** \* When UC MODE is set to 0:4:4, the SDI OUT is locked to the same format as the UC OUT.

## Remote

Press **MENU** and select **MAINTENANCE > SYSTEM > REMOTE**

**Note:** These setting apply to the REMOTE1 port only.

| Item        | Settings          |
|-------------|-------------------|
| BAUD RATE   | 9600bps, 19200bps |
| IRIS RETURN | OFF, ON           |

## Others

Press **MENU** and select **MAINTENANCE > OTHERS**

| Item        | Settings |
|-------------|----------|
| HIGH MIX LV | 0 to 255 |
| HIGH MIX    | OFF, ON  |

## Check

Press **MENU** and select **MAINTENANCE > CHECK**

| Item               | Settings |
|--------------------|----------|
| <b>CHECK 1</b>     |          |
| TEST (test signal) | OFF, ON  |

| Item              | Settings                      |
|-------------------|-------------------------------|
| <b>GAMMA</b>      | OFF, ON                       |
| <b>DETAIL</b>     | OFF, ON                       |
| <b>MASKING</b>    | OFF, ON                       |
| <b>KNEE</b>       | OFF, ON                       |
| <b>CHARACTER*</b> | OFF, ON                       |
| <b>CHECK 2</b>    |                               |
| <b>MODEL</b>      | (camera model)                |
| <b>CPU Ver.</b>   | (CPU firmware version)        |
| <b>Check SUM</b>  | (CPU firmware checksum)       |
| <b>VIDEO Ver.</b> | (video FPGA firmware version) |

**Note:** \* If you turn Character off, the onscreen menu is turned off. You must press and hold the **MENU** button to turn the menus back on (this turns Character back to on).

## File Menus

```
File Menus
├ File
│   ├── File Select
│   ├── Store File
│   └ Store
```

### File

Press **MENU** and select **FILE**

| Item                                            | Settings                        |
|-------------------------------------------------|---------------------------------|
| <b>FILE SELECT</b> (load scene file)            | 0 to 8, PRESET                  |
| <b>STORE FILE</b> (select location to store to) | 0 to 8                          |
| <b>STORE</b>                                    | (press <b>R</b> to store scene) |

## Viewfinder Menus

**Note:** The Viewfinder menus can only be viewed on the VF OUT rear connector as analog HD video or as HD-SDI on the SDI OUT BNC by selecting Character ON from the Maintenance menu.

```
Viewfinder Menus
├ Viewfinder
│   └ VF Out Sel
├ Viewfinder Detail
│   ├── VF Detail
│   ├── DTL Level
│   └ Crisp
├ Viewfinder Marker
│   ├── User Sel
│   ├── Marker1 SW
│   └ Marker2 SW
└ Marker1/2 Selection
    ├── Center Mar
    ├── Safety Mark
    ├── Side 4:3
    ├── Side 13:9
    ├── Side 14:9
    └ Side 15:9
```

```
├ Cross
│   ├── Box1
│   └ Box2
├ Cross Settings
│   ├── H Position
│   └ V Position
├ Box 1/2 Setting
│   ├── H Position
│   ├── V Position
│   ├── H Size
│   └ V Size
├ Other Settings
│   ├── Center Mark
│   ├── Safety Mark
│   ├── Safety Area
│   └ Marker Lev
├ Side Panel
│   ├── Side Panel
│   ├── Contrast
│   └ Bright
├ Viewfinder Display
│   ├── Extender
│   ├── Shutter
│   ├── Zoom
│   ├── Focus
│   ├── Filter
│   ├── White Bal
│   ├── M. Gain
│   └ Iris
└ Viewfinder Zebra Marker
    ├── Zebra Type1
    ├── Level
    ├── Zebra Type2
    ├── High Level
    ├── Low Level
    ├── Indicator
    ├── Marker
    └ Peak Hold
```

### Viewfinder

Press **MENU** and select **VF**

| Item              | Settings          |
|-------------------|-------------------|
| <b>VF OUT SEL</b> | COLOR, Y, R, G, B |

### Viewfinder Detail

Press **MENU** and select **VF > VF DETAIL**

| Item             | Settings    |
|------------------|-------------|
| <b>VF DETAIL</b> | OFF, ON     |
| <b>DTL LEVEL</b> | -128 to 127 |
| <b>CRISP</b>     | -128 to 127 |

### Viewfinder Marker

Press **MENU** and select **VF > VF MARKER**

| Item              | Settings                   |
|-------------------|----------------------------|
| <b>USER SEL</b>   | USER1, USER2, USER3, USER4 |
| <b>MARKER1 SW</b> | OFF, ON                    |
| <b>MARKER2 SW</b> | OFF, ON                    |

## Marker 1/2 Selection

Press **MENU** and select **VF > VF MARKER > MARKER1 SEL**

The **Marker 2 Selection** menu is identical to the **Marker 1 Selection**.

| Item        | Settings |
|-------------|----------|
| CENTER MARK | OFF, ON  |
| SAFETY MARK | OFF, ON  |
| SIDE 4:3    | OFF, ON  |
| SIDE 13:9   | OFF, ON  |
| SIDE 14:9   | OFF, ON  |
| SIDE 15:9   | OFF, ON  |
| CROSS       | OFF, ON  |
| BOX1        | OFF, ON  |
| BOX2        | OFF, ON  |

## Cross Setting

Press **MENU** and select **VF > VF MARKER > CROSS SET**

| Item                                           | Settings |
|------------------------------------------------|----------|
| H POSITION (horizontal position of cross-hair) | 0 to 255 |
| V POSITION (vertical position of cross-hair)   | 0 to 255 |

## Box 1/2 Setting

Press **MENU** and select **VF > VF MARKER > BOX1 SET**

The **Box 1 Setting** menu is identical to the **Box 2 Setting**.

| Item                                        | Settings |
|---------------------------------------------|----------|
| H POSITION (horizontal position of the box) | 0 to 255 |
| V POSITION (vertical position of the box)   | 0 to 255 |
| H SIZE (horizontal size of the box)         | 0 to 255 |
| V SIZE (vertical size of the box)           | 0 to 255 |

## Other Settings

Press **MENU** and select **VF > VF MARKER > OTHER SET**

| Item                                   | Settings                   |
|----------------------------------------|----------------------------|
| CENTER MARK (type of center mark)      | TYPE1, TYPE2, TYPE3, TYPE4 |
| SAFETY MARK (type of safe action area) | TYPE1, TYPE2, TYPE3        |
| SAFETY AREA (size of safe action area) | 80.0%, 90.0%, 92.5%, 95.0% |
| MARKER LEV                             | 0 to 100                   |

## Side Panel

Press **MENU** and select **VF > SIDE PANEL**

| Item                                                                                           | Settings                   |
|------------------------------------------------------------------------------------------------|----------------------------|
| SIDE PANEL (aspect ratio of image on monitor out - only available when monitor is set to 16:9) | OFF, 4:3, 13:9, 14:9, 15:9 |
| CONTRAST (contrast of pillarboxes on either side of the image)                                 | 1 to 5                     |
| BRIGHT (brightness of pillarboxes on either side of the image)                                 | 1 to 5                     |

## Viewfinder Display

Press **MENU** and select **VF > VF DISPLAY**

This menu turns individual status items on or off for the viewfinder.

| Item      | Settings |
|-----------|----------|
| EXTENDER  | OFF, ON  |
| SHUTTER   | OFF, ON  |
| ZOOM      | OFF, ON  |
| FOCUS     | OFF, ON  |
| FILTER    | OFF, ON  |
| WHITE BAL | OFF, ON  |
| M. GAIN   | OFF, ON  |
| IRIS      | OFF, ON  |

## Viewfinder Zebra Marker

Press **MENU** and select **VF > VF ZEBRA**

| Item        | Settings    |
|-------------|-------------|
| ZEBRA TYPE1 | OFF, ON     |
| LEVEL       | 75% to 105% |
| ZEBRA TYPE2 | OFF, ON     |
| HIGH LEVEL  | 55% to 100% |

---

| Item      | Settings   |
|-----------|------------|
| LOW LEVEL | 50% to 99% |



# Serial Communications

The camera can be controlled over a serial connection to the **REMOTE1** port either by a remote control unit or a device using standard RS-232.

To switch between communications with a remote unit or RS-232C, you must remove the side plate of the camera and set a switch on the rear board inside the camera.

## To Set the Serial Communication Mode




**Warning Hazardous Voltages:** Hazardous voltages are present in this device as long as any of the power supplies are connected to the AC power.




**ESD Susceptibility:** Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling the circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Touch the outer frame to dissipate static charge before removing boards and exercise proper grounding precautions when working on circuit boards.


1. Power off the camera.
2. Remove the screws securing the side plate and remove the plate.

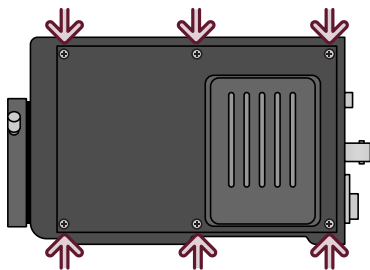

3. Remove the **CPU** and **POWER** boards and place them on a clean, static-free surface.

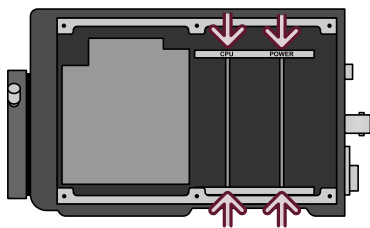

4. Locate the **RS-232 / RU** switch on the rear board next to the fan.

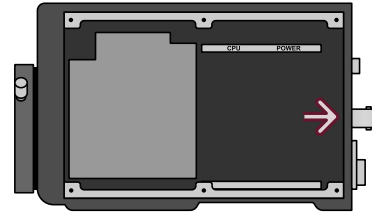

5. Select **RS-232** (up) or **RU** (down) for the serial communication mode you want to use.
6. Re-install the **CPU** and **POWER** boards and secure the side plate back onto the side of the camera.

---

# Troubleshooting

## To Set the Video Format

If the video output format of the camera does not match a format supported by your monitor, you can switch the video output format using the menu buttons on the back of the camera.

1. Disconnect power from the camera.
2. Press and hold the menu buttons for the required video format and re-connect power to the camera.
  - 1080i 59.94Hz — press **DOWN**
  - 1080i 50Hz — press **RIGHT**
  - 480i 59.64Hz — press **MENU + DOWN**
  - 576i 50Hz — press **MENU + RIGHT**


# Specifications

| Item                  | Specification                                                                                                 |
|-----------------------|---------------------------------------------------------------------------------------------------------------|
| Image Sensor          | 2/3-inch IT-CCD                                                                                               |
| Total Pixels          | 1.0 Million                                                                                                   |
| Aspect Ratio          | 16:9 (HD/SD), 4:3 (SD) switchable                                                                             |
| TV Signal Format      | 1080i 59.94Hz, 1080i 50Hz, 480i 59.94Hz, 576i 50Hz                                                            |
| HD Resolution         | 800TVL                                                                                                        |
| Standard Sensitivity  | F10 at 2000lx, 3200K, 89.9% reflectance (1080i 59.94Hz)                                                       |
|                       | F11 at 2000lx, 3200K, 89.9% reflectance (1080i 50Hz)                                                          |
| Minimum Illumination  | 0.02lx at F1.4, 72dB at +36dB Gain and CCD charge accumulation                                                |
| HD SNR                | 58dB (HD-SDI Output Decode Y Channel)                                                                         |
| Optical Filter        | Clear, 1/4ND, 1/16ND, 1/64ND                                                                                  |
| ECC Filter            | 3200K, 4300K, 5600K, 6300K, 8000K                                                                             |
| Shutter (Preset Mode) | 1/100, 1/250, 1/500, 1/1000, 1/2000 second, CCFRM (59.94i)                                                    |
|                       | 1/60, 1/250, 1/500, 1/1000, 1/2000 second, CCFRM (50i).                                                       |
| Lock Scan             | 1/59.94 to 1/11,238 second, 1.07 to 0.03 second (59.94i).                                                     |
|                       | 1/50.00 to 1/9,375 second, 1.28 to 0.04 second (50i).                                                         |
| Shutter (AES Mode)    | Automatic video level control by shutter speed. AES controls amount of light in equivalent to 4 lens F-stops. |
| Gain Select           | L (low) -3 to 0dB                                                                                             |
|                       | M (medium) 0 to +21dB, 3dB steps.                                                                             |
|                       | H (high) +3 to +36dB, 3dB steps.                                                                              |
| Dimensions (W×H×L)    | 99×105×155mm (excluding protrusions)                                                                          |
| Operating Temperature | -10 to 45°C                                                                                                   |
| Storage Temperature   | -20 to 60°C                                                                                                   |
| Power Consumption     | ~17W (12VDC)                                                                                                  |
| Weight                | ~1.5kg (3.3lbs)                                                                                               |
| Inputs/Outputs        | UC OUT — HD-SDI BNC                                                                                           |
|                       | SDI OUT — HD-SDI BNC (Character On/Off)                                                                       |
|                       | GL IN — BNC (Tri-Level or Black Burst)                                                                        |
|                       | REMOTE1 — 4-Pin Multi (remote control panel)                                                                  |

| Item               | Specification                      |
|--------------------|------------------------------------|
|                    | REMOTE2 — RJ-45 (remote control)   |
|                    | VF OUT — DB15 (viewfinder)         |
|                    | LENS — 12-pin Multi (lens control) |
| Default IP Address | 192.168.1.10                       |

## Ports


### LENS

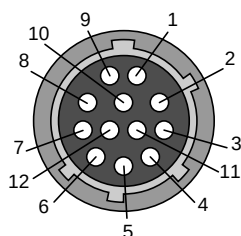

**Table 3: LENS Port Pinouts**

| Pin | Signal        |
|-----|---------------|
| 1   | AUX SW        |
| 2   | CALL TRG      |
| 3   | GND           |
| 4   | ENF AUTO      |
| 5   | IRIS CONTROL  |
| 6   | +12V          |
| 7   | IRIS POSITION |
| 8   | IRIS A/R      |
| 9   | EXTENDED      |
| 10  | ZOOM POS      |
| 11  | F POS / L TX  |
| 12  | L RX          |


### REMOTE1

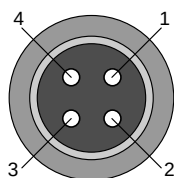

**Table 4: REMOTE1 Port Pinouts**

| Pin | Signal      |
|-----|-------------|
| 1   | +12V output |
| 2   | SD input    |
| 3   | SD output   |
| 4   | SD GND      |


### VF OUT

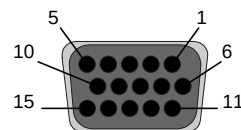

**Table 5: VF OUT Port Pinouts**

| Pin | Signal              |
|-----|---------------------|
| 1   | Pr OUT              |
| 2   | Y OUT               |
| 3   | Pb OUT              |
| 4   | SYNC OUT            |
| 5   | VF DET              |
| 6   | GND                 |
| 7   | Y SHIELD            |
| 8   | PEAKING CONT        |
| 9   | +12V OUT            |
| 10  | +12V OUT            |
| 11  | CPU DATA IN         |
| 12  | STRB1/R TALLY       |
| 13  | STRB2/G TALLY       |
| 14  | CPU DATA OUT        |
| 15  | CPU CLK/PEAKING SEL |

### DC IN

 

**Table 6: DC IN Port Pinouts**

| Pin | Signal  |
|-----|---------|
| 1   | GND     |
| 2   | NC      |
| 3   | NC      |
| 4   | +12V In |

---

# Index

## B

Back Focus [11](#)  
Black Balance [12](#)

## D

DashBoard, connecting [15](#)

## F

Filter [11](#)  
Flange Back Distance (FBD) [11](#)

## G

Grayscale Adjustment [13](#)

## I

IP Address [14](#)

## L

Lenses [11](#)

## M

Menu System [17](#)

## N

Network Settings [14](#)

## R

RS-232 [25](#)

## S

Serial Communications. [25](#)  
Shutter Mode [13](#)

## V

Viewfinder Display [16](#)

## W

White Balance [12](#)  
White Shading [11](#)