



PIVOTCam-20 Video Outputs/Control

Nport® 5150A Default Ethernet Settings

IP Address — 192.168.127.254
Port — 4001

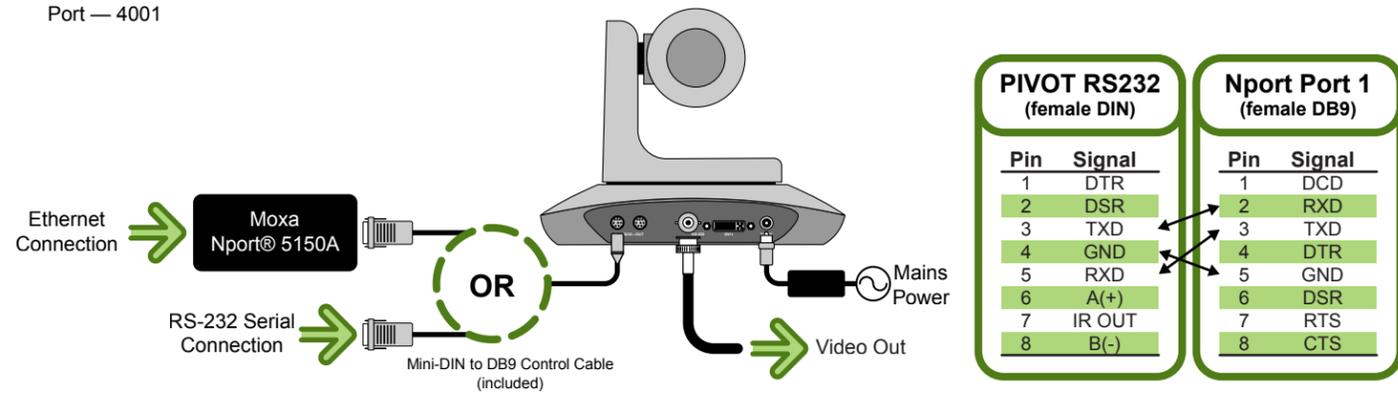

PIVOTCam-20 Daisy Chaining

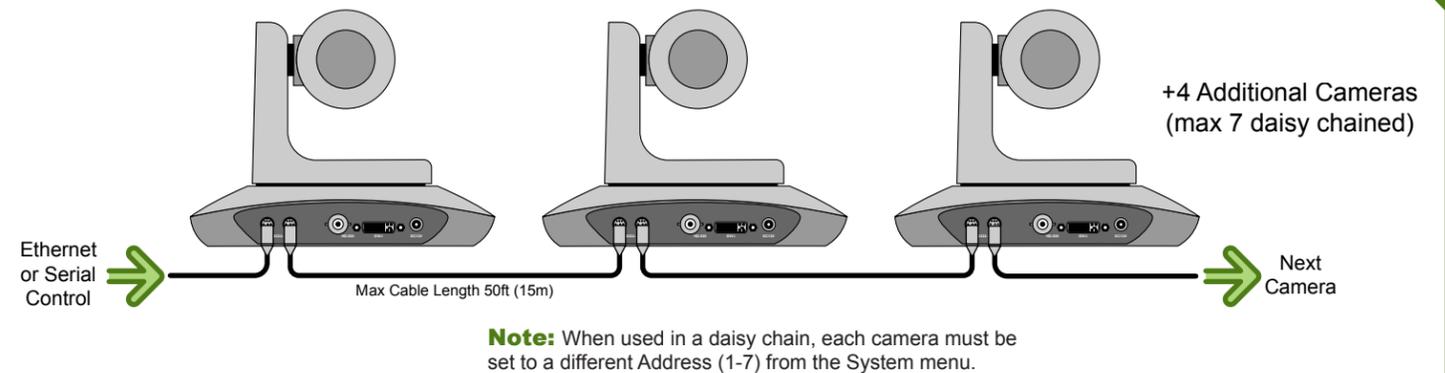


PIVOTCam-SE Video Input/Outputs/Reference/Control


Note: The PIVOTCam-SE accepts PoE (Power over Ethernet) and can be powered either by the ethernet connection or the mains power connection. Both can be connected at the same time.

PIVOTCam-SE Default Ethernet Settings

IP Address — 192.168.1.188
Port — 52381

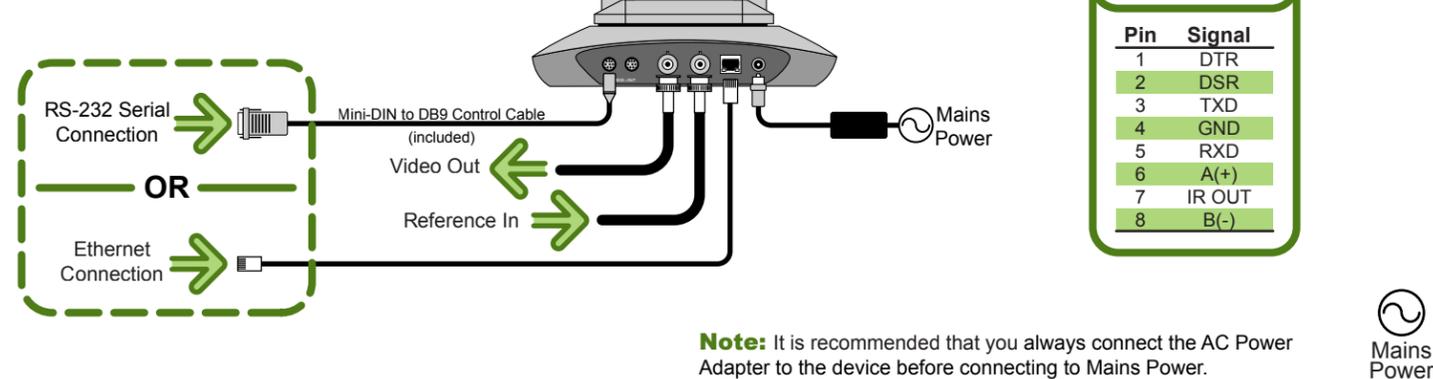

PIVOTCam-SE Daisy Chaining

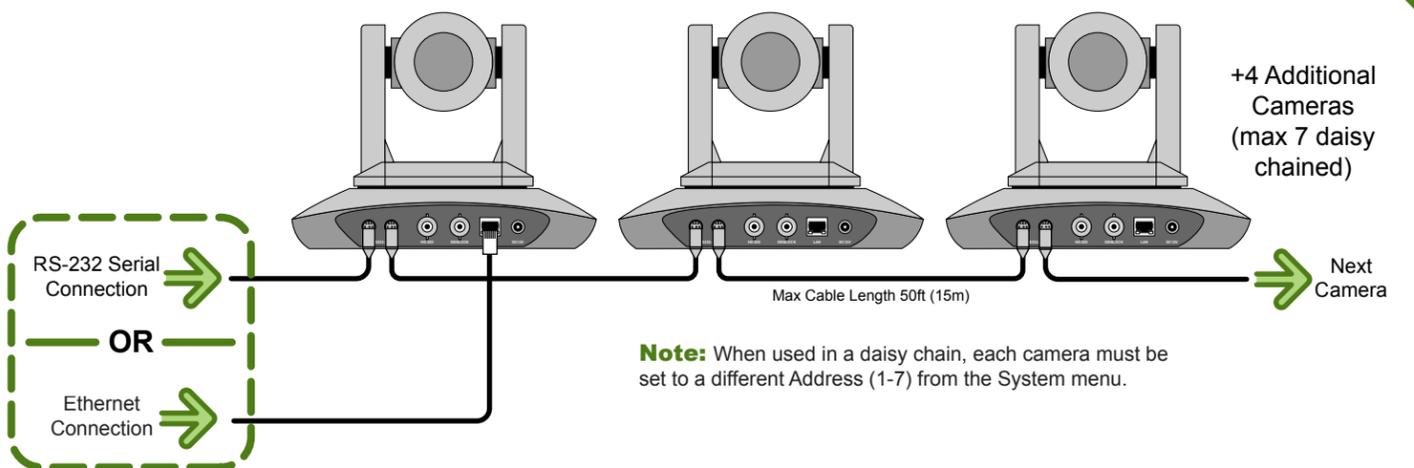

Moxa Nport® 5150A Setup (PIVOTCam-20 Only)

Refer to the documentation that came with your Nport® 5150A for safety and setup information.

Use the NPort Administrator or web interface to set up the Nport® 5150A as follows: (The default password is **moxa**)

Operation Mode

Operation Mode — TCP Server Mode
Max Connection — 2 (or more)

Serial Parameters

Baudrate — 9600
Data bits — 8
Stop bits — 1
Parity — None
Flow control — RTS/CTS
FIFO — Enable
Interface — RS-232

Ethernet Parameters

IP Address — default IP is shown on the bottom of the device
Local TCP Port — 4001 (default)

PIVOTCam-20 Setup

Set up the PIVOTCam-20 to communicate with the Moxa Nport® 5150A as follows:

SYSTEM
RS485 — set to OFF
BAUD RATE — set to 9600

PIVOTCam-SE Setup

Set up the PIVOTCam-SE as follows:

SYSTEM (Serial Communication)
RS485 — set to OFF
BAUD RATE — set to 9600
VISCA — OVER COM
SYSTEM (Ethernet Communication)
VISCA — OVER IP



Having a problem? Call our free, 24-hour technical support hotline to speak with a live product specialist located right here in our facility.

Tel (North America): 1-844-652-0645
Tel (International): +800 1005 0100
Email: techsupport@rossvideo.com