

Rack Mounting

1 Rack Mount

Unpack and mount your Ultracool in a 19" wide EIA equipment rack.

Note: If Ultracool will be used with an Ultrix router, ensure to install the Ultracool directly above the router.

Network Cabling

2 LAN or Network Connection

Plug an Ethernet cable from your network into the **ENET** port. This is the network connection for Ultracool.

Note: Ultracool must be connected to the same network as the other devices in your routing system.


Power Cabling

3 3a Connect the supplied power supply DC cable into the **PWR1** socket.

3b If available, connect the redundant power supply DC cable into the **PWR2** socket.

CAUTION: Connect the DC Power of the power supply to the PSU port(s) on the Ultracool chassis before connecting the power supply to the power source.

Note: The Ultracool powers on automatically when a power supply is plugged in.

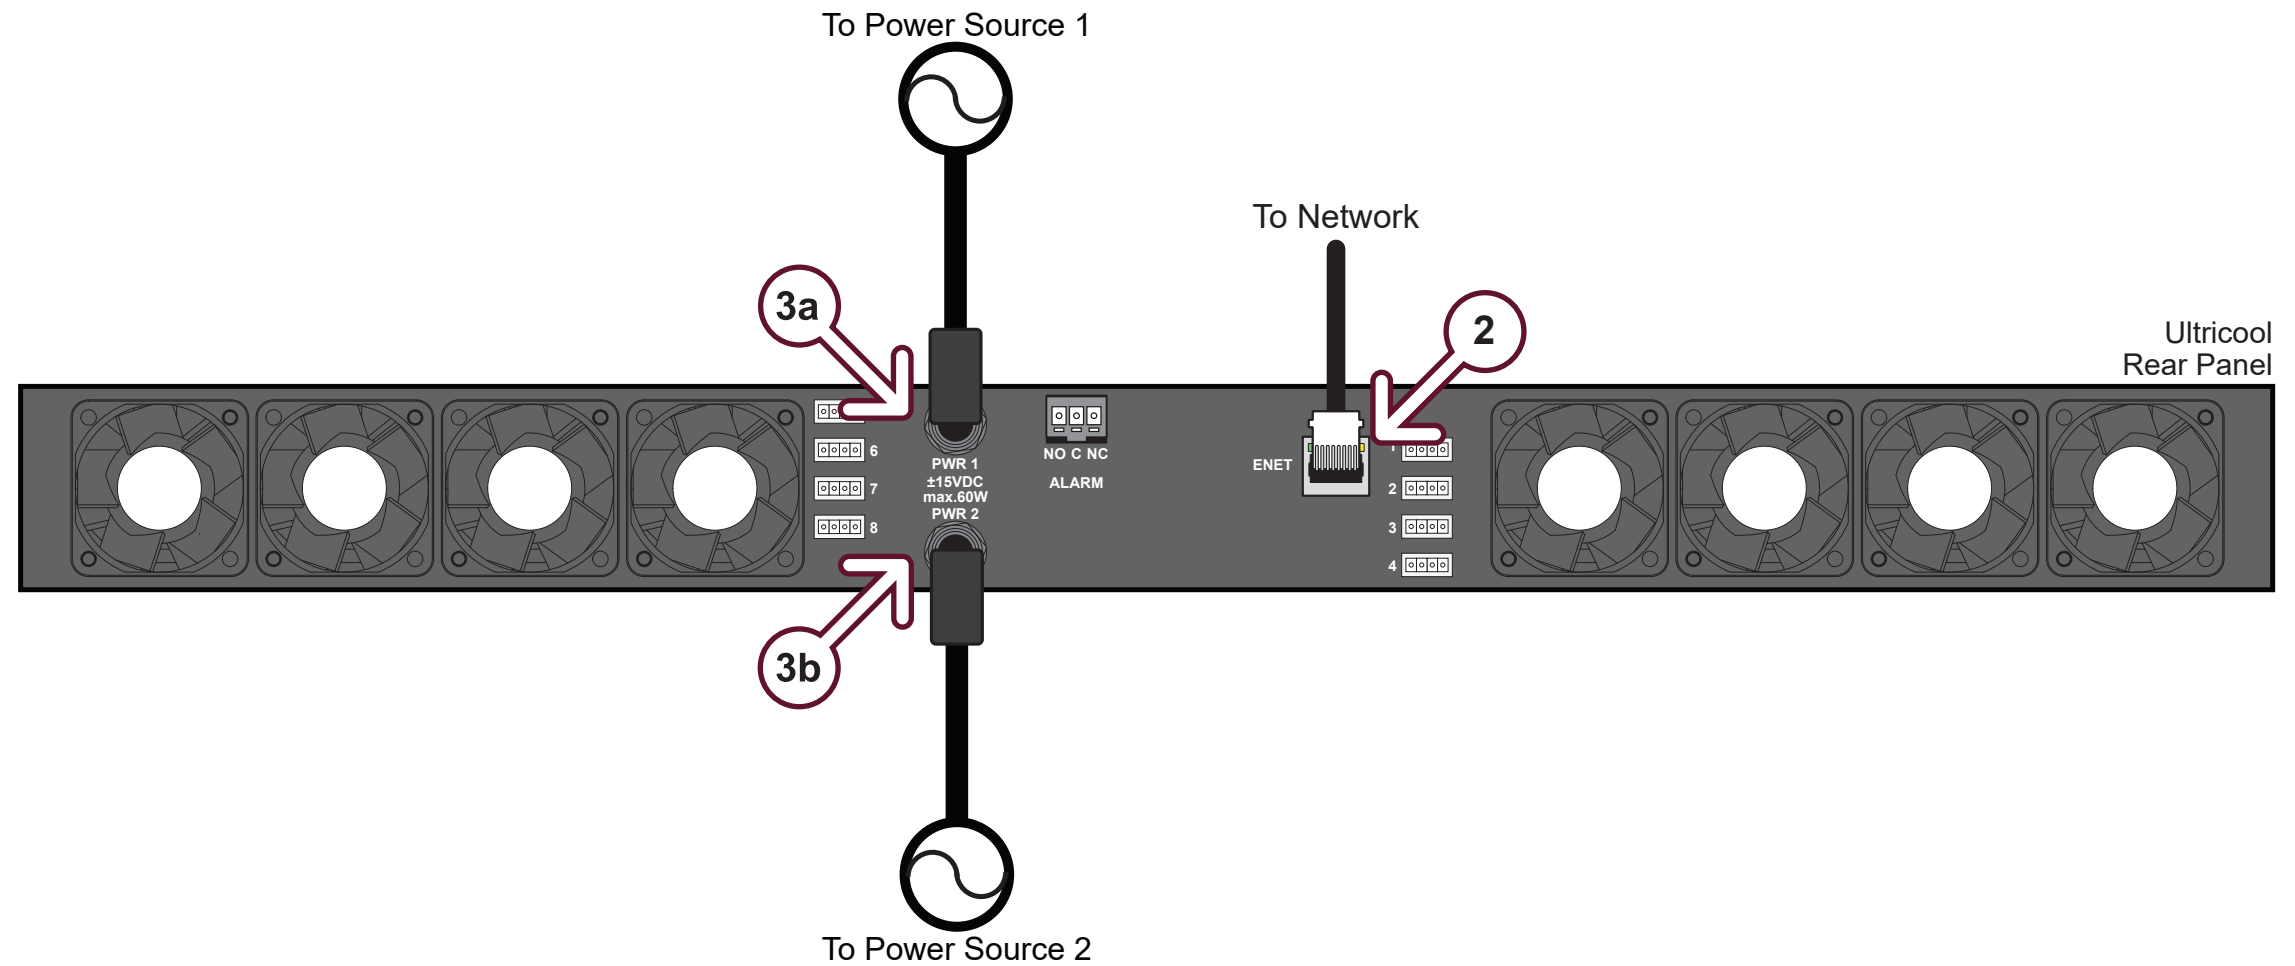

Setting the IP Address

- 4a Launch DashBoard on your PC desktop.
- 4b Select **File > Show Walkabout**.
- 4c Click **Refresh**.
- 4d Locate the Ultracool in **Walkabout**.
- 4e Use the **Address** field to specify the IP address. The default is 192.168.20.125.
- 4f Click **Reboot**.
- 4g Refer to the *Ultracool User Guide* for additional steps.

Ultrix Communications

- 5a Launch DashBoard on your PC desktop.
- 5b Double-click the Ultracool sub-node.
- 5c Select the **Setup** tab.
- 5d Set the **Fan Speed** to **Auto**.
- 5e Set the **Device Control** to **Manual IP**.
- 5f Use the **Ultrix IP Address** to specify the address of the Ultrix router that will control the Ultracool.
- 5g Press **Enter**.
- 5h Click **Apply** to establish connection.