

Technical Support (+1) 613 • 652 • 4886
techsupport@rossvideo.com

Rack Mounting

1 Rack Mount

Unpack and use the supplied Rack Mount Kit to mount your Ultracore panel in a 19" wide EIA equipment rack.

*Note: The supplied Rack Mount Kit **MUST** be used to mount your Ultracore Panel in a 19" EIA equipment rack to avoid damaging the Ultracore panel.*

Network Cabling

2 LAN or Network Connections

2a Plug an Ethernet cable from your network into **ETHERNET PORT 1**. This is the primary network connection for the Ultracore.

2b If required, plug an Ethernet cable from your network into **ETHERNET PORT 2**. This is the backup network connection for the Ultracore.

Note: The Ultracore must be connected to the same network as your routing system.


T-Bus Cabling

3 T-Bus Cabling (if required)

3a Connect a Ross NK series device to one T-Bus port of the Ultracore panel.

3b Connect a Ross NK series device to the second T-Bus port on the Ultracore panel.

Note: Passive loop-through connectors.

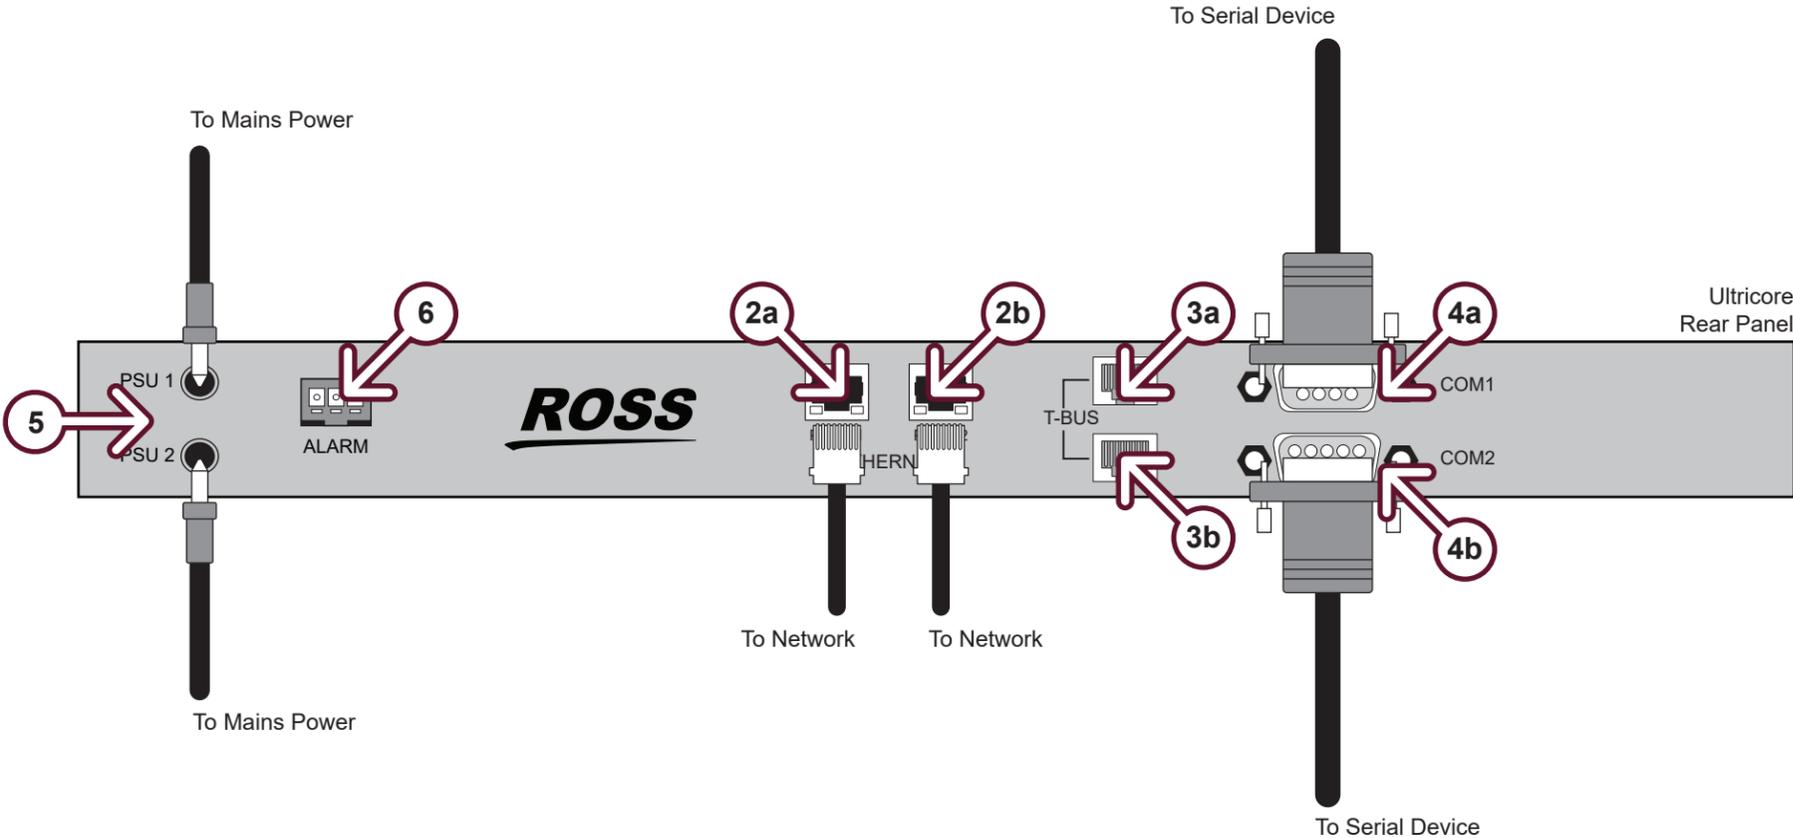

4 Serial COM Cabling

Serial Cabling (if required)

4a Connect one end of an RS-232 or RS-422 cable to **COM1**, and the other end to the serial device the Ultracore will communicate with.

4b Connect one end of an RS-232 or RS-422 cable to **COM2**, and the other end to the second serial device the Ultracore will communicate with.

5 Power Cabling

Power

Connect an **Ultracore power supply** to one (or both) **PSU Port** on the Ultracore panel and then to Mains Power.

Note: The Ultracore panel powers on automatically when the power supply is plugged in.

6 System Alarm Setup

Configure the ALARM GPIOs

Contact closure alarm where closed is a system fault, and open is the system running correctly without errors.

GPO ALARM Pinouts	
PIN 1	Ground
PIN 2	Alarm Output
PIN 3	+5VDC 22mA max.

ALARM

7 Setting the IP Address

7a Launch DashBoard on your PC desktop.

7b Select **File > Show Walkabout**.

7c Click **Refresh**.

7d Locate the Ultracore in the **Walkabout** table.

7e Use the **Address** field to specify the IP address. The default is 192.168.20.150. *Note: Ultracore does not support Unicode characters.*

7f Click **Reboot**.

7g Refer to the *Ultracore User Guide* for additional steps.