

Before You Begin

CAUTION: Do not exceed 1200W total power for all connected devices.

Refer to the **ULTRIX Quick Start Guide** that came with your router for additional install details.

Rack Mounting


1 Rack Mount
Unpack and use the supplied Rack Mount Kit to mount your Ultripower in a 19" wide EIA equipment rack.
Note: The supplied Rack Mount Kit **MUST** be used to mount your Ultripower in a 19" EIA equipment rack to avoid damaging the Ultripower chassis.

Network Cabling

2 LAN or Network Connection
Plug an Ethernet cable from your network into the **ETHERNET** port. This is the network connection for Ultripower.
Note: Ultripower must be connected to the same network as the other devices in your routing system.

ULTRIX-FR2 Cabling

3 Connecting an ULTRIX-FR2
3a Connect the female end of the power cable to an OUT port on the Ultripower.
NOTE: Ensure that the power cable end with the ferrite bead connects to the Ultripower port.
3b Connect the other end of the same cable to a PSU port on the ULTRIX-FR2 rear panel.
3c Repeat steps 3a and 3b for the second OUT port.

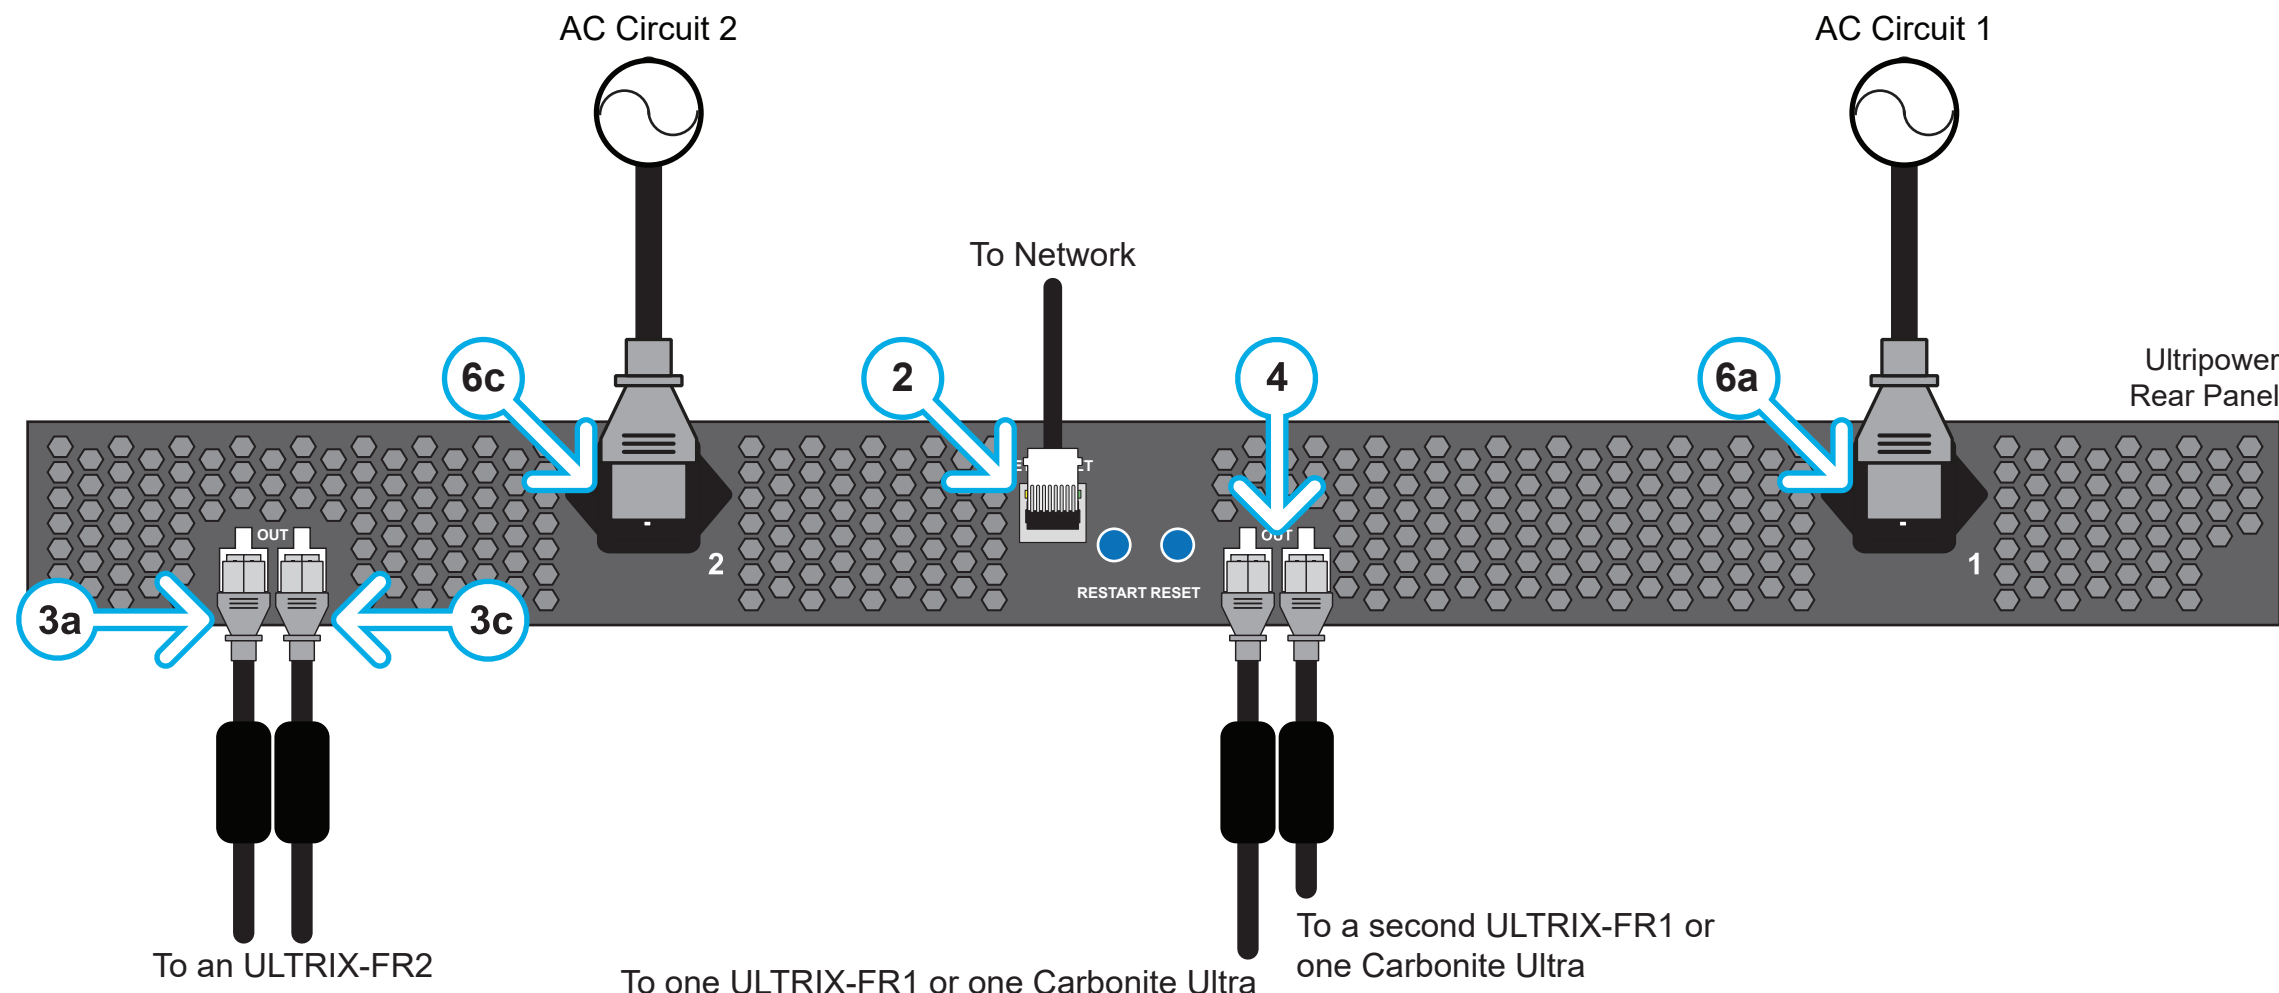

ULTRIX-FR1 Cabling

4 Connecting an ULTRIX-FR1
4a Connect the female end of the power cable to an OUT port on the Ultripower.
NOTE: Ensure that the power cable end with the ferrite bead connects to the Ultripower port.
4b Connect the other end of the same cable to a PSU port on the ULTRIX-FR1 rear panel.
NOTE: This procedure also applies when installing the Carbonite Ultra.

Populating Slot 1 (optional)

5 Installing PSU Module in Slot 1
5a Remove the blank plate from Slot 1 on the Ultripower front panel.
5b Align the new PSU module into Slot 1.
5c Slide the new PSU module into Slot 1 to engage it with the interior midplane.
5d Fully tighten the module retaining bolts to secure the module to the chassis.

AC Power Cabling

6 AC Power Cabling
6a Connect the female end of the power cable to the remaining power socket.
6b Connect the other end of the power cable to a suitable AC mains supply.
6c Repeat steps 6a and 6b if Slot 2 is populated.
NOTE: The two power supply modules should be on separate AC supplies.

Setting the IP Address

7
7a Launch DashBoard on your PC desktop.
7b Select **File > Show Walkabout**.
7c Click **Refresh**.
7d Locate the Ultripower in **Walkabout**.
7e Use the **Address** field to specify the IP address. The default is 192.168.20.123. **Note:** Ultripower does not support Unicode characters.
7f Click **Reboot**.
7g Refer to the **Ultripower User Guide** for additional steps.



NOTICE When using an Ultripower with an ULTRIX-FR5, the ULTRIX-FR5 must run Ultrix software version 3.43 or higher.

Before You Begin



CAUTION: Do not exceed 1200W total power for all connected devices.

?

Refer to the **ULTRIX-FR5 Quick Start Guide** for more information on installing the ULTRIX-FR5.

Rack Mounting

1

Rack Mount

Unpack and use the supplied Rack Mount Kit to mount your Ultripower in a 19" wide EIA equipment rack.

Note: The supplied Rack Mount Kit **MUST** be used to mount your Ultripower in a 19" EIA equipment rack to avoid damaging the Ultripower chassis.


Network Cabling

2

LAN or Network Connection

Plug an Ethernet cable from your network into the **ETHERNET** port. This is the network connection for Ultripower.

Note: Ultripower must be connected to the same network as the other devices in your routing system.

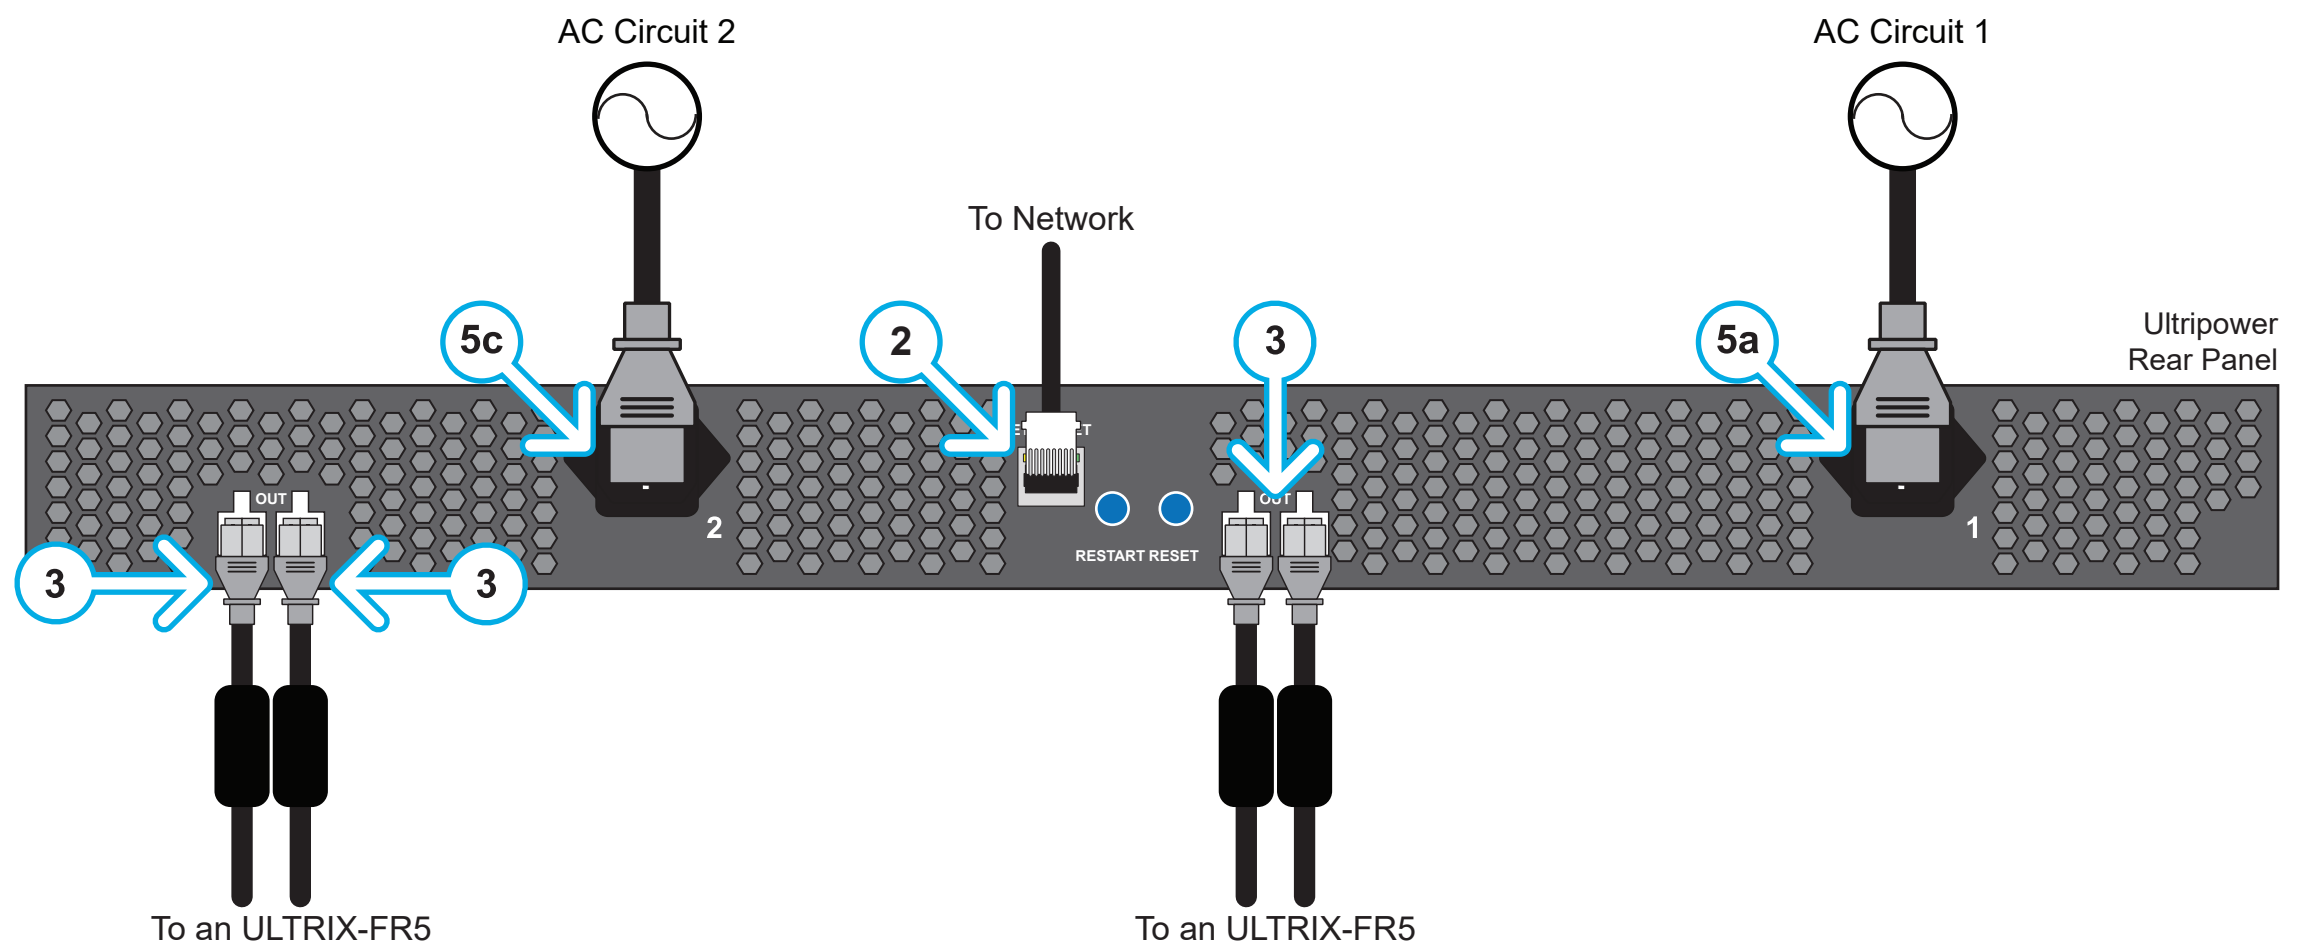

ULTRIX-FR5 Cabling

3

Connecting an ULTRIX-FR5

3a Connect the female end of the power cable to an OUT port on the Ultripower.

NOTE: Ensure that the power cable end with the ferrite bead connects to the Ultripower port.

3b Connect the other end of the same cable to a PSU port on the ULTRIX-FR2 rear panel.

3c Repeat steps 3a and 3b for the three remaining OUT ports.

Populating Slot 1

4

Installing PSU Module in Slot 1

4a Remove the blank plate from Slot 1 on the Ultripower front panel.

4b Align the new PSU module into Slot 1.

4c Slide the new PSU module into Slot 1 to engage it with the interior midplane.

4d Fully tighten the module retaining bolts to secure the module to the chassis.

AC Power Cabling

5

AC Power Cabling

5a Connect the female end of the power cable to the remaining power socket.

5b Connect the other end of the power cable to a suitable AC mains supply.

5c Repeat steps 6a and 6b if Slot 2 is populated.

NOTE: The two power supply modules should be on separate AC supplies.

Setting the IP Address

6

6a Launch DashBoard on your PC desktop.

6b Select **File > Show Walkabout**.

6c Click **Refresh**.

6d Locate the Ultripower in **Walkabout**.

6e Use the **Address** field to specify the IP address. The default is 192.168.20.123. *Note: Ultripower does not support Unicode characters.*

6f Click **Reboot**.

6g Refer to the **Ultripower User Guide** for additional steps.

?

Have a question? Call our free, 24-hour technical support hotline to speak with a live product specialist located right here in our facility.

Tel: (+1) 613 • 652 • 4886

Email: techsupport@rossvideo.com