

Rack Mounting

1

Rack Mount

Unpack and use the supplied Rack Mount Kit to mount your Streamline Server in a 19" wide by 30" deep EIA equipment rack.

*The supplied Rack Mount Kit **MUST** be used to mount your Streamline Server in a 19" x 30" EIA equipment rack to avoid damaging the Streamline Server.*

2

Power

Connect an **AC Power Cord** to each **AC Port** on the Streamline Server and then to Mains Power.

The Streamline Server power supplies are auto-sensing and can use either 110 VAC or 220 VAC. Streamline Servers are equipped with two power supplies in a redundant configuration. Only one power supply is required to run the Streamline Server.

Peripheral Cabling

3

Keyboard and Mouse

3a Plug the supplied **Keyboard** into the left **USB** port on the back of the Streamline Server.

3b Plug the supplied **Mouse** into the right **USB** port on the back of the Streamline Server.




Note: KVM extenders (customer supplied) are required when the Streamline Server monitor, keyboard, and mouse are located remotely from the rack room.

4

Monitor

Connect a **Monitor** (customer supplied) to the **VGA** port of the Streamline Server.

Note: KVM extenders (customer supplied) are required when the Streamline Server monitor, keyboard, and mouse are located remotely from the rack room.

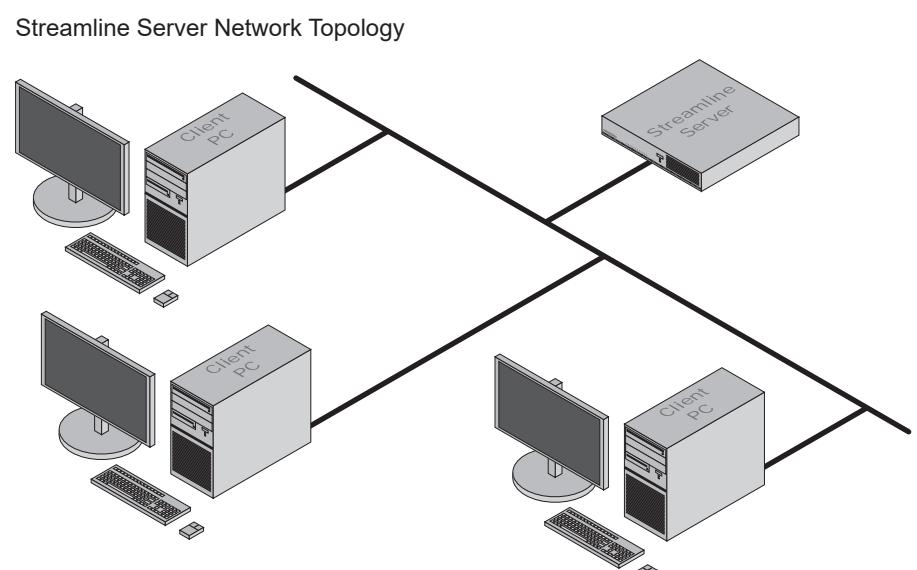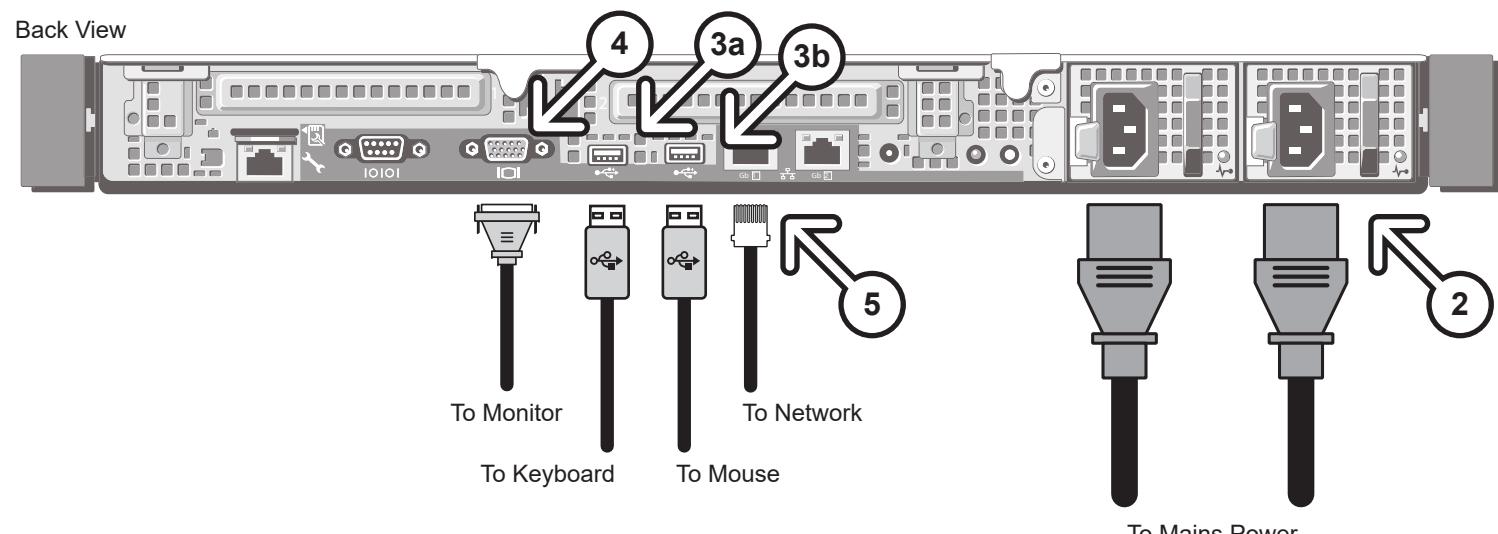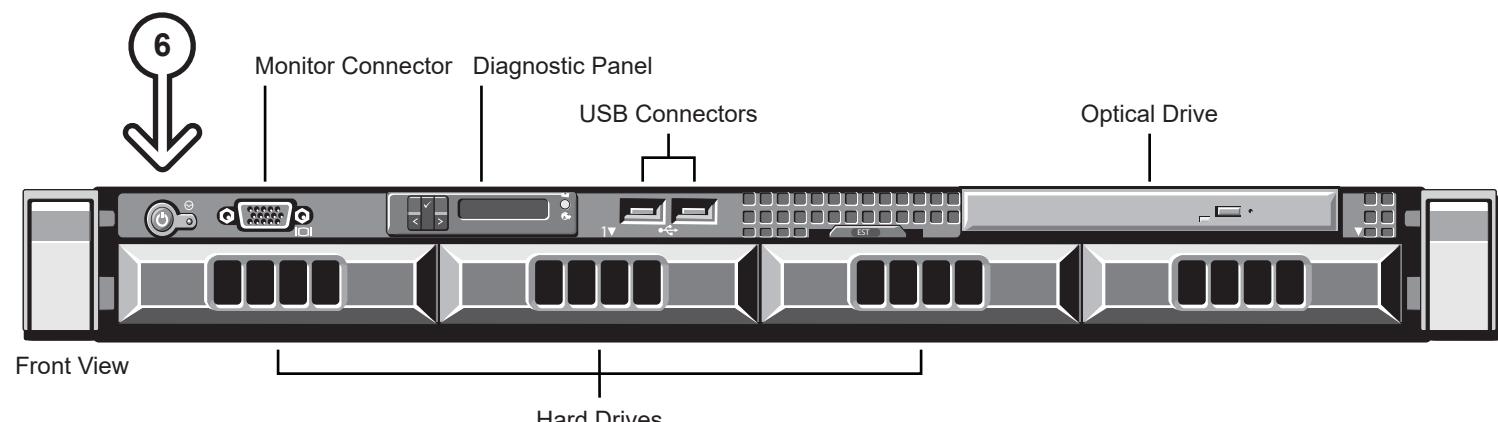

Need Help?

Technical Support: (+1) 613 • 652 • 4886
Email: techsupport@rossvideo.com