≽pro-xi[®] 100

Quick Start Guide



Default Settings

- All pro-xi units come with the following pre-configured settings: · all ISC cards are configured for auto-resolution and DVI input
- the system's output resolution is set to 1920x1080
- the system's IP address is set to 192.168.0.3

Note: If your sources are not DVI or your output resolution is not 1920x1080, use the pro-xi configuration utility to reconfigure your pro-xi system. Refer to the pro-xi User Guide for more information.

Connect Input Systems

- 1. Connect each incoming system's keyboard using a standard USB "A/B" cable.
- 2. Connect each incoming system's mouse using a standard USB "A/B" cable.



- 3. Connect each incoming system's video output using a standard DVI cable (use adapters to convert HDMI to DVI).
- 4. Connect each incoming system's audio "line out" using a standard 3.5mm stereo audio cable (optional).



Connect Mouse and Keyboard

- 1. Connect the pro-xi mouse and keyboard to the CTC card. 2. Connect audio out to speakers or other audio monitoring device
- using a standard 3.5mm stereo audio cable (optional). **Note:** An ethernet connection is not required for operation.





Connect Monitors

- 1. Use a standard DVI cable to connect the primary monitor to VOC1.
- 2. If VOC2 is installed, connect the second monitor using a standard DVI cable (use adapters to convert DVI to HDMI).

Primary Monitor-Secondary Monitor



2. For redundancy, connect AC inputs "A" and "B" into separate AC power legs.



Before configuring the pro-xi 100 system, you must download and install the proxi-app utility from our website. This utility can be installed on any computer running the Microsoft® Windows® XP, Windows® Vista, Windows® 7, Windows® 8, and Windows® 10 operating systems. Refer to the pro-xi 100 User Guide for more information on this utility.

Take Control of a System

Reposition Windows

- - 3. Drag or move the window.

Resize Windows

- cursor appears.

Create and Reposition a Sub-Window

Save a Layout Shift + F2 thru F12 Whenever you save a layout to any function key, you override any previously saved layouts on that key. F1 is is reserved for a permanent 'home' key. **Note:** When you change inputs, add a new ISC, or remove an ISC, you will need to recreate and re-save your desired layouts to each function key.

Recall a Layout F1 thru F12

Have a question? Call our free, 24-hour technical support hotline to speak with a live product specialist located right here in our facility Tel: (+1) 613 • 652 • 4886 Email: techsupport@rossvideo.com

PRO100DR-002-02

nies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publica achanical, photocopying, recording or otherwise, without the prior written permission blication may be reproduced, stored in a retrieval system, or transmitted nission of Ross Video. While every precaution has been taken in the pre sibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the

Before you set up and operate your pro-xi 100 Workstation Integrator see the "Important Regulatory and Safety Notices" that shipped with your unit. It is also recommended to refer to the pro-xi 100 User Guide. The pro-xi 100 User Guide is available for download from

Install the proxi-app Utility

Quick Operations

Double-left-click on the selected window.

Take Control of a System and Bring it Full-Size

Shift + Double-left-click on the selected window.

Release Control of a System

Shift + right-click (returns you to the desktop interface of the pro-xi 100 unit).

1. Click anywhere on the window to select it.

2. Grab the window by placing the cursor anywhere along the top edge of the window until the "move window" cursor appears.

1. Click anywhere on the window to select it.

2. Place the cursor on the bottom-right corner until the "resize window"

3. Drag to resize the window.

1. Click and hold the right mouse button within the target window.

2. Drag the cursor over the desired target area.

3. Press the Ctrl button and then release the right mouse button.

This creates a sub-window in the center of the screen.

4. Reposition and/or resize the sub-window as desired.

Note: Each incoming system can display a single sub-window.

