


Ports and Connectors

Note: Reference to any ASUS products, services, processes, or other information and/or use of ASUS Trademarks does not constitute or imply endorsement, sponsorship, or recommendation thereof by ASUS.

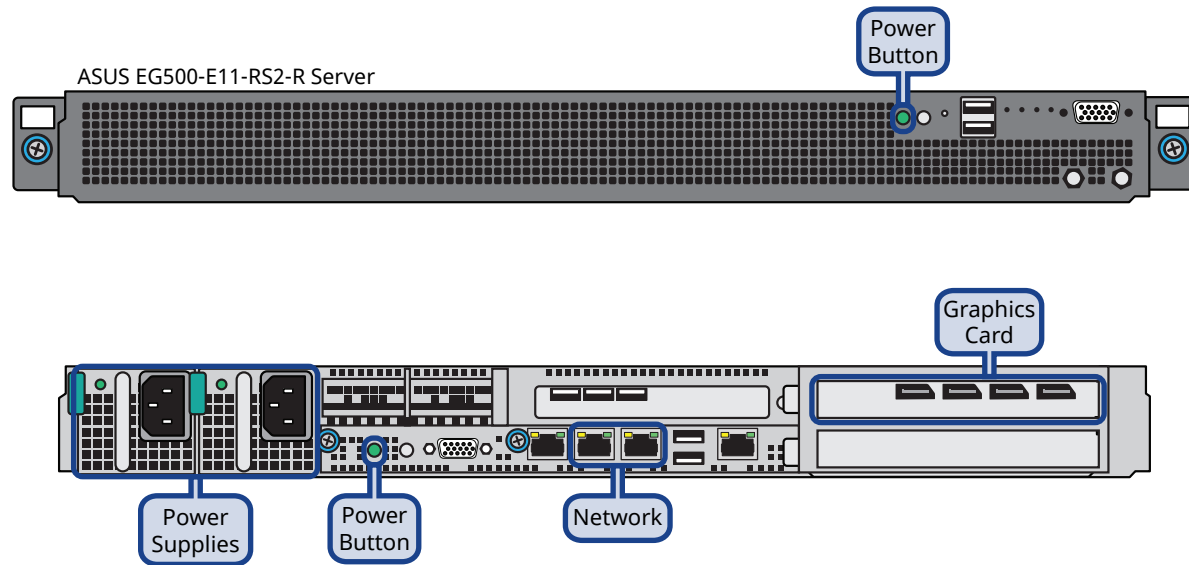

Notes:

- Only the two RJ45 ports indicated can be used for an ethernet connection. The remaining parts are for server management.
- The licensing dongle is located inside the server chassis. Refer to the ASUS® EG500-E11 Series documentation for information on removing the chassis cover.
- Refer to the documentation included with the King Slide® rack rails for instructions on properly racking the chassis.
- If a monitor is not connected to the graphics card, a DisplayPort emulator should be used.

Specifications

Power Consumption	
Minimum	160W
Average	240W
Maximum	360W
Input Voltage	100-120V~ 220-240V~ 47-63Hz


Temperature	
Operating:	10 - 35°C (50 - 95°F)
Storage:	-40 - 60°C (-40 - 140°F)

Video Mode Formats	
720p	23.98/24/25/29.97/30/50/59.94/60Hz
1080i	50/59.94/60Hz
1080p	23.98/24/25/29.97/30/50/59.94/60Hz

Power and Control Cabling

Read the instruction manual for your ASUS® EG500-E11-RS2-R before starting work or operating equipment.

CAUTION: Wear an ESD grounding strap connected to the chassis thumb screw (Ground Point) before servicing the rear of the unit when power is on.

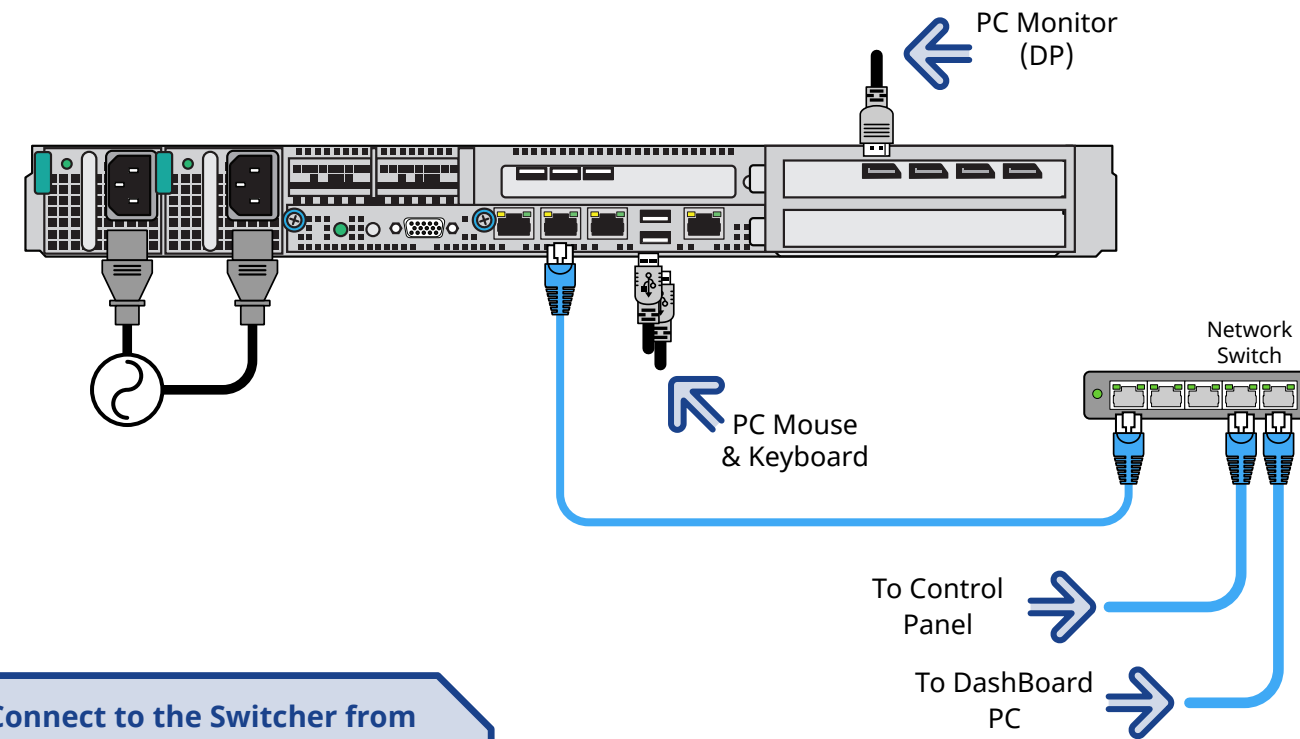

To Connect to the Switcher from Dashboard

1. Click **File > New > Manual Connection**.
2. In the **IP Address** field, enter the IP address of Carbonite, not the IP address of XPression.
3. Click **Detect Settings**.
4. Click **Finish**.



Note: It is recommended that you always connect the AC Power Adapter to the device before connecting to Mains Power.

