
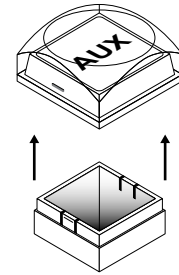


The Fixed buttons next to the 3-Knob menu are not user assignable but their functionality is different in an Acuity switcher. The button caps to be replaced are shown in dotted red and the replacement button cap is included in this kit.

Fixed Buttons - Menu

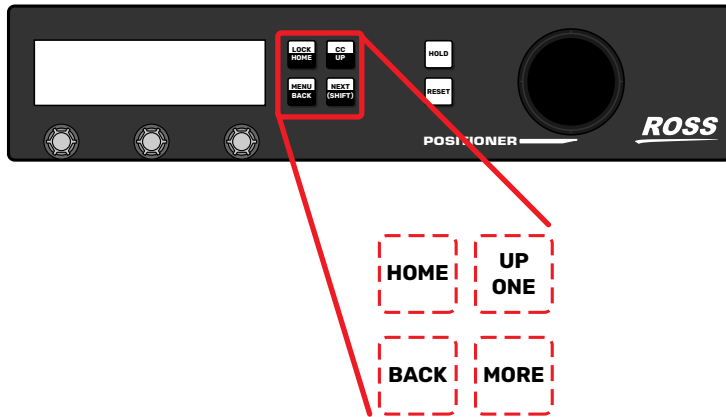

Printable Inserts

If you do not have the replacement button caps than came with your TD panel, you can create replacement inserts for your existing buttons.

Print this page out on a clear lexan and cut out the inserts shown below. Ensure that you print the page at **Actual Size** to ensure the inserts are the proper size.

