

# Calrec Sigma Digital Audio Mixing System

# Calrec Sigma Digital Audio Mixing System

## Requirements

- · Large Audio Mixer Interface Software Option
- Serial Interface Cables DB9 (Male)

#### **Port Connections**

	Switcher		Audio Mixer
Communications	REMOTE Port (female)	⇒	RS-422

#### **Pinouts**

Switcher	Calrec Sigma
2 (Rx-)	5 (Tx-)
3 (Tx+)	8 (Rx+)
7 (Rx+)	4 (Tx+)
8 (Tx-)	9 (Rx-)

# **Switcher Setup**

#### To Set Up Communications

- Press HOME ⇒ Setup ⇒ Installation ⇒ Com Setup ⇒
  Type.
  - Use the **Com Port** knob to select the **Remote X** port that you connected the Calrec Sigma to.
  - Use the **Device** knob to select **Audio Mixer**.
- 2. Press Select Device.
  - Use the **Device** knob to select **RAP**.
- 3. Press Com Type.
  - Use the **Type** knob to select **RS-422**.
- 4. Press Com Settings.
  - Use the Baud knob to select 115200.
  - Use the **Parity** knob to select **ODD**.
- 5. Press Extra Options.

Extra Options	Value
OD Master	M1 (default)
TargetMachine	Calrec

6. Press HOME ⇒ Confirm.

#### To Assign Audio Channels to BNCs

- 1. Press HOME ⇒ Setup ⇒ Installation ⇒ BNC ⇒ Audio.
- Use the BNC knob to select the Input BNC that you want to assign an audio channel to.
- **3.** Use the **Audio 1** knob to select an audio channel, or group, that you want to assign to the selected Input BNC.
- **4.** Use the **Audio 2** knob to select another audio channel, or group, that you want to assign to the selected Input BNC.
- **5.** Press **HOME** ⇒ **Confirm**.

Refer to your switcher manual for information on creating audio groups, or setting default audio levels.

## **Device Setup**

Ensure the port on the Calrec Sigma that is connected to the switcher is configured for RS-422.

# Compatibility

Audio Mixer	Version
Calrec Sigma Digital Audio Mixing System	
Switchers	
Synergy 1 SD	
Synergy Series SD	18.0 or higher
Synergy MD/X	8.2 or higher
Vision MD/X	8.2 or higher
Vision QMD/X	8.2 or higher
Vision MultiPanel Support	
Automation	
OverDrive	7.0 or higher
Port Expanders	
BSS4	✓
Comtrol DeviceMaster <sup>a</sup>	✓

 You must set Server/Client to Server on the Com Settings of the Communications Menu 1-2 when connecting to a Comtrol DeviceMaster.



