

Yamaha 01V96

Requirements

- Small Audio Mixer Interface Software Option
- SMC Serial to MIDI Converter
- MIDI Interface Cables (x2)
- Serial Interface Cables (DB9 to DB9)

Port Connections

| | Switcher | | SMC |
|-------------------|----------------------|---|----------------------|
| Serial Connection | REMOTE Port (female) | ⇒ | SERIAL Port (female) |
| | SMC | | Audio Mixer |
| MIDI Connection | MIDI Out | ⇒ | MIDI In |
| | MIDI In | ⇒ | MIDI Out |

Cable Connectors

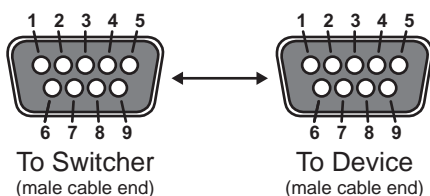


Figure 1 DB9 to DB9 Cable

Pinouts

| Switcher | SMC |
|----------|---------|
| 2 (Rx-) | 2 (Tx-) |
| 3 (Tx+) | 3 (Rx+) |
| 7 (Rx+) | 7 (Tx+) |
| 8 (Tx-) | 8 (Rx-) |

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **Remote X** port that you connected the SMC to.
 - Use the **Device** knob to select **Audio Mixer**.

2. Press **Select Device**.
 - Use the **Device** knob to select **Ya 01V96**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**.
4. Press **Com Settings**.
 - Use the **Baud** knob to select **38400**.
 - Use the **Parity** knob to select **NONE**.
5. Press **Extra Options**.

| Extra Options | Value |
|--------------------------|-------------|
| Converter | SMC |
| Mixers (ganged together) | 1 (default) |
| Version (of 01V96) | 1 (default) |
| Post-fade delay | 5 (default) |

6. Press **HOME** ⇒ **Confirm**.

To Assign Audio Channels to BNCs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **Audio**.
2. Use the **BNC** knob to select the Input BNC that you want to assign an audio channel to.
3. Use the **Audio 1** knob to select an audio channel, or group, that you want to assign to the selected Input BNC.
4. Use the **Audio 2** knob to select another audio channel, or group, that you want to assign to the selected Input BNC.
5. Press **HOME** ⇒ **Confirm**.

Refer to your switcher manual for information on creating audio groups, or setting default audio levels.

Device Setup

1. Press the **DIO/SETUP** function button in the **Display Access Group** to display the **DIO/SETUP Menu**.
2. Press the **MIDI/HOST** tab to display the **MIDI I/O HOST SETUP Menu**.
3. Use the **Cursor** buttons to navigate to the following (you will have to press **ENTER** after each selection):
 - Tx PORT - Use the Parameter Dial to set this to **MIDI**.
 - Rx PORT - Use the Parameter Dial to set this to **MIDI**.
4. Press the **MIDI** function button in the **Display Access Group** to display the **MIDI Menu**.
5. Press the **SETUP** tab to display the **MIDI SETUP Menu**.

6. Use the **Cursor** buttons to navigate to the following (you will have to press **ENTER** after each selection):

- Tx CH - Use the Parameter Dial to set this to **1**.
- Rx CH - Use the Parameter Dial to set this to **1**.

Note: If you are ganging multiple audio mixers, you must set the second Audio Mixer to **Tx CH 2** and **Rx CH 2**.

- Set the remaining parameters as indicated:

| Setting | Tx | Rx | OMNI | ECHO |
|----------------|-----|-----|------|------|
| Program Change | ON | ON | OFF | OFF |
| Control Change | OFF | OFF | OFF | -- |
| Param Change | ON | ON | -- | OFF |
| Bulk | -- | OFF | -- | -- |
| Other Commands | -- | -- | -- | OFF |

- Fader Resolution - Use the Parameter Dial to set this to **LOW**.

Compatibility

| Audio Mixer | Version |
|---------------------------|----------------|
| Yamaha 01V96 | -- |
| Switchers | |
| Synergy 1 SD | -- |
| Synergy Series SD | 12.0 or higher |
| Synergy MD/X | 6.0 or higher |
| Vision MD/X | 8.2 or higher |
| Vision QMD/X | 8.2 or higher |
| Vision MultiPanel Support | -- |
| Automation | |
| OverDrive | 2.0 or higher |
| Port Expanders | |
| BSS4 | ✓ |
| Control DeviceMaster | ✓ |