

Euphonix Audio Mixer

Requirements

- Large Audio Mixer Interface Software Option
- Serial Interface Cables (DB9 to DB9)

Port Connections

	Switcher		Audio Mixer
Communications	REMOTE Port (female)	⇒	RS-232

Cable Connectors

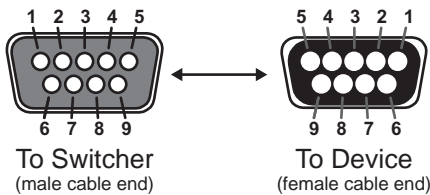


Figure 1 DB9 to DB9 Cable

Pinouts

Switcher	Euphonix
2 (Tx)	2 (Rx)
3 (Rx)	3 (Tx)
5 (Ground)	5 (Ground)

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **Remote X** port that you connected the Euphonix to.
 - Use the **Device** knob to select **Audio Mixer**.
2. Press **Select Device**.
 - Use the **Device** knob to select **RAP**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-232 (RS-232 NULL on the Synergy 1)**.
4. Press **Com Settings**.
 - Use the **Baud** knob to select **115200**.

- Use the **Parity** knob to select **ODD**.

5. Press **Extra Options**.

Extra Options	Value
OD Master	M1 (default)
TargetMachine	Euphonix

6. Press **HOME** ⇒ **Confirm**.

To Assign Audio Channels to BNCs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **Audio**.
2. Use the **BNC** knob to select the Input BNC that you want to assign an audio channel to.
3. Use the **Audio 1** knob to select an audio channel, or group, that you want to assign to the selected Input BNC.
4. Use the **Audio 2** knob to select another audio channel, or group, that you want to assign to the selected Input BNC.
5. Press **HOME** ⇒ **Confirm**.

Refer to your switcher manual for information on creating audio groups, or setting default audio levels.

Device Setup

Ensure the port on the Euphonix Audio Mixer that is connected to the switcher is configured for RS-232.

Compatibility

Audio Mixer	Version
Euphonix Audio Mixer	--
Switchers	
Synergy 1 SD	--
Synergy Series SD	18.0 or higher
Synergy MD/X	9.1 or higher
Vision MD/X	8.3 or higher
Vision QMD/X	8.0 or higher
Vision MultiPanel Support	--
Automation	
OverDrive	8.0 or higher
Port Expanders	
BSS4	✓



Port Expanders	
Control DeviceMaster ^a	✓

- a. You must set **Server/Client** to **Server** on the **Com Settings** of the **Communications Menu 1-2** when connecting to a Control DeviceMaster.