

Miranda Vertigo XG

Requirements

- Character Generator Interface Software Option
- Ethernet Cable

Port Connections

	Switcher		Character Generator
Video	Input BNC	⇒	Video Out BNC
Alpha	Input BNC	⇒	Alpha Out BNC

Switcher Setup

To Set Up Communications

- Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you assigned the Vertigo XG to.
 - Use the **Device** knob to select **CG**.
- Press **Select Device**.
 - Use the **Device** knob to select **VertigoXG**.
- Press **Com Type**.
 - Use the **Type** knob to select **Network TCP**.
- Press **Com Setting**.
- Use the **Client/Server** knob to select **Client**.
 - In the **Remote IP Address** field, enter the IP address of the Vertigo XG.
 - In the **Remote Port** field, enter **10001**. This value must be the same as is set from the Automation Configuration of Xplay.
- Press **Extra Options**.

Option	Value
Timeout	10 (default)

- Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

- Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the **Video** output of the Vertigo XG is connected to.

- Use the **Type** knob to select **CG**.
- Use the **Video Format** knob to select the video format of the **Video** output of the Vertigo XG.

- Press **More** ⇒ **More** ⇒ **Still/CG Setup**.

- Use the **BNC** knob to select **Input BNC**.
- Use the **CG** knob to select the Vertigo XG.
- Use the **Channel** knob to select the channel that you are using on the Vertigo XG.

- Press **HOME** ⇒ **Confirm**.

To Set Up Alpha Inputs

- Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.

- Use the **BNC** knob to select the input BNC that the **Alpha** output of the Vertigo XG is connected to.
- Use the **Type** knob to select **Alpha**.
- Use the **Video Format** knob to select the video format of the **Alpha** output of the Vertigo XG.

- Press **Alpha**.

- Use the **Mode** knob to select **Shaped**.

- Press **Auto Key Setup**.

- Use the **BNC** knob to select input BNC that the **Video** output of the Vertigo XG is connected to.
- Use the **Alpha** knob to select that the **Alpha** output of the Vertigo XG is connected to.

- Press **HOME** ⇒ **Confirm**.

Device Setup

- Run the **Vertigo XG**.
- Get the IP Address of the Vertigo XG. Refer to the **Miranda Vertigo XG** documentation for detailed information.
- Open the **Miranda Vertigo XG Dashboard** as follows:
- Click **Tools** ⇒ **Launch Dashboard**.
- Click on each listed channel to get the Device Name in the details.
- Run **Xplay**. The Device Name appears in the upper-right corner with a green dot, indicating it is connected.
- Click **Tools** ⇒ **Configure Automation**.
- Click **Xprotocol over TCP/IP** in the protocol mappings to set the **TCP Port** for a specific channel entry.



Video Production Technology

4999DR-072-06

OverDrive Application Notes

- Consult your Miranda Vertigo XG documentation for specific information on setting up Vertigo XG to operate with OverDrive.

Compatibility

Character Generator	Version
Miranda Vertigo XG	4.1
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	--
Vision MD/X	--
Vision QMD/X	16.0
Vision MultiPanel Support	--
Automation	
OverDrive	12.0
Port Expanders	
BSS4	✗
Comtrol DeviceMaster	✗