

Shotoku TR-8S Control System

Requirements

- Robotic Camera Control software option
- Serial Interface Cable (DB9 to DB9)

Port Connections

	Switcher		Robotic Camera
Communications	REMOTE Port (female)	⇒	RS422 Port (female)
Video	Input BNC	⇒	Output BNC

Cable Connectors

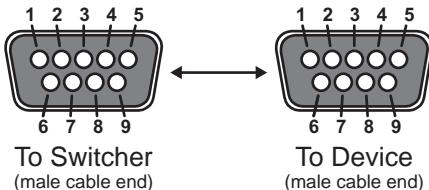


Figure 1 DB9 to DB9 Cable

Pinouts

Switcher	Shotoku TR-8S
2 (Rx-)	4 (Tx-)
3 (Tx+)	9 (Rx+)
7 (Rx+)	5 (Tx+)
8 (Tx-)	8 (Rx-)

Switcher Setup

To Set Up Communications

1. Press HOME ⇒ Setup ⇒ Installation ⇒ Com Setup ⇒ Type.
 - Use the **Com Port** knob to select the REMOTE X port that you connected the Shotoku TR-8S to.
 - Use the **Device** knob to select **Robotic Cam**.
2. Press **Select Device**.
 - Use the **Device** knob to select **Shotoku**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**.

4. Press **Com Settings**.

- Use the **Baud** knob to select **9600**.
- Use the **Parity** knob to select **ODD**.

5. Press **Extra Options**.

Extra Options	Value
Panel ID	5 (default)
Poll	All (default)
Pan/Tilt Damping	5 (default)
Pan/Tilt Speed	64 (default)
Zoom Speed	40 (default)
Focus Speed	15 (default)
Z Speed	64 (default)

6. Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the Video output of the camera being controlled by the Shotoku TR-8S is connected to.
 - Use the **Type** knob to select **Robotic Cam**.
 - Use the **Video Format** knob to select the video format of the video output of the camera.
2. Press **More** ⇒ **Camera Setup**.
 - Use the **Controller** knob to select the port that the Shotoku TR-8S is connected to.
 - Use the **Port** knob to select the port on the Shotoku TR-8S that the camera is connected to.
3. Press **Camera Options** and use the knobs to set the options.

Option	Description
Pan Invert	Use the Value knob to invert the direction that the camera moves when using the positioner (Yes), or not (No).
Tilt Invert	Use the Value knob to invert the direction that the camera moves when using the positioner (Yes), or not (No).
Zoom Invert	Use the Value knob to invert the direction that the camera zooms when using the positioner (Yes), or not (No).



Video Production Technology

4999DR-080-06

Option	Description
Focus Invert	Use the Value knob to invert the focus direction when using the positioner (Yes), or not (No).
Iris Invert	Use the Value knob to invert the iris direction when using the positioner (Yes), or not (No).
X Invert	Use the Value knob to invert the direction that the camera moves in the X-axis when using the positioner (Yes), or not (No).
Y Invert	Use the Value knob to invert the direction that the camera moves in the Y-axis when using the positioner (Yes), or not (No).
Z Invert	Use the Value knob to invert the direction that the camera moves in the Z-axis when using the positioner (Yes), or not (No).

4. Press **HOME** ⇒ **Confirm**.

Compatibility

Robotic Camera	Version
Shotoku TR-8S	--
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	--
Vision MD/X	--
Vision QMD/X	16.0
Vision MultiPanel Support	--
Automation	
OverDrive	12.0
Port Expanders	
BSS4	✓
Comtrol DeviceMaster	✓

