

## Sony BRC-H700 Robotic Camera

### Requirements

- Robotic Camera Control software option.
- Serial Interface Cable (DB9 to VISCA)

### Port Connections

|                | Switcher             |   | Robotic Camera           |
|----------------|----------------------|---|--------------------------|
| Communications | REMOTE Port (female) | ⇒ | VISCA RS-422 Port (male) |
| Video          | Input BNC            | ⇒ | Output BNC               |

### Cable Connectors

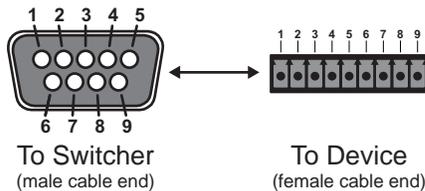


Figure 1 DB9 to VISCA Cable

### Pinouts

| Switcher | BRC-H700 |
|----------|----------|
| 2 (Rx-)  | 9 (Tx-)  |
| 3 (Tx+)  | 6 (Rx+)  |
| 7 (Rx+)  | 8 (Tx+)  |
| 8 (Tx-)  | 7 (Rx-)  |

**Note:** These pinouts do not match the Sony documentation but have been tested and verified by Ross Video.

### FlexDevice™ Installation

#### To Install the FlexDevice Driver

1. On your computer, open your Web Browser and, in the address bar, enter the IP address of your frame and press **Enter**.
2. Enter your username and password as follows when the **Login Dialog Box** appears. The default **Name** is **user** and **Password** is **password**.
3. Click **Other...** ⇒ **FlexDevices**.
4. Click **Browse**. A file selection dialog box is displayed.

5. Locate the FlexDevice driver file **Robo-Cam\_Sony x.x-###.tar.gz**.
6. Click **Open/Choose** to select the file.
7. Click **Install Driver** to upload and install the selected driver to the switcher.

#### To Initialize the FlexDevice Driver

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **FlexDevices**.
2. Press **Start Driver**.
3. Use the **Interface** knob to select **Panel0**.
4. Use the **Type** knob to select **FlexCAM**.
5. Use the **Driver** knob to select **Sony x.x**.
6. Press **Accept**. You must initialize a separate instance of a driver for each device you want to control from the switcher.

### Switcher Setup

#### To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
  - Use the **Com Port** knob to select the **REMOTE X** port that you connected the Sony BRC-H700 to.
  - Use the **Device** knob to select **FlexCAM**.
2. Press **Select Device**.
  - Use the **Device** knob to select **x\_Sony x.x**.
3. Press **Com Type**.
  - Use the **Type** knob to select **RS-422**.
4. Press **Com Settings**.
  - Use the **Baud** knob to select **9600**.
  - Use the **Parity** knob to select **NONE**.
5. Press **HOME** ⇒ **Confirm**.

#### To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
  - Use the **BNC** knob to select the input BNC that the Video output of the BRC-H700 is connected to.
  - Use the **Type** knob to select **Robotic Cam**.
  - Use the **Video Format** knob to select the video format of the Video output of the camera.
2. Press **More** ⇒ **Camera Setup**.



- Use the **Controller** knob to select the BRC-H700.
- Use the **Port** knob to select the port that you are using on the BRC-H700.

3. Press **Camera Options** and use the knobs to set the options.

| Option              | Description                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Pan Invert</b>   | Use the <b>Value</b> knob to invert the direction that the camera moves when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ).               |
| <b>Tilt Invert</b>  | Use the <b>Value</b> knob to invert the direction that the camera moves when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ).               |
| <b>Zoom Invert</b>  | Use the <b>Value</b> knob to invert the direction that the camera zooms when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ).               |
| <b>Focus Invert</b> | Use the <b>Value</b> knob to invert the focus direction when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ).                               |
| <b>Iris Invert</b>  | Use the <b>Value</b> knob to invert the iris direction when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ).                                |
| <b>X Invert</b>     | Use the <b>Value</b> knob to invert the direction that the camera moves in the X-axis when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ). |
| <b>Y Invert</b>     | Use the <b>Value</b> knob to invert the direction that the camera moves in the Y-axis when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ). |
| <b>Z Invert</b>     | Use the <b>Value</b> knob to invert the direction that the camera moves in the Z-axis when using the positioner ( <b>Yes</b> ), or not ( <b>No</b> ). |

4. Press **HOME** ⇒ **Confirm**.

## Device Setup

The bottom switches on the BRC-H700 that is connected to the switcher must be set as follows:

| Button | Value                                                             |
|--------|-------------------------------------------------------------------|
| 1      | Set to <b>ON</b> for 50i, or <b>OFF</b> for 59.94i signal format. |
| 2      | Set to <b>ON</b> for RS-422 communication                         |
| 3      | Set to <b>ON</b> for 38400 baud rate                              |
| 4      | Infra-red signal control ( <b>OFF</b> ) disables the control      |

Refer to the Sony manual for information on setting the other bottom buttons on the camera.

If you are daisy chaining multiple Sony BRC-H700s together, use the following pinouts to connect the one camera to the next.

| VISCA Out | VISCA In |
|-----------|----------|
| 1 (Rx-)   | 8 (Tx -) |
| 2 (Rx+)   | 9 (Tx+)  |
| 3 (Tx-)   | 6 (Rx-)  |
| 4 (Tx+)   | 7 (Rx+)  |
| 5 (Gnd)   | 5 (Gnd)  |

## Device Operation

Available settings on the Sony BRC-H700 are dependent on the current configuration of the camera. Refer to the following table for settings and dependencies.

| Setting       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Dependency                                                     |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Focus Mode    | Sets whether focus should be manually or automatically controlled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                |
| Auto Exposure | Sets which exposure parameters (Shutter, Gain, Iris/StepIris) can be controlled and which are automatically adjusted. <ul style="list-style-type: none"> <li>• <b>AUTO</b> — all parameters are automatically controlled</li> <li>• <b>MANUAL</b> — all parameters are under manual control</li> <li>• <b>SHUTTER</b> — Shutter speed is manually controlled, all other are automatically controlled</li> <li>• <b>IRIS</b> — Iris size is manually controlled, all other are automatically controlled</li> <li>• <b>GAIN</b> — Gain is manually controlled, all others are automatically controlled</li> </ul> |                                                                |
| Shutter       | Adjust the shutter speed of the camera                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Auto Exposure must be set to <b>MANUAL</b> or <b>SHUTTER</b> . |
| Gain          | Adjusts the sensitivity of the camera.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Auto Exposure must be set to <b>MANUAL</b> or <b>GAIN</b> .    |



Video Production Technology

| Setting         | Description                                                                                                                                                                                                                                                                           | Dependency                                        |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| White Balance   | Sets the white balance, or how it is adjusted, for the camera. <ul style="list-style-type: none"> <li>AUTO — white balance is automatically controlled</li> <li>OUTDOOR — fixed to 5,800K</li> <li>INDOOR — fixed to 3,200K</li> <li>MANUAL — RGain and BGain are unlocked</li> </ul> |                                                   |
| RGain & BGain   | Manually adjust the white balance                                                                                                                                                                                                                                                     | White Balance must be set to MANUAL.              |
| Rshift & Bshift | Adjusts the white balance in AUTO mode. Less control than RGain & BGain                                                                                                                                                                                                               | White Balance must be set to AUTO.                |
| StepIris        | Adjust the Iris in step values, rather than with the positioner.                                                                                                                                                                                                                      | Auto Exposure Mode must be set to MANUAL or IRIS. |
| Iris Limit      | Limits the Iris settings when Iris is automatically controlled.                                                                                                                                                                                                                       | Auto Exposure is not set the IRIS.                |

## Compatibility

| Robotic Camera        | Version |
|-----------------------|---------|
| Sony BRC-H700         | --      |
| <b>FlexDevice</b>     |         |
| Sony FlexCAM Driver   | 1.0     |
| <b>MultiPanel</b>     |         |
| MultiPanel Support    | ✘       |
| <b>Automation</b>     |         |
| OverDrive             | 12.0    |
| <b>Port Expanders</b> |         |
| BSS4                  | ✘       |
| Control DeviceMaster  | ✓       |



