

Vinten HS-102P/105P Camera Head

Requirements

- Robotic Camera Control software option
- Serial Interface Cable

Port Connections

	Switcher		Robotic Camera
Communications	REMOTE Port (female)	⇒	Video Connector Port
Video	Input BNC	⇒	Output BNC

Pinouts

Switcher	HS-102P/105P
2 (Rx-)	8 (Tx-)
3 (Tx+)	2 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	3 (Rx-)

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the HS-102P/105P to.
 - Use the **Device** knob to select **Robotic Cam**.
2. Press **Select Device**.
 - Use the **Device** knob to select **Vinten_S**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**.
4. Press **Com Settings**.
 - Use the **Baud** knob to select **2400**.
 - Use the **Parity** knob to select **NONE**.
5. Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the Video output of the HS-102P/105P is connected to.
 - Use the **Type** knob to select **Robotic Cam**.
 - Use the **Video Format** knob to select the video format of the video output of the camera.
2. Press **More** ⇒ **Camera Setup**.
 - Use the **Controller** knob to select the port that the HS-102P/105P is connected to.
 - Use the **Port** knob to select the port on the HS-102P/105P that the camera is connected to.
3. Press **Camera Options** and use the knobs to set the options.

Option	Description
Pan Invert	Use the Value knob to invert the direction that the camera moves when using the positioner (Yes), or not (No).
Tilt Invert	Use the Value knob to invert the direction that the camera moves when using the positioner (Yes), or not (No).
Zoom Invert	Use the Value knob to invert the direction that the camera zooms when using the positioner (Yes), or not (No).
Focus Invert	Use the Value knob to invert the focus direction when using the positioner (Yes), or not (No).
Iris Invert	Use the Value knob to invert the iris direction when using the positioner (Yes), or not (No).
X Invert	Use the Value knob to invert the direction that the camera moves in the X-axis when using the positioner (Yes), or not (No).
Y Invert	Use the Value knob to invert the direction that the camera moves in the Y-axis when using the positioner (Yes), or not (No).
Z Invert	Use the Value knob to invert the direction that the camera moves in the Z-axis when using the positioner (Yes), or not (No).

4. Press **HOME** ⇒ **Confirm**.

Device Setup

Camera shots cannot be stored directly on the Vinten HS-102P/105P, instead, the camera shot information is stored on the switcher.



Compatibility

Robotic Camera	Version
Vinten HS-102P/105P	1.0.117
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	--
Vision MD/X	--
Vision QMD/X	16.0
Vision MultiPanel Support	--
Automation	
OverDrive	12.0
Port Expanders	
BSS4	✓
Control DeviceMaster	✓