

GVG Contribution Serial Tally (protocol) — Frame

Requirements

- Serial Tally Software Option
- Serial Interface Cable

Port Connections

	Switcher		Serial Tally
Communications	PERIPH Port (female)	⇒	Serial Port

Switcher Setup

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **PERIPH X** port that you connected the Serial Tally device to.
 - Use the **Device** knob to select **Serial Tally**.
2. Press **Select Device**.
 - Use the **Device** knob to select **Contrib**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422** (default).
4. Press **Com Settings**.
 - Use the **Baud** knob to select **115200** (default).
 - Use the **Parity** knob to select **NONE** (default).
5. Press **Extra Options**.

Extra Options	Value
Rate	26 (default)
Data Txfr	Complete (default)
Start	None (default)
At Black	All Off (default)
Source Name	Bnc Name (default)
Slot 1 - PGM	See Slot Settings

6. Press **HOME** ⇒ **Confirm**.

Slot Settings

	Slot 1	Slot 2	Slot 3	Slot PGM
1 MLE Switcher	2	3	4	1
2 MLE Switcher	3	4	1	2
3 MLE Switcher	4	1	2	3
4 MLE Switcher	1	2	3	4

Compatibility

Serial Tally	Version
GVG Serial Tally device	--
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	9.1
Vision MD/X	11.0a
Vision QMD/X	11.0a
Vision MultiPanel Support	--
Automation	
OverDrive	3.0
Port Expanders	
BSS4	✘
Control DeviceMaster	✘





Video Production Technology