

## GVG Contribution Serial Tally (protocol) — Panel

### Requirements

- Serial Tally Software Option
- Serial Interface Cable

### Port Connections

	Switcher		Serial Tally
Communications	REMOTE Port (female)	⇒	Serial Port

### Switcher Setup

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
  - Use the **Com Port** knob to select the **REMOTE X** port that you connected the Serial Tally device to.
  - Use the **Device** knob to select **Serial Tally**.
2. Press **Select Device**.
  - Use the **Device** knob to select **Contrib**.
3. Press **Com Type**.
  - Use the **Type** knob to select **RS-422** (default).
4. Press **Com Settings**.
  - Use the **Baud** knob to select **115200** (default).
  - Use the **Parity** knob to select **NONE** (default).
5. Press **Extra Options**.

Extra Options	Value
Rate	26 (default)
Data Txfr	Complete (default)
Start	None (default)
At Black	All Off (default)
Source Name	Bnc Name (default)
Slot 1 - PGM	See Slot Settings

6. Press **HOME** ⇒ **Confirm**.

### Slot Settings

	Slot 1	Slot 2	Slot 3	Slot PGM
1 MLE Switcher	2	3	4	1
2 MLE Switcher	3	4	1	2
3 MLE Switcher	4	1	2	3
4 MLE Switcher	1	2	3	4

### Compatibility

Serial Tally	Version
GVG Serial Tally device	--
<b>Switchers</b>	
Synergy 1 SD	17.10
Synergy Series SD	17.10
Synergy MD/X	3.3
Vision MD/X	7.1
Vision QMD/X	11.0a
Vision MultiPanel Support	--
<b>Automation</b>	
OverDrive	3.0
<b>Port Expanders</b>	
BSS4	✓
Control DeviceMaster	✓





Video Production Technology