

TSL Under Monitor Display

Requirements

- Serial Interface Cable (DB9 to DB9)

Port Connections

	Switcher		UMD
Communications	REMOTE Port (female)	⇒	CONTROL Port (female)

Pinouts

Switcher	UMD
2 (Rx-)	2 (Tx-)
3 (Tx+)	3 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	8 (Rx-)

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the UMD to.
 - Use the **Device** knob to select **UMD Input**.
2. Press **Select Device**.
 - Use the **Device** knob to select **TSL UMD**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**.
4. Press **Com Settings**.
 - Use the **Baud** knob to select **38400**.
 - Use the **Parity** knob to select **EVEN**.
5. Press **HOME** ⇒ **Confirm**.

To Assign a UMD Address to a BNC Input

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **More** ⇒ **More** ⇒ **UMD Inputs**.
 - Use the **BNC** knob to select the input BNC that you want to set the UMD address for.

- Use the **UMD #** knob to select the UMD input address that you want to assign to the Input BNC. Select **OFF (UMD#0)** to not assign a UMD address to an Input BNC.

2. Press **HOME** ⇒ **Confirm**.

Device Setup

You cannot use UMD **Address#0** for an input to the switcher. The switcher uses this address for **OFF**.

Compatibility

UMD	Version
TSL Under Monitor Display	--
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	8.0 or higher
Vision MD/X	8.1 or higher
Vision QMD/X	8.2 or higher
Vision MultiPanel Support	--
Automation	
OverDrive	8.0 or higher
Port Expanders	
BSS4	✓
Control DeviceMaster	✓





Video Production Technology