GVG Turbo iDDR

GVG Turbo iDDR

Requirements

- Video Server Control software option
- If you are using multiple video channels on the Turbo, each channel should be assigned to a separate Remote Port, or a Port Expander should be used.
- Serial Interface Cable (DB9 to DB9)

Port Connections

	Switcher		Video Server
Communications	REMOTE Port (female)	⇒	RS422 Port (female)
Video	Input BNC	⇒	Output BNC

Cable Connectors

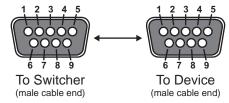


Figure 1 DB9 to DB9 Cable

Pinouts

Switcher	Turbo
2 (Rx-)	2 (Tx-)
3 (Tx+)	3 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	8 (Rx-)

Switcher Setup

To Set Up Communications

- Press HOME ⇒ Setup ⇒ Installation ⇒ Com Setup ⇒ Type.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the Turbo to.
 - Use the **Device** knob to select **VTR (CLIP)**.
- 2. Press Select Device.
 - Use the **Device** knob to select **Betacam**.

- Use the VTR Preroll knob to select 0.
- 3. Press Com Type.
 - Use the Type knob to select RS-422
- 4. Press Com Settings.
 - Use the Baud knob to select 38400.
 - Use the **Parity** knob to select **ODD**.
- 5. Press Extra Options.

Option	Value
TargetMachine	Generic
Decode NAKs	Yes
Wait nFields	0
NPlay Retries	3
Request TC	Yes

6. Press HOME ⇒ Confirm.

To Set Up Video Inputs

- Press HOME

 Setup

 Installation

 BNC

 BNC

 BNC

 Type.
 - Use the **BNC** knob to select the input BNC that the video output of the Turbo is connected to.
 - Use the **Type** knob to select **VTR**.
 - Use the **Video Format** knob to select the video format of the video output of the Turbo.
- 2. Press More ⇒ VTR/VDCP Xpts.
 - Use the **Controller** knob to select the port on the switcher that you assigned the Turbo to.
- 3. Press HOME ⇒ Confirm.

Compatibility

Video Server	Version
GVG Turbo	
Switchers	
Synergy 1 SD	
Synergy Series SD	
Synergy MD/X	
Vision MD/X	12.1
Vision QMD/X	12.1



Switchers	
Vision MultiPanel Support	
Automation	
OverDrive	9.3
Port Expanders	
BSS4	✓
Comtrol DeviceMaster	✓

