

Avid AirSpeed

Requirements

- Video Server Control software option
- If you are using multiple video channels on the AirSpeed, each channel should be assigned to a separate **Remote Port**, or a **Port Expander** should be used.
- Serial Interface Cable (DB9 to DB9)

Port Connections

	Switcher		Video Server
Communications	REMOTE Port (female)	⇒	Serial Port (female)
Video	Input BNC	⇒	Output BNC

Cable Connectors

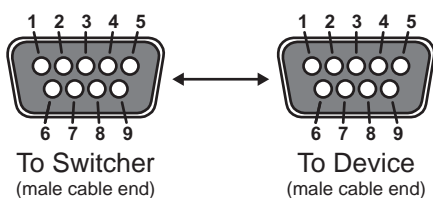


Figure 1 DB9 to DB9 Cable

Pinouts

Switcher	AirSpeed
2 (Rx-)	2 (Tx-)
3 (Tx+)	3 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	8 (Rx-)

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the AirSpeed to.
 - Use the **Device** knob to select **VTR (CLIP)**.
2. Press **Select Device**.
 - Use the **Device** knob to select **VDCCP**.

- Use the **VTR Preroll** knob to select **0**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**.
 4. Press **Com Settings**.
 - Use the **Baud** knob to select **38400**.
 - Use the **Parity** knob to select **ODD**.
 5. Press **Extra Options**.
 - Use the **Option** knob to select **TargetMachine**.
 - Use the **Value** knob to select **AirSpeed**. The remaining options are set automatically.
 6. Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the video output of the AirSpeed is connected to.
 - Use the **Type** knob to select **VTR**.
 - Use the **Video Format** knob to select the video format of the video output of the AirSpeed.
2. Press **More** ⇒ **VTR/VDCCP Xpts**.
 - Use the **Controller** knob to select the port on the switcher that you assigned the AirSpeed to.
3. Press **VDCCP Setup**.
 - Use the **Channel** knob to select the channel on the AirSpeed that you want to assign to the BNC.
 - Use the **SubAddress** knob to select the physical port on the AirSpeed that the switcher is connected to.
4. Press **HOME** ⇒ **Confirm**.

Device Setup

- On the Avid AirSpeed you will have to set the **Mode** to **VDCCP** for each individual channel you have connected to the switcher to allow it to properly connect to the switcher.
- It is recommended that you use Channels 2 or 3 on the Avid AirSpeed.
- Ensure that the **Playback Mode** you select on the **Communications Menu** is the same mode set on the Avid AirSpeed.

Troubleshooting

If the device is communicating properly, but you cannot gain control from the switcher, try cycling through different values for the



SubAddress, and then the Channel. The most common settings are as follows:

- Channel set to the video channel number and SubAddress set to 0.
- Channel set to the video channel number and SubAddress set to the serial communications port on the video server.

Compatibility

Video Server	Version
Avid AirSpeed	--
Switchers	
Synergy 1 SD	16.0
Synergy Series SD	16.0
Synergy MD/X	6.0
Vision QMD/X	14.0
Vision MultiPanel Support	15.0
Automation	
OverDrive	10
Port Expanders	
BSS4	✓
Control DeviceMaster	✓