

Avid AirSpeed Multi Stream

Requirements

- Video Server Control software option
- If you are using multiple video channels on the AirSpeed Multi Stream, each channel should be assigned to a separate **Remote Port**, or a **Port Expander** should be used.
- Serial Interface Cable (DB9 to RJ-45)

Port Connections

	Switcher		Video Server
Communications	REMOTE Port (female)	⇒	SERIAL Port (female RJ-45)
Video	Input BNC	⇒	Output BNC

Cable Connectors

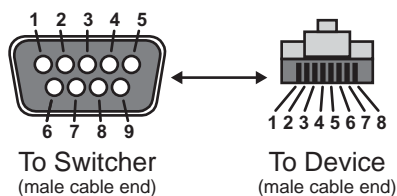


Figure 1 DB9 to RJ-45 Cable

Pinouts

Switcher	AirSpeed Multi Stream
2 (Rx-)	4 (Tx-)
3 (Tx+)	2 (Rx+)
7 (Rx+)	5 (Tx+)
8 (Tx-)	1 (Rx-)

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the AirSpeed Multi Stream to.
 - Use the **Device** knob to select **VTR (CLIP)**.
2. Press **Select Device**.
 - Use the **Device** knob to select **VDCCP**.

- Use the **VTR Preroll** knob to select **0**.
3. Press **Com Type**.
 - Use the **Type** knob to select **RS-422**
 4. Press **Com Settings**.
 - Use the **Baud** knob to select **38400**.
 - Use the **Parity** knob to select **ODD**.
 5. Press **Extra Options**.
 - Use the **Option** knob to select **TargetMachine**.
 - Use the **Value** knob to select **AirSpeed MS**. The remaining options are set automatically.
 6. Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the video output of the AirSpeed Multi Stream is connected to.
 - Use the **Type** knob to select **VTR**.
 - Use the **Video Format** knob to select the video format of the video output of the AirSpeed Multi Stream.
2. Press **More** ⇒ **VTR/VDCCP Xpts**.
 - Use the **Controller** knob to select the port on the switcher that you assigned the AirSpeed Multi Stream to.
3. Press **VDCCP Setup**.
 - Use the **Channel** knob to select the channel on the AirSpeed Multi Stream that you want to assign to the BNC.
 - Use the **SubAddress** knob to select **0**.
4. Press **HOME** ⇒ **Confirm**.

Device Setup

1. **File** ⇒ **Preference** ⇒ **Protocol Setup**.
2. Select the **Channel** that you want to control.
3. In the **Protocol** list, click **VDCCP**.
4. In the **Port** list, click the serial port on the AirSpeed Multi Stream that is connected to the switcher.
5. Set **Story TC** to disabled, or unchecked, for the channel.

Troubleshooting

If the device is communicating properly, but you cannot gain control from the switcher, try cycling through different values for the SubAddress, and then the Channel. The most common settings are as follows:



- Channel set to the video channel number and SubAddress set to 0.
- Channel set to the video channel number and SubAddress set to the serial communications port on the video server.

Compatibility

Video Server	Version
Avid AirSpeed Multi Stream	1.0.0
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	--
Vision QMD/X	14.0
Vision MultiPanel Support	15.0
Automation	
OverDrive	10
Port Expanders	
BSS4	✘
Control DeviceMaster	✓