

Chyron XClyps HD/SD Clip Server (ethernet)

Requirements

- Video Server Control software option
- Ethernet Cable

Port Connections

	Switcher		Video Server
Video	Input BNC	⇒	Output BNC

Switcher Setup

To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
 - Use the **Com Port** knob to select the **REMOTE X** port that you connected the XClyps to.
 - Use the **Device** knob to select **VTR (CLIP)**.
2. Press **Select Device**.
 - Use the **Device** knob to select **VDACP**.
 - Use the **VTR Preroll** knob to select **10**.
3. Press **Com Type**.
 - Use the **Type** knob to select **Network TCP**.
4. Press **Com Setting**.
5. Use the **Client/Server** knob to select **Client**.
 - In the **Remote IP Address** field, enter the IP address of the XClyps.
 - In the **Remote Port** field, enter **10000**. Use this value unless told otherwise by the Chyron XClyps HD/SD Clip Server documentation.
6. Press **Extra Options**.
 - Use the **Option** knob to select **TargetMachine**.
 - Use the **Value** knob to select **XClyps**. The remaining options are set automatically.
7. Press **HOME** ⇒ **Confirm**.

To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
 - Use the **BNC** knob to select the input BNC that the video output of the XClyps is connected to.
 - Use the **Type** knob to select **VTR**.
 - Use the **Video Format** knob to select the video format of the video output of the XClyps.
2. Press **More** ⇒ **VTR/VDACP Xpts**.
 - Use the **Controller** knob to select the port on the switcher that you assigned the XClyps to.
3. Press **VDACP Setup**.
 - Use the **Channel** knob to select the channel on the XClyps that you want to assign to the BNC.
 - Use the **SubAddress** knob to select **0**.
4. Press **HOME** ⇒ **Confirm**.

Device Setup

- Set the port number on the XClyps preferences menu to the same as it is on the switcher.

Troubleshooting

If the device is communicating properly, but you cannot gain control from the switcher, try cycling through different values for the SubAddress, and then the Channel. The most common settings are as follows:

- Channel set to the video channel number and SubAddress set to 0.
- Channel set to the video channel number and SubAddress set to the serial communications port on the video server.

Compatibility

Video Server	Version
Chyron XClyps HD/SD Clip Server	8.49
Switchers	
Synergy 1 SD	--
Synergy Series SD	--
Synergy MD/X	--
Vision MD/X	12.9
Vision QMD/X	12.9
Vision MultiPanel Support	15.0



Automation	
OverDrive	10.0
Port Expanders	
BSS4	*
Control DeviceMaster	*