

## GVG M-Series iVDR

### Requirements

- Video Server Control software option
- If you are using multiple video channels on the M-Series, each channel should be assigned to a separate **Remote Port**, or a **Port Expander** should be used.
- Serial Interface Cable (DB9 to DB9)

### Port Connections

	Switcher		Video Server
<b>Communications</b>	REMOTE Port (female)	⇒	RS422 Port (female)
<b>Video</b>	Input BNC	⇒	Output BNC

On the M-Series, you must be connected to a specific serial port to be able to play or record on that channel.

- Record on channel 1 — port 1
- Play on channel 1 — port 2
- Record on channel 2 — port 3
- Play on channel 2 — port 4

### Cable Connectors

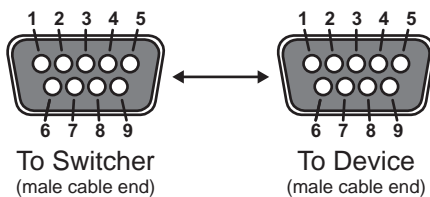


Figure 1 DB9 to DB9 Cable

### Pinouts

Switcher	M-Series
2 (Rx-)	2 (Tx-)
3 (Tx+)	3 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	8 (Rx-)

## Switcher Setup

### To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
  - Use the **Com Port** knob to select the **REMOTE X** port that you connected the M-Series to.
  - Use the **Device** knob to select **VTR (CLIP)**.
2. Press **Select Device**.
  - Use the **Device** knob to select **VDCP**.
  - Use the **VTR Preroll** knob to select **0**.
3. Press **Com Type**.
  - Use the **Type** knob to select **RS-422**.
4. Press **Com Settings**.
  - Use the **Baud** knob to select **38400**.
  - Use the **Parity** knob to select **ODD**.
5. Press **Extra Options**.
  - Use the **Option** knob to select **TargetMachine**.
  - Use the **Value** knob to select **GVG M-Series**. The remaining options are set automatically.
6. Press **HOME** ⇒ **Confirm**.

### To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
  - Use the **BNC** knob to select the input BNC that the video output of the M-Series is connected to.
  - Use the **Type** knob to select **VTR**.
  - Use the **Video Format** knob to select the video format of the video output of the M-Series.
2. Press **More** ⇒ **VTR/VDOP Xpts**.
  - Use the **Controller** knob to select the port on the switcher that you assigned the M-Series to.
3. Press **VDOP Setup**.
  - Use the **Channel** knob to select the channel on the M-Series that you want to assign to the BNC.
  - Use the **SubAddress** knob to select the physical port on the M-Series that the switcher is connected to.
4. Press **HOME** ⇒ **Confirm**.

## Troubleshooting

If the device is communicating properly, but you cannot gain control from the switcher, try cycling through different values for the SubAddress, and then the Channel. The most common settings are as follows:

- Channel set to the video channel number and SubAddress set to 0.
- Channel set to the video channel number and SubAddress set to the serial communications port on the video server.

## Compatibility

Video Server	Version
GVG M-Series iVDR	--
<b>Switchers</b>	
Synergy 1 SD	--
Synergy Series SD	18.0
Synergy MD/X	6.1
Vision QMD/X	14.0
Vision MultiPanel Support	15.0
<b>Automation</b>	
OverDrive	10
<b>Port Expanders</b>	
BSS4	✓
Control DeviceMaster	✓