

## Pinnacle Systems Thunder (version 6.1)

### Requirements

- Video Server Control software option
- If you are using multiple video channels on the Thunder, each channel should be assigned to a separate **Remote Port**, or a **Port Expander** should be used.
- Serial Interface Cable (DB9 to DB9)

### Port Connections

	Switcher		Video Server
Communications	REMOTE Port (female)	⇒	RS-422 Port (female)
Video	Input BNC	⇒	Output BNC

### Cable Connectors

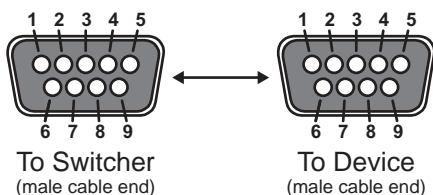


Figure 1 DB9 to DB9 Cable

### Pinouts

Switcher	Thunder
2 (Rx-)	2 (Tx-)
3 (Tx+)	3 (Rx+)
7 (Rx+)	7 (Tx+)
8 (Tx-)	8 (Rx-)

### Switcher Setup

#### To Set Up Communications

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **Com Setup** ⇒ **Type**.
  - Use the **Com Port** knob to select the **REMOTE X** port that you connected the Thunder to.
  - Use the **Device** knob to select **VTR (CLIP)**.
2. Press **Select Device**.

- Use the **Device** knob to select **VDCP**.
  - Use the **VTR Preroll** knob to select **0**.
3. Press **Com Type**.
    - Use the **Type** knob to select **RS-422**.
  4. Press **Com Settings**.
    - Use the **Baud** knob to select **38400**.
    - Use the **Parity** knob to select **ODD**.
  5. Press **Extra Options**.
    - Use the **Option** knob to select **TargetMachine**.
    - Use the **Value** knob to select **PinnacleThund**. The remaining options are set automatically.
  6. Press **HOME** ⇒ **Confirm**.

#### To Set Up Video Inputs

1. Press **HOME** ⇒ **Setup** ⇒ **Installation** ⇒ **BNC** ⇒ **BNC Type**.
  - Use the **BNC** knob to select the input BNC that the video output of the Thunder is connected to.
  - Use the **Type** knob to select **VTR**.
  - Use the **Video Format** knob to select the video format of the video output of the Thunder.
2. Press **More** ⇒ **VTR/VDCP Xpts**.
  - Use the **Controller** knob to select the port on the switcher that you assigned the Thunder to.
3. Press **VDCP Setup**.
  - Use the **Channel** knob to select the channel on the Thunder that you want to assign to the BNC.
  - Use the **SubAddress** knob to select **0**.
4. Press **HOME** ⇒ **Confirm**.

### Device Setup

1. Navigate to the **Device Manager** as follows:
  - Right click on the **My Computer** icon and select **Properties**.
  - Select **Hardware**.
  - Select **Device Manager**.
2. For each channel, set the com settings as follows:
  - Select **Com Ports**.
  - Select **Com**.
  - Select **Settings**.
  - Set the **Baud Rate** to **38,400**.
  - Set the **Parity** to **Odd**.



- Close the dialog boxes.
3. Set the Channel Configuration as follows:
- From the **File Menu**, select **Preferences** and click **Channel Configuration** to display the **Channel Configuration Menu**.
  - Set the com ports to control the associated channel.
  - Deselect all other channels.
  - Close the dialog boxes.

## Troubleshooting

If the device is communicating properly, but you cannot gain control from the switcher, try cycling through different values for the SubAddress, and then the Channel. The most common settings are as follows:

- Channel set to the video channel number and SubAddress set to 0.
- Channel set to the video channel number and SubAddress set to the serial communications port on the video server.

## Compatibility

Video Server	Version
Pinnacle Thunder	6.1
Switchers	
Synergy 1 SD	16.0
Synergy Series SD	17.1
Synergy MD/X	3.1
Vision QMD/X	14.0
Vision MultiPanel Support	15.0
Automation	
OverDrive	10
Port Expanders	
BSS4	✓
Control DeviceMaster	✓