




CAUTION: Before you service your switcher, see the "Important Safety Instructions" in your Setup Manual.



ESD Susceptibility: Use antistatic precautions when touching electrical circuitry.


1

Remove the frame from the rack and place it upside-down on a clean, static free surface.

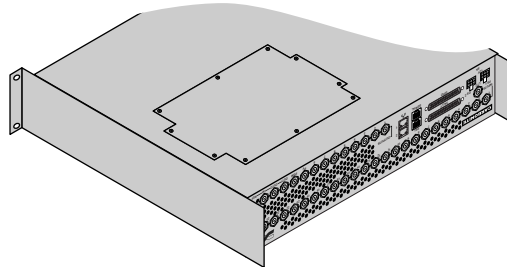

2


Remove the 10 screws securing the RAM access door.

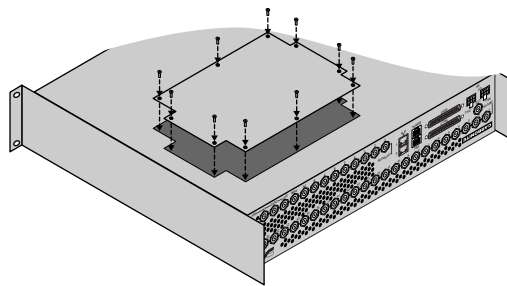

3


Identify the 4GB DDR3 SODIMM module that needs to be replaced.

- SODIMM 1 – CPU
- SODIMM 2 – DDR_1
- SODIMM 3 – DDR_0

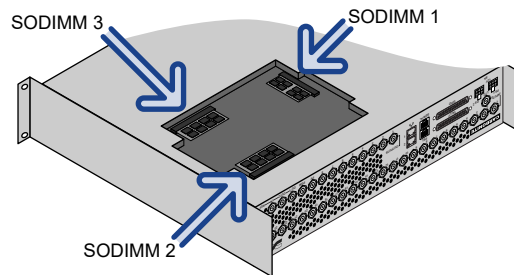


4

Remove the SODIMM module.

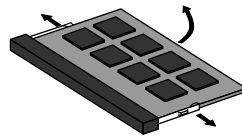

5

Install the new 4GB DDR3 SODIMM module.



6

Replace the RAM access door and re-install the frame.

A RAM test should be performed on the switcher to ensure that the new RAM is working properly.