

TES3 and TES5

**Multi-Standard VBI Processors
Hardware User Manual**

Thank you for choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology. Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross
CEO, Ross Video
dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

TES3 and TES5 Hardware User Manual

- Ross Part Number: TES3DR-004A-03
- Release Date: January 27, 2015.

Copyright

© 2015 Ross Video Limited. Ross®, openGear®, and any related marks are trademarks or registered trademarks of Ross Video Ltd. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Information to User

The following warning is provided in compliance with the regulations of the United States Federal Communication Commission (FCC):

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment operates in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by Ross Video could void the user's authority to operate the equipment.

Important Safety Notices to Service Personnel

Before using this product and any associated equipment, refer to the section “**Important Safety Instructions**” listed below to avoid personnel injury and to prevent product damage.

Symbol Meanings



This symbol identifies a Protective Earth (PE) terminal, which is provided for connection of the supply system's protective earth (green or green/yellow) conductor.



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage to persons or equipment.



Warning — The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



Caution — The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



Warning Hazardous Voltages — The symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.



ESD Susceptibility — This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions

Read these instructions and heed all warnings.



Warning — The safe operation of this product requires that a protective earth connection be provided. A grounding connector in the equipment's supply cord provides this protective earth. To reduce the risk of shock to the operator and service personnel, this ground conductor must be connected to an earthed ground.

Use only power cords specified for this product and certified for the country of use. Refer to the section “**Product Power Cord Requirements**” that follows.

Do not defeat safety purpose of the ground-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit in to your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinching particularly at plugs, convenience receptacles, and point where they exit from the apparatus.



Indoor Use: “**WARNING — TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**”

Do not block any ventilation openings. Install in accordance with manufacturer's instructions.

Only use attachments/accessories specified by the manufacturer.



Warning — *Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damage, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.*



Caution — *To reduce the risk of fire, replacement fuses must be the same type and rating.*



Warning — *This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product's power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.*



Warning — *This product includes an "Ethernet Port" which allows this product to be connected to a local area network (LAN). Only connect to networks that remain inside the building. Do not connect to networks that go outside the building.*

Product Power Cord Requirements



Warning North American Line Voltages 100-120 Volt

This product is supplied with certified 10A/125V SVT type supply cords.

Conductors are color coded white (neutral), black (line) and green or green/yellow (ground).

Operation of this equipment at line voltages exceeding 130V requires that alternative supply cords with appropriate voltage and current ratings be used.



Warning International Line Voltages 200-240 Volt

This product has been designed for use with certified IEC 320-C13 10A/250V - H03 VV-F3G 1.00mm² type line cord.

International product orders are supplied with a certified 10A/250V line cord, utilizing a molded 3-pin IEC 320-C13 type connector at one end and stripped conductors on the other. One line cord is provided. Conductors are CEE color coded; blue (neutral), brown (line), and green/yellow (ground).

Installation by a qualified Electrician, of an appropriately approved A/C wall plug certified for the country of use, is required.

Alternatively, other IEC 320 C-13 type power cords may be used, provided that they meet the necessary safety certification requirements for the country in which they are to be used. Refer to the correctly specified line cord above.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed out wheelie bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performance of our products.

Company Address

**Ross Video Limited**

8 John Street
Iroquois, Ontario, K0E 1K0
Canada

Ross Video Incorporated

P.O. Box 880
Ogdensburg, New York
USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): techsupport@rossvideo.com

E-mail (General Information): solutions@rossvideo.com

Website: <http://www.rossvideo.com>

Contents

Introduction	1
Overview.....	1-2
Features.....	1-2
Hardware Overview	2
Before You Begin	2-2
Static Discharge.....	2-2
Unpacking.....	2-2
Front Panel	2-3
Rear Panel	2-4
Installation	3
Mounting the TES3 and TES5 in a Rack.....	3-2
Before You Begin.....	3-2
Installing the TES3 and TES5 in the Rack.....	3-2
Troubleshooting	4
Replacing a Fuse.....	4-2
Fails to Start.....	4-3
Stays in Bypass	4-4
Cannot Decode Data Encoded by the TES3 and TES5	4-5
Other Operating Difficulties	4-6
Specifications	5
Technical Specifications.....	5-2
Electrical Specifications.....	5-2
AC Power Specifications.....	5-2
Mechanical Specifications.....	5-2
Environmental Specifications.....	5-3
TES3 Program Video Specifications.....	5-3
TES5 Program Video Specifications.....	5-4
Cabling Information.....	5-5
Serial Port.....	5-5
Remote Connector Pinouts	5-6

Introduction

In This Chapter

This chapter contains the following sections:

- Overview

A Word of Thanks

Congratulations on choosing the TES3 and TES5 Multi-standard VBI Processors. Your TES3 and TES5 are part the Ross Terminal Equipment family of products, backed by Ross Video's experience in engineering and design expertise since 1974.

You will be pleased at how easily your new TES3 and TES5 fits into your overall working environment. Equally pleasing is the product quality, reliability and functionality. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your TES3 and TES5, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

Overview

This manual is a hardware reference for two new models in Ross Video's established family of TV data encoders. The TES3 and TES5 models described in this manual comply with the Restrictions on Hazardous Substances (RoHS) of the European Union. In all respects, they are fully compatible with Ross Video's existing TES3 and TES5 VBI encoders. They offer both modem and LAN interfaces in a compact 1 rack-unit enclosure, while retaining exactly the same programming interface as the earlier TES3 and TES5 products.

The TES3 is a broadcast-quality VBI encoder and decoder unit for analog video. It can insert data in various formats into a program video feed. As well it can decode CEA-608 captioning from both the program input and an auxiliary analog video input.

The TES5 performs exactly the same functions as the TES3, except that its program video input and output are serial digital (SMPTE 259) instead of analog video.

Features

The main features of the TES3/TES5 are as follows

- Encodes multiple VBI formats simultaneously, including CEA-608 captioning, CEA-516 (NABTS) and WST. This allows a single TES3 or TES5 to perform the functions of several encoders, minimizing system cost and maximizing reliability.
- The CEA-608 decoder on the program video input allows captioning and XDS (Extended Data Services) to be added to incoming CEA-608 data.
- The CEA-608 decoder on the auxiliary video input permits bridging of captioning between two video signals (for example, between 525 and 625-line signals).
- 33.6 kbps modem
- 10/100-baseT Ethernet LAN interface
- 3 serial RS232 ports
- Broadcast-quality video processing
- Compatible with 525 and 625-line video signals
- "Master inserter" or "VBI sidechain" function allows the active portion of selected VBI lines from a synchronous video signal on the auxiliary video input to be inserted into the program output.
- Program video bypass if power supply fails.
- Front panel video bypass switch.
- On loss of program video, the TES3 or TES5 normally goes into bypass. The user can optionally set it to instead route the auxiliary input to the program output on loss of program input.
- Remote control connector can be used to put the unit into bypass and to indicate bypass status.

Hardware Overview

In This Chapter

This chapter provides an overview of the hardware.

The following topics are discussed:

- Before You Begin
- Front Panel
- Rear Panel

Before You Begin

Before proceeding with the instructions in this manual, review the following notes.

Static Discharge

Throughout this chapter, please heed the following cautionary note:



ESD Susceptibility — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

Unpacking

Unpack each TES3 and TES5 you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

Front Panel

Figure 2.1 shows the front panel controls and indicators on the TES3 and TES5. The TES3 is used for illustration, but the controls and indicators are identical on the TES5.

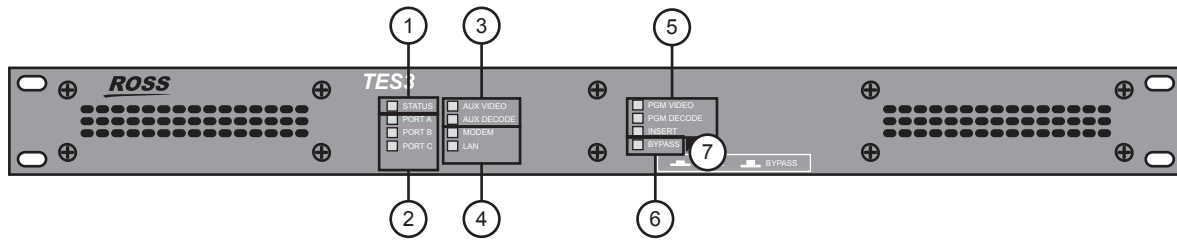


Figure 2.1 TES3 Front Panel Controls and Indicators

1. STATUS

This indicator can be either red or green. It is red when the unit is first powered on and then turns green approximately 30 seconds later. If it does not, this may indicate that there is a problem; refer to the chapter “**Troubleshooting**” on page 4-1. After power-up, application software controls the color of the indicator; for example, the color of the indicator changes to red when the unit is writing to its flash memory. It is thus normal for this indicator to turn red briefly and then return to green, after setup changes.

2. Ports A, B, C

These indicators are green when serial data is being received or sent using the corresponding serial port A, B or C.

3. Auxiliary Channel Indicators

- **AUX VIDEO** — This indicator is green when video is present on the cable attached to the **AUXILIARY** BNC connector on the rear panel.
- **AUX DECODE** — This indicator is green when CEA-608 data is received in the auxiliary video input.

4. MODEM and LAN Indicators

These indicators show activity on the **MODEM** and **LAN** ports.

5. Program Channel Indicators

- **PGM VIDEO** — This indicator is green when video is present on the cable attached to the Program BNC connector on the rear panel.
- **PGM DECODE** — This indicator is green when CEA-608 data is received in the Program video feed.
- **INSERT** — This indicator is green when the unit is inserting any data into the Program video feed.

6. BYPASS Indicator

This indicator is red when the **PROGRAM** video input is in the bypass state. This can be caused by either the front panel switch or the rear panel **REMOTE** connector. It is also normally red if there is no video signal present on the **PROGRAM VIDEO IN** BNC.

7. BYPASS Switch

When this push-button is approximately flush with the front panel (**ACTIVE**), the Program video feed passes through the encoding circuitry and data insertion can occur. When the push-button protrudes from the front panel (**BYPASS**), the Program video is connected from the **PROGRAM VIDEO IN** BNC directly to the **PROGRAM VIDEO OUT** BNC.

Rear Panel

Figure 2.2 shows the rear panel controls and connectors on the TES3 or TES5. The TES3 is used for illustration; the control and connectors are identical on the TES5, except that its PROGRAM VIDEO IN and OUT are SDI (SMPTE 259).

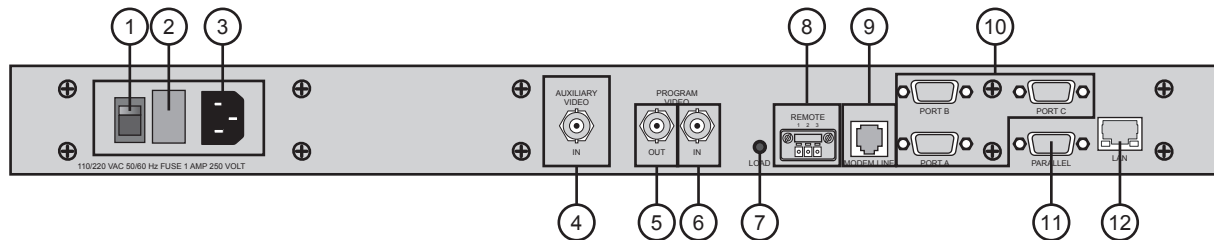


Figure 2.2 TES3 — Rear Panel Connections and Controls

1. Power Switch

2. Fuse Holder

Behind this panel is an AC fuse.

3. Power Cord Connection

This jack accepts a power cord supplying 120/220 volt, 50/60 Hz power to the unit.

4. AUXILIARY VIDEO IN BNC

This BNC provides the auxiliary (analog composite) video signal to the unit.

5. PROGRAM VIDEO OUT BNC

This BNC provides the local program video signal output containing the inserted VBI data. It is the same type as the **PROGRAM VIDEO IN** jack.

6. PROGRAM VIDEO IN BNC

This BNC provides the program video input signal to the unit. This is analog composite video for the TES3, and SDI (SMPTE 259) for the TES5.

7. LOAD Button

This push-button switch is located behind a small hole in the rear panel and is accessible using a pointed object, such as a pencil. The software reads this switch during power up and, if the switch is pressed, jumps to a secondary program instead of the normal application software. This switch is intended for use in loading new software into the unit.

8. REMOTE Connector

This connector allows remote control of the bypass switch and provides the signals necessary to drive a remote bypass LED.

9. MODEM Connector

This RJ-11 connector is used to connect the internal modem to a telephone line.

10. PORTS A, B, C Connectors

These 9 pin male D connectors can be used to connect the TES3 or TES5 to serial RS232 devices.

11. PARALLEL Connector

This 9 pin female D connector is intended for general-purpose input or output connections.

12. LAN Connector

This RJ-45 connector is used to connect the internal LAN adapter to an Ethernet network.

Installation

In This Chapter

This chapter describes how to mount the TES3 or TES5 in the rack and provides a general overview of how to install the TES3 and TES5.

The following topics are discussed:

- Mounting the TES3 and TES5 in a Rack

Mounting the TES3 and TES5 in a Rack

This section describes how to mount the TES3 and TES5 in the rack. In using these instructions, consult **Figure 3.1**. Note that the TES3 and TES5 should be attached to both the front and rear of the rack; because of the weight of the potentially large number of cables connected to the rear of the TES3 and TES5, rear rack mounting is strongly advised.

Before You Begin

These instructions can be used for racks having a total depth from the front to the rear rails in the range 24-30.25" (61-77 cm).

- For racks that are shallower than 24", a modified procedure is described in step 2.
- For racks deeper than 30.25", use a mounting shelf.

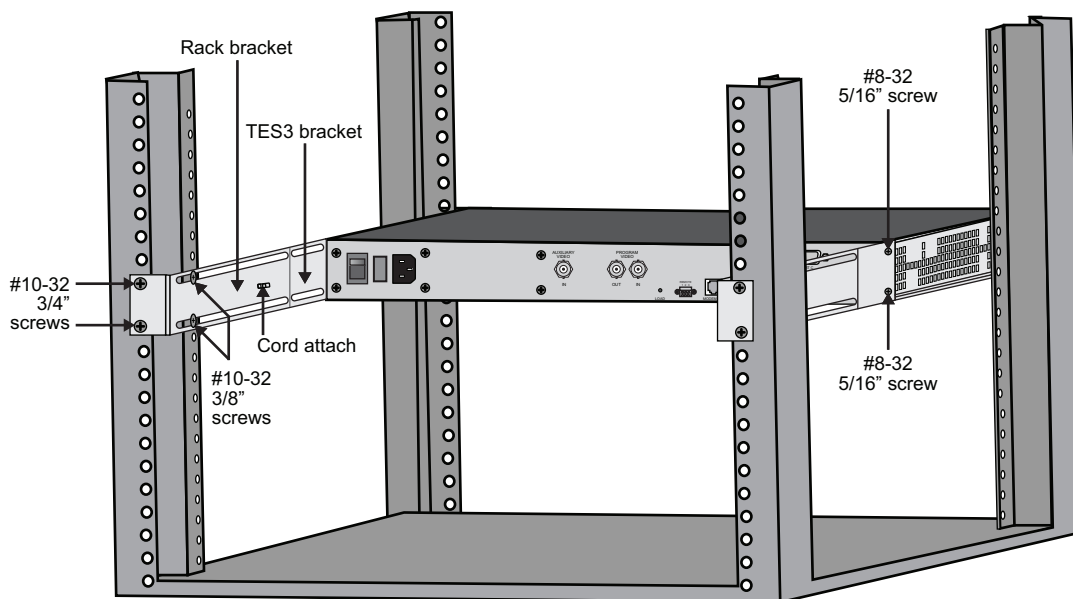


Figure 3.1 TES3 and TES5 Rear View — Rack-mounting Detail

Installing the TES3 and TES5 in the Rack

Use the following procedure to install the TES3 and TES5 in the rack:

1. Attach the rear TES brackets (41-10543-01) to both sides of the chassis using the mounting holes near the rear of the TES. Use the #8-32 flat-head screws, and insert them through the countersunk holes in the bracket into the mounting holes on the TES. Refer to **Figure 3.1** for locations. Install four nut clips to the front of the rack, and attach the TES front panel to these clips, using four 3/4" #10-32 screws.
2. If your rack is shallower than 24" (61 cm), and it has side-mounting rails, use the following procedure. Otherwise, proceed to step 3.
 - Skip steps 3 through 5.
 - Instead, mount the rear nut clips to the rear side rails and attach the TES brackets directly to these side rails, using 3/4" #10-32 screws through the slots in the brackets.
 - Proceed to step 6.

3. Install four nut clips to the rear of the rack at the same height as those used to mount the front of the TES.
4. Attach the two rear rack brackets (41-10544-01) to the nut clips installed in the preceding step, using two 3/4" #10-32 screws for each bracket. Refer to **Figure 3.1** for locations. Before tightening the screws, ensure that these brackets contact the inner side of the brackets mounted to the TES; that is, they should be closer to the center of the rack than the ones on the TES. The slots in these brackets should also be approximately aligned with the screw holes in the TES brackets.
5. Install two 3/8" #10 screws through the slots in each rear bracket into the captive nuts near the rear end of the TES brackets. Refer to **Figure 3.1** for locations.
6. Plug the power cord into the receptacle on the rear of the TES.
7. Insert a tie-wrap through the strain relief bridge on the rack bracket near the TES power entry module; refer to **Figure 3.1** for locations. Pass the tie-wrap around the power cord and tighten it to prevent the power cord from being inadvertently pulled out of the TES.
8. Insert the TES power plug into a 110 or 220 VAC outlet. The use of conditioned power from an uninterrupted power source (UPS) is strongly recommended, in order to ensure that the processing of the video and VBI data is not disturbed by power outages.
9. Most uses of the TES require connecting a video input to the **PROGRAM IN** jack, and connecting the **PROGRAM OUT** jack to another piece of equipment that uses the video. It is essential to always use high-quality coaxial cable with 75ohm BNC plugs for these connections. In particular, SDI video connections require digital video cable such as Belden type 8281.
10. Most applications also require connection of one or more data ports (RS232, LAN or modem). Please note the following points related to the RS-232 ports A, B and C:
 - When connecting to another device such as a PC that is wired as Data Terminal Equipment (DTE), you need to use a null modem cable such as the one supplied with the TES. Additional cables can be purchased by contacting your Ross Video sales representative. Alternatively, you can build your own cable or find an equivalent one available from a cable supplier, using the wiring table provided in the section "**Cabling Information**" on page 5-5.
 - When connecting to a device that is wired as Data Communications Equipment (DCE), such as a modem, you need to use a "straight-through" 9-pin cable instead of the null-modem. This cable is not supplied with the TES3 or TES5, but is readily available from data cable suppliers.
 - Although you will use **PORT A** for your initial setup, you do not have to dedicate it to this purpose alone. If you enable setup to occur through the LAN, **PORT A** is then available for data transmission. Also, **PORT A** can be used alternately for setup and data transmission, provided your application allows the data transmission to be suspended whenever you need to change the setup.
11. Consult the user manual for the software which was supplied with the unit for further installation and setup instructions.

Troubleshooting

In This Chapter

Other error conditions not outlined in this section may depend on the software modules loaded into the TES3 and TES5, and on the application software that provides the data for encoding. Please refer to the manuals for these software packages for additional troubleshooting assistance.

This chapter contains the following sections:

- Replacing a Fuse
- Fails to Start
- Stays in Bypass
- Cannot Decode Data Encoded by the TES3 and TES5
- Other Operating Difficulties

Replacing a Fuse

The AC power to the TES3 and TES5 is protected by a 1-ampere fuse; this is located behind a small cover on the rear-panel power entry module. If the power cord is attached to the TES3 and TES5 and plugged into a live AC outlet, and the power switch is in the **ON** position, yet none of the LEDs on the TES3 and TES5's front panel come on, the fuse has probably blown.



Note — *The supplied two fuses are Littelfuse® part number 218001.*

To replace a fuse

1. Remove the power cord from the receptacle on the rear of the TES3 and TES5.
2. Insert a small screwdriver or equivalent tool into the small slot at the upper edge of the fuse holder in the center of the power entry module. Press downwards and pull slightly outwards to disengage the upper clip.
3. Repeat the preceding step on the lower clip of the fuse holder.
4. If necessary, repeat steps 2 and 3 to fully release the fuse holder.
5. Carefully pull the fuse holder out of its housing, and be prepared to catch the fuse if it falls out.
6. Replace the live (upper) fuse by the spare one in the lower container marked “spare fuse”.
7. If you have a supply of fuses available, place a new one in the “spare” location.
8. Carefully return the fuse holder to its housing, and press lightly until it clicks into place. Note that it is keyed so that you cannot insert it incorrectly.
9. Plug the power cord back into the TES3 and TES5's receptacle, and turn the power switch to the on (up) position.

Fails to Start

The **STATUS** LED on the front panel is red when the unit is first powered on. After initialization, the LED should turn green.

If the indicator is red for more than 1 minute after power-on, turn the unit off for several seconds and then back on. If the indicator is still red after 1 minute, contact Ross Video Technical Support. Note that if this LED occasionally switches between red and green during operation, this does not necessarily indicate a problem.

Stays in Bypass

The TES3 and TES5 requires the following conditions to switch from bypass to active:

- power on;
- front-panel bypass switch pressed in;
- bypass switch contacts on **REMOTE** connector open;
- VIDEO IN present.

If the bypass LED stays on after the TES has fully powered up, even though all the above conditions are met, please check that the video input is the correct type (analog for the TES3, SMPTE 259M SDI for the TES5). If so, there may be an internal fault in the TES. Contact Ross Video Technical Support.

Cannot Decode Data Encoded by the TES3 and TES5

If the TES3 and TES5 is out of bypass, and it has been set up to encode VBI services, these services should be injected into the designated lines of the Video Out signal. If you believe that they are not, please check the following:

- The **PGM VIDEO** and **INSERT** LEDs should both be illuminated green. The **INSERT** LED may be blinking if the data is not continuous.
- If **PGM VIDEO** is green and **INSERT** is off, no data is being provided for insertion. Use the setup software to check the settings. Check that the data port that should be providing the data (e.g. Port A-C, LAN or MODEM) is connected and that the data source is operating.
- If using one of the RS232 connections Port A-C, check that the baud rate is set properly and that the cable is the proper null modem type, as defined in section 2.3.6. If the LED for the specified port is on or flashing green, data is being received and there is probably an incorrect setting in the TES. If the LED for the specified port is solidly off, the problem is with the data source or the cable.
- If using the LAN connection, check that the **LAN** LED is on. Check that the LAN settings of the TES (IP address etc.) match those used by the application that is sending the data. Make sure that the sending application is running.
- If both **PGM VIDEO** and **INSERT** LEDs are green, encoding is taking place. If you are unable to decode the data from the expected line downstream, check the following possibilities. The TES may be setup to encode with a different VBI format, or in a different line than those expected by the decoding equipment; check the settings. There may be equipment downstream from the TES that is damaging the inserted data; try connecting the decoding device directly to the video output of the TES, to check this. If you have access to a waveform monitor or video analyzer, connect the TES Video Out to it, to verify the presence and coding of the encoded data.

Other Operating Difficulties

The operation of the TES is strongly dependent on the software that is installed in it. This manual therefore does not discuss all aspects of operating the TES. If you should experience difficulty in operating the TES, please refer to the *TES3 and TES5 Encoder Software User Manual*. For additional assistance, please contact Ross Technical Support.

Specifications

In This Chapter

This chapter provides the technical specification information for the TES3 and TES5. Note that technical specifications are subject to change without notice.

The following topics are discussed:

- Technical Specifications

Technical Specifications

This section provides technical information on the TES3 and TES5.

Electrical Specifications

Table 5.1 TES3 and TES5 Electrical Specifications

Connector	Specification
PORT A	RS232, up to 115.2K bits/sec, see Table 5.7 for pinouts
PORT B	RS232, up to 115.2K bits/sec, see Table 5.7 for pinouts
PORT C	RS232, up to 115.2K bits/sec, see Table 5.7 for pinouts
AUXILIARY VIDEO IN	Analog composite, 1 Vpp into 75ohms
PROGRAM VIDEO IN	TES3: Analog composite, 1.0 Vpp, 75ohms TES5: SMPTE 259 component SDI, 800 mv, 270 Mbit/sec, 75ohms
PROGRAM VIDEO OUT	TES3: Analog composite, 1.0 Vpp, 75ohms. TES5: SMPTE 259 component SDI, 800 mv, 270 Mbit/sec, 75ohms
MODEM	Analog telephone line
LAN	Ethernet connection, 10/100-baseT
REMOTE	TTL in and out, see Figure 5.1 for pinouts
PARALLEL	TTL in and out. Not presently used.

AC Power Specifications

Table 5.2 AC Power Specifications

Category	Specification
Voltage	90 to 250 VAC
Frequency	47 to 63 Hz
Current	0.2 A
Fuse	1 A

Mechanical Specifications

Table 5.3 Mechanical Specifications

Category	Dimension
Width	19" (48.3 cm)
Height	1.72" (4.4 cm)
Depth	12.2" (31cm)
Weight	6.6 lbs (3.0 kg)

Environmental Specifications

Table 5.4 AC Power Specifications

Category	Specification
Operating Ambient Temperature	0-40° C (32-104° F)
Relative Humidity	10-90% non-condensing

TES3 Program Video Specifications

Table 5.5 TES3 and TES5 Electrical Specifications

Category	Specification
Video Gain	100% $\pm$ 0.2%
2T pulse/bar ratio	100% $\pm$ 0.2%
1T pulse/bar ratio	100% $\pm$ 0.2%
0.5T pulse/bar ratio	100% $\pm$ 0.2%
Chroma/Luma Gain inequality (12.5T)	< 0.2%
Chroma/Luma Delay inequality (12.5T)	< 10 ns
Field square-wave tilt	< 0.2%
Line Time Distortion	< 0.2%
Luma non-linearity	< 0.2%
Blanking Level (DC bounce)	0V $\pm$ 10 mV
Clamp time (DC bounce)	< 4 ms
Spurious (e.g. switching transients)	< 10 mVp-p
Random noise	< 60 dB
Frequency Response (multi-burst)	0-5 MHz: < 0.2%
Differential Gain	< 0.2%
Differential Phase	< 0.2°
Input Return Loss Power On (multi-burst)	> 46 dB to 5 MHz
Input Return Loss Power Off or Bypass	> 40 dB to 5 MHz

TES5 Program Video Specifications

Table 5.6 TES5 Program Video Specifications

Category	Specification
Input cable equalization (pathological signal)	> 300 m of type 8281 cable
Output jitter	< 0.08 UI
Input return loss (active)	> 15 dB to 270 MHz
Input return loss (bypass)	> 13 dB to 270 MHz

Cabling Information

This section provides additional cabling information for the TES3 and TES5.

Serial Port

The pin connections for **PORT A**, **PORT B** or **PORT C** are shown in **Table 5.7**. These D9 jacks are the same type commonly found on PCs.

Table 5.7 D9 Pin Connections

Pin	Signal	Direction
1	DCD	Input to TES
2	RXD	Input to TES
3	TXD	Output to TES
4	DTR	Output to TES
5	GND	Ground reference
6	DSR	Input to TES
7	RTS	Output from TES
8	CTS	Input to TES
9	RI	Not connected

Table 5.8 shows the wiring of the null modem cable supplied with the TES3 and TES5. This table can be used to construct a cable to connect **PORT A**, **PORT B** or **PORT C** to a **COM** port on a PC or other such equipment. This shows, for example, that the DTR signal on pin 4 of the TES drives pins 1 (DCD) and 6 (DSR) on the PC.

Table 5.8 Connection from TES3 and TES5 to a PC

TES3 and TES5 Connector		PC D9 Connector	
Pin	Name	Pin	Name
2	RXD	3	TXD
3	TXD	2	RXD
4	DTR	1	DCD
		6	DSR
5	GND	5	GND
1	DCD	4	DTR
6	DSR		
7	RTS	8	CTS
8	CTS	7	RTS
9	No connection	9	No Connection

Remote Connector Pinouts

A remote bypass switch can be implemented by connecting one side of a single pole single throw switch to pin 1 of the **REMOTE** connector and the other side to pin 2. An indication of the active/bypass state can be given by connecting the anode of a LED to pin 3 and the cathode to pin 2. (Figure 5.1)

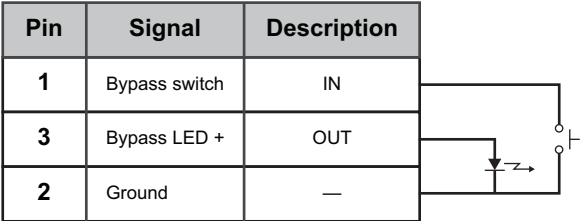


Figure 5.1 Remote Connector Wiring

Notes:

Notes:

Notes:

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Technical Support

Telephone: +1 613 • 652 • 4886
After Hours Emergency: +1 613 • 349 • 0006
Email: techsupport@rossvideo.com

General Information

Telephone: +1 613 • 652 • 4886
Fax: +1 613 • 652 • 4425
Email: solutions@rossvideo.com
Website: <http://www.rossvideo.com>

Visit Us

Visit our website for:

- Company information and news
- Related products and full product lines
- Online catalog
- Testimonials

The logo for ROSS, featuring the word "ROSS" in a bold, red, italicized sans-serif font. A red horizontal line is positioned below the letters "SS".