


# QSP-8229A

## Quad Split User Manual

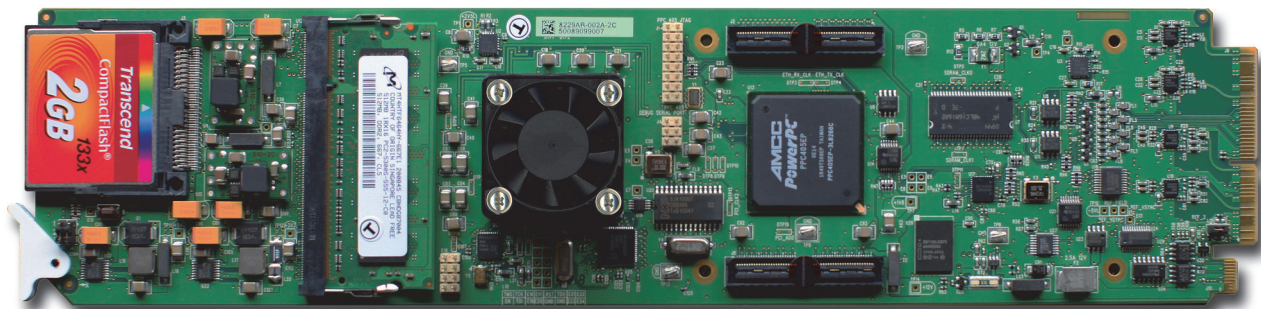

# Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
  - offer the best product quality and support
2. Make Cool Practical Technology
  - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at [solutions@rossvideo.com](mailto:solutions@rossvideo.com).



David Ross  
CEO, Ross Video  
[dross@rossvideo.com](mailto:dross@rossvideo.com)

## Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

# QSP-8229A · User Manual

- Ross Part Number: 8229ADR-004-02
- Release Date: January 31, 2018.

The information contained in this Guide is subject to change without notice or obligation.

## Copyright

©2018 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

## Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

## Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

## Safety Notices

Refer to the “**Important Regulatory and Safety Notices**” document that accompanied your product.

## Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as certification or Declaration of Compliance for the product is available upon request by contacting [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com). Please include the product; model number identifiers and serial number and country that compliance information is needed in request.

## EMC Notices

### US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio

communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

---

**Notice** — *Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.*

---

#### Canada

This Class “A” digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules.

Cet appareil numérique de la classe “A” est conforme à la norme NMB-003 du Canada.

#### European Union

This equipment is in compliance with the essential requirements and other relevant provisions established under regulation (EC) No 765/2008 and Decision No 768/2008/EC referred to as the “New Legislative Framework”.



---

**Warning** — *This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.*

---

#### Australia/New Zealand

This equipment is in compliance with the provisions established under the Radiocommunications Act 1992 and Radiocommunications Labeling (Electromagnetic Compatibility) Notice 2008.

#### Korea

This equipment is in compliance with the provisions established under the Radio Waves Act.

Class A equipment (Broadcasting and communications service for business use)

This device is a business-use (Class A) EMC-compliant device. The seller and user are advised to be aware of this fact. This device is intended for use in areas outside home.

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
Class A Equipment (Industrial Broadcasting & Communication Equipment)	This equipment is <b>Industrial (Class A) electromagnetic wave suitability equipment</b> and seller or user should take notice of it, and this equipment is to be used in the places except for home.

#### International

This equipment has been tested under the requirements of CISPR 22:2008 or CISPR 32:2015 and found to comply with the limits for a Class A Digital device.

---

**Notice** — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

---

## Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the “**Contact Us**” section of this manual. All openGear products are covered by a generous 5-year warranty

and will be repaired without charge for materials or labor within this period. See the “**Warranty and Repair Policy**” section in this manual for details.

## Environmental Information

The equipment may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

## Company Address



### **Ross Video Limited**

8 John Street  
Iroquois, Ontario, K0E 1K0  
Canada

### **Ross Video Incorporated**

P.O. Box 880  
Ogdensburg, New York  
USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

E-mail (General Information): [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website: <http://www.rossvideo.com>



# Contents

<b>Introduction</b>	<b>1</b>
In This Chapter .....	1-1
Overview.....	1-2
Features.....	1-2
Functional Block Diagrams .....	1-3
Non-Looping Configuration (8310AR-033, 8320AR-033) .....	1-3
Looping Configuration (8320AR-049).....	1-4
User Interfaces .....	1-5
DashBoard Control System .....	1-5
Card-edge Controls.....	1-5
SNMP Monitoring and Control .....	1-5
Documentation Terms and Conventions.....	1-6
 <b>Installation</b>	 <b>2</b>
In This Chapter .....	2-1
Before You Begin .....	2-2
Card Overview .....	2-3
Card-edge LEDs .....	2-4
Card Installation.....	2-5
Rear Modules.....	2-5
Installing the Rear Modules.....	2-6
Cabling for the Non-Looping Rear Modules .....	2-8
Overview .....	2-8
Cabling for the Looping Rear Module.....	2-10
Overview .....	2-10
Cabling the Video Inputs and Outputs .....	2-10
Ethernet Port Cabling.....	2-11
Ethernet Communication Cabling .....	2-11
GPI Cabling .....	2-12
GPI Cable Connections .....	2-12
Tally Cabling .....	2-13
GPI Port Cabling .....	2-13
Serial Port Cabling .....	2-13
Ethernet Port Cabling .....	2-14
 <b>Configuration</b>	 <b>3</b>
In This Chapter .....	3-1
Ethernet Communication Setup .....	3-2
Selecting the Reference Source .....	3-3
Output Format Reference Compatibility .....	3-3
Selecting a Reference Source .....	3-3
Selecting the Video Format .....	3-5
Video Input and Output Configuration.....	3-6
Configuring the Video Outputs .....	3-6
Configuring the Input Signal Timing Display.....	3-7
Signal Loss Alarm Setup .....	3-8

GPI Communication Setup .....	3-9
GPI Overview .....	3-9
GPI Communication Setup .....	3-9
Tally Communication Setup .....	3-11
Enable the Tally UMD Feature.....	3-11
Set up Communications .....	3-12
Loading the Factory Defaults .....	3-16
Software Upgrades .....	3-17
<b>Operation</b> .....	<b>4</b>
In This Chapter.....	4-1
Adjusting the Proc Amp Controls .....	4-2
Configuring the Quad Split Sources .....	4-4
Assigning Sources to the Quad Split .....	4-4
Applying a Border .....	4-5
Notes on Timing.....	4-6
<b>DashBoard Menus</b> .....	<b>5</b>
In This Chapter.....	5-1
Status Tabs .....	5-2
Signal Tab .....	5-2
Hardware Tab .....	5-3
Configuration Tabs.....	5-5
Video Configuration .....	5-5
GPI/Tally Configuration .....	5-6
Ethernet Configuration .....	5-9
Personality Configuration.....	5-10
Load/Save .....	5-10
Proc Amps Tab.....	5-11
Quad Split Tabs.....	5-12
Video/Label Tab .....	5-12
Tally/Border Tab .....	5-12
Bkgd A, B, C, D Tabs.....	5-13
<b>Appendix E. Software Licenses</b> .....	<b>6</b>
In This Appendix.....	6-1
BSD .....	6-2
Dual GPL/Free Type .....	6-3
GPL .....	6-4
IJG .....	6-8
LGPL.....	6-9
MIT .....	6-11
zlib.....	6-12
<b>Appendix B. Specifications</b> .....	<b>7</b>
In This Appendix.....	7-1
8310AR-033 and 8320AR-033 Specifications.....	7-2
8320AR-049 Specifications .....	7-3
<b>Appendix C. Service Information</b> .....	<b>8</b>
In This Chapter.....	8-1
Troubleshooting Checklist .....	8-2
Warranty and Repair Policy .....	8-3



# Introduction

---

## In This Chapter

This chapter contains the following sections:

- Overview
- Functional Block Diagrams
- User Interfaces
- Documentation Terms and Conventions

### A Word of Thanks

Congratulations on choosing an openGear QSP-8229A Quad Split. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your QSP-8229A, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

---

# Overview

The QSP-8229A takes four SDI input streams and can reduce them into four quadrants in a single stream. The QSP-8229A has four SDI outputs which can be independently configured to display either the full-screen input or the Quad Split stream. When the output is showing full-screen, all HANC and VANC data, including the embedded audio data on the input is carried through to the output. When the output is showing Quad Split, all HANC and VANC data, including embedded audio, is stripped.

In addition, the 8320AR-049 Rear Module was designed to be used with the QSP-8229A in the DFR-8321 and OG3-FR series frames to loop its inputs to a system, such as the Carbonite® production switcher, for a multi-viewer application.

GPI control allows external devices to choose which of the input selections, including the Quad Split, will be assigned to the outputs.

## Features

The following features are included for the QSP-8229A:


- Compliance with SDI SMPTE 292M (1.485Gbps) and SMPTE 259M (270Mbps)
- Multi-Definition support of popular formats such as 1080i, 720p, 480i, 576i, 1080pSF
- Assign any input, or Black, to any quadrant
- Text overlay to name the four input sources in the Quad Split
- Configure GPIs to trigger any of the outputs or a specific quadrant
- On-screen tallies controlled by GPI, serial protocol (TSL UMD v3.1) or ethernet (TSL over UDP/TCP); quadrant text labels are updated dynamically
- Specify how the input signal timing is reported (relative to the reference or the output)
- Bypass relay from BKGD A input to Output 1 (*8310AR-033 and 8320AR-033 Rear Modules only*)
- Four passive looping inputs (*8320AR-049 Rear Module only*)
- User selectable card analog reference
- Report status and configuration remotely via DashBoard
- Ethernet 10/100 Mbit connectivity for easy upgrades in the field
- Independent Proc-Amp control on outputs
- Full DashBoard control and monitoring
- Fully compliant with openGear specifications and installs in the openGear frames
- 5 year transferable warranty

# Functional Block Diagrams

This section provides the functional block diagrams for the QSP-8229A.

## Non-Looping Configuration (8310AR-033, 8320AR-033)

This section includes the block diagram when using the QSP-8229A with the 8310AR-033 or 8320AR-033 Rear Modules.

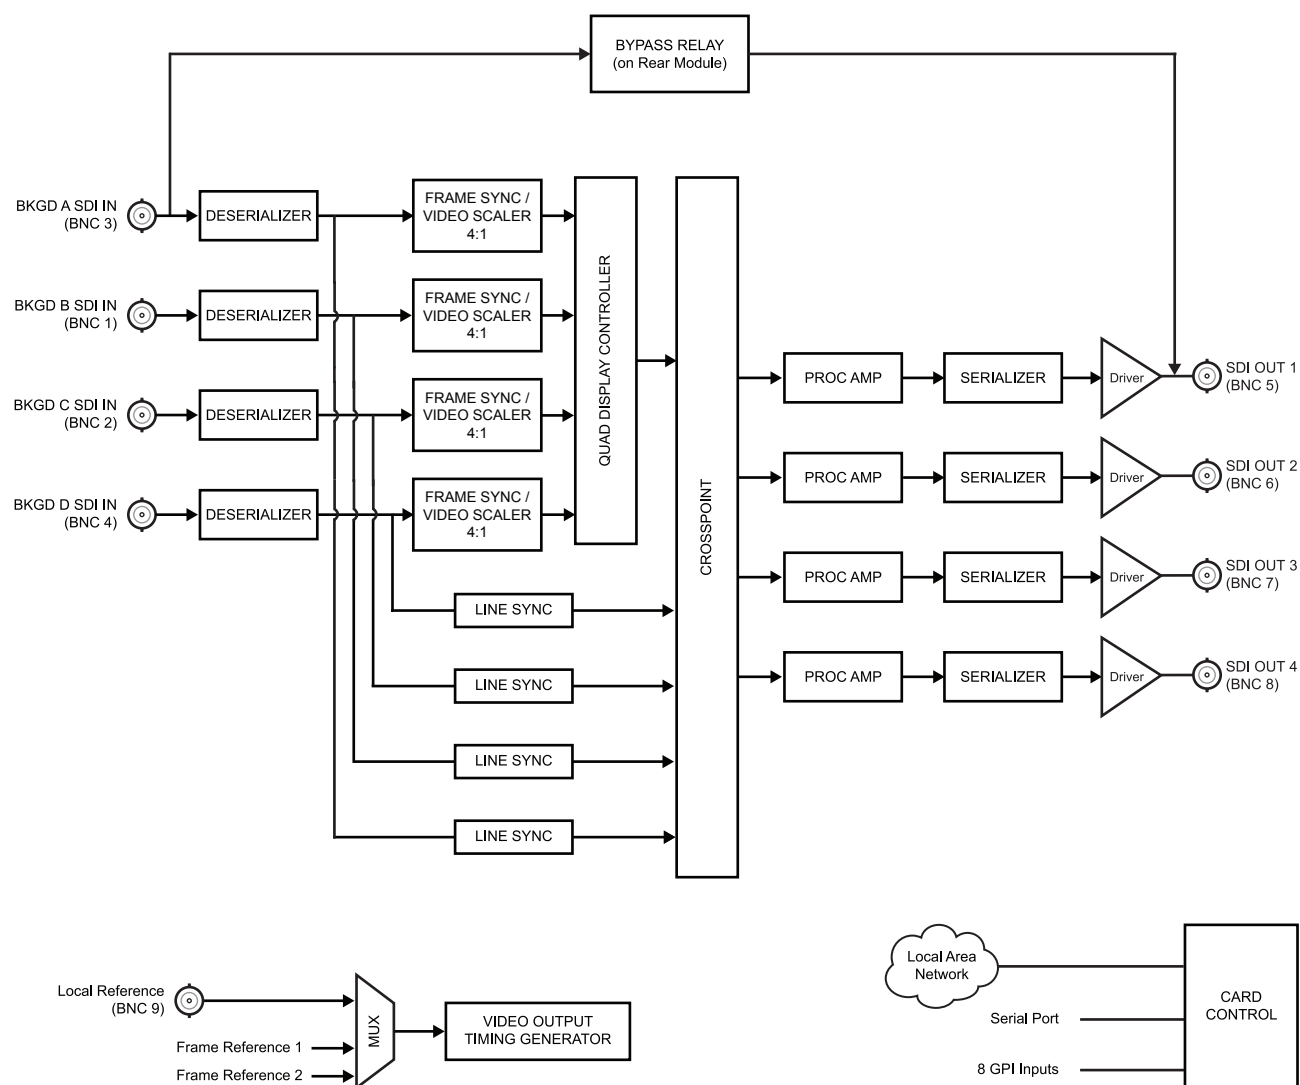

**Figure 1.1** QSP-8229A Block Diagram — 8310AR-033 and 8310AR-033 Rear Modules

## Looping Configuration (8320AR-049)

This section includes the block diagram when using the QSP-8229A with the 8320AR-049 Rear Module.

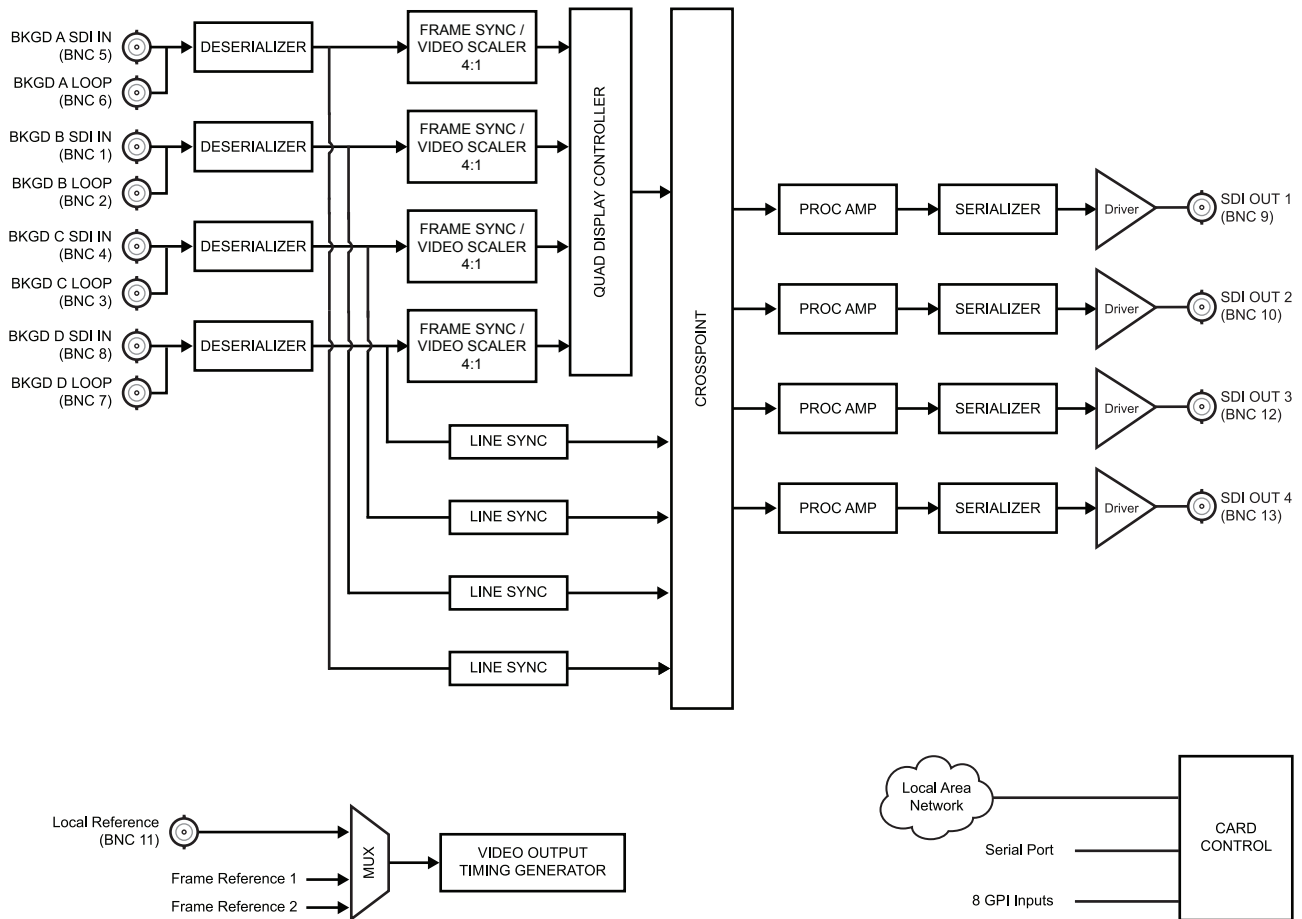


Figure 1.2 QSP-8229A Block Diagram — 8320AR-049 Rear Module

---

# User Interfaces

The QSP-8229A includes the following user interfaces.

## DashBoard Control System

DashBoard enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with cards in the openGear frame through the Network Controller Card. This controller card is required in order to use DashBoard to monitor the QSP-8229A card. The DashBoard software and manual are available for download from our website.

### ***For More Information on...***

- setting up and using the Network Controller Card, refer to its user manual.
- the QSP-8229A series menus in DashBoard, refer to the section “**DashBoard Menus**” on page 5-1.

## Card-edge Controls

The front-edge of the card features LED indicators for input status and communication activity. The card-edge also includes a 3-position jumper block used to configure the termination on the local reference input.

### ***For More Information on...***

- using the card-edge controls, refer to the section refer to the section “**Card Overview**” on page 2-3.
- the LEDs, refer to the section refer to the section “**Card-edge LEDs**” on page 2-4.

## SNMP Monitoring and Control

The Network Controller card in the openGear frame provides optional support for remote monitoring of your frame and the QSP-8229A card using Simple Network Management Protocol (SNMP), which is compatible with many third-party monitoring and control tools.

### ***For More Information on...***

- enabling SNMP Monitoring and Control for your frame, refer to the *MFC-8300 Series* or *MFC-OG3 Series User Manual*.
- SNMP controls for your card, refer to its Management Information Base (MIB) file.

---

# Documentation Terms and Conventions

The following terms and conventions are used throughout this manual.

## Terms

The following terms are used throughout this manual:

- “**Bkgd**” refers to a Background source (A, B, C, or D).
- “**Board**” or “**Card**” refers to the QSP-8229A, including all components and switches unless otherwise noted.
- “**DashBoard**” refers to the DashBoard Control System.
- “**DFR-8300 series frame**” also includes all versions of the DFR-8310 and DFR-8321 series frames and any available options unless otherwise noted.
- “**LL**” refers to the Lower Left quadrant.
- “**Looping Rear Module**” refers to the 8320AR-049 Rear Module.
- “**LR**” refers to the Lower Right quadrant.
- “**Non-looping rear module**” refers to the 8310AR-033 or 8320AR-033 Rear Modules unless otherwise stated.
- “**OG3-FR series frames**” refers to all versions of the OG3-FR series frames and any available options unless otherwise noted.
- “**openGear frame**” refers to the DFR-8300 series and OG3-FR series frames and any available options unless otherwise noted.
- “**Operator**” and “**User**” refers to the person who uses the QSP-8229A.
- “**System**” and “**Video System**” refers to the mix of interconnected digital and analog production equipment in which the QSP-8229A operates.
- “**UL**” refers to the Upper Left quadrant.
- “**UR**” refers to the Upper Right quadrant.

## Conventions

The following conventions are used throughout this manual:

- The “**Operating Tips**” and “**Note**” boxes are used throughout this manual to provide additional user information.

# Installation

---

## In This Chapter

This chapter provides instructions for the basic physical installation and communications setup of your QSP-8229A.

The following topics are discussed:

- Before You Begin
- Card Overview
- Card Installation
- Cabling for the Non-Looping Rear Modules
- Cabling for the Looping Rear Module
- Ethernet Port Cabling
- GPI Cabling
- Tally Cabling

---

# Before You Begin

Before you begin, ensure that you are using DashBoard version 4.0.0 or higher. The DashBoard software and user manual are available to download from the Ross Video website.

## Static Discharge

Throughout this chapter, please heed the following cautionary note:



---

**ESD Susceptibility** — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

---

## Unpacking

Unpack each card you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.



# Card Overview

This section provides an overview of the QSP-8229A components.

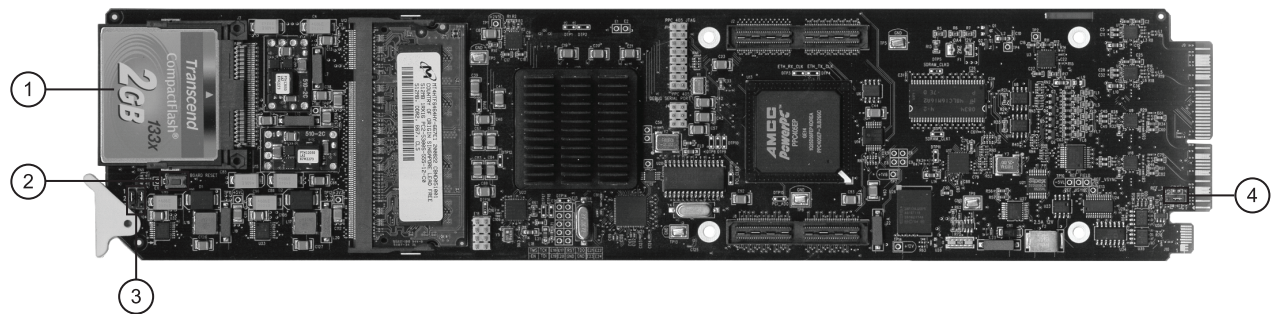


Figure 2.1 Card-edge Components

1) CompactFlash® Card	3) JP5, JP6
2) Board Reset Button (SW1)	4) Reference Termination (JP7)

1. CompactFlash® Card

The CompactFlash® card is reserved for future usage.

2. Board Reset Button (SW1)

Pressing this button resets the microprocessor and re-initializes the card. This is a hard reset of the card and settings are not saved. This may cause loss of data and should only be performed as advised by Ross Video Technical Support.

3. JP5, JP6

These jumpers are not yet implemented and must be left in the default position of **Pin 2** (center) and **Pin 3** (bottom).

4. Reference Termination (JP7)

**JP7** is a 3-position jumper block used to configure the 75ohm termination on the local analog reference input on **BNC 9** of the 8310AR-033 and 8320AR-033 Rear Modules, or **BNC 11** of the 8320AR-049 Rear Module.

- **Pin 1** (left) + **Pin 2** (center) position — In this position, the analog reference is terminated with an 75 Ohm resistor. This configuration is to be used for point-to-point cabling, or on the last card of a daisy chain topology. This is the default position (**Figure 2.2**).





Figure 2.2 JP7 — Default Position

- **Pin 2** (center) + **Pin 3** (right) position — In this position, the 75ohm terminator is removed and the analog reference is not terminated. This configuration is used in a daisy chain cabling topology where only the last card is terminated.

## Card-edge LEDs

This section describes the card-edge LEDs. **Figure 2.3** outlines the locations of the card-edge controls.

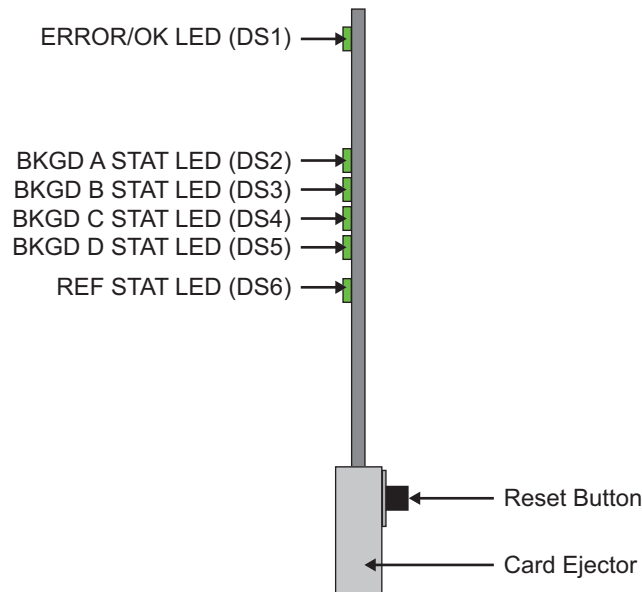

**Figure 2.3** Card-edge Controls

**Table 2.1** LEDs on the Card-edge

LED	Color	Display and Description
<b>ERROR/OK</b>	Green	When this LED is green, the card is in normal operation with no errors.
	Red	When this LED is red, the card is experiencing internal errors.
	Off	When this LED is off, there is no power to the card.
<b>BKGD A STAT</b>	Green	When this LED is green, the Bkgd A video input is valid.
	Red	When this LED is red, the Bkgd A input is not present or is invalid.
<b>BKGD B STAT</b>	Green	When this LED is green, the Bkgd B video input is valid.
	Red	When this LED is red, the Bkgd B input is not present or is invalid.
<b>BKGD C STAT</b>	Green	When this LED is green, the Bkgd C input is valid.
	Red	When this LED is red, the Bkgd C input is not present or is invalid.
<b>BKGD D STAT</b>	Green	When this LED is green, the Bkgd D input is valid.
	Red	When this LED is red, the Bkgd D input is not present or is invalid.
<b>REF STAT</b>	Green	When this LED is green, the reference signal is valid.
	Red	When this LED is red, the reference signal is not present or is invalid.

---

# Card Installation

This section provides a brief overview of the required Rear Modules and physical installation of the QSP-8229A.



---

**Note** — *The QSP-8229A requires either the 8310AR-033 or the 8320AR-033 Rear Module and therefore is not compatible with the DFR-8310-BNC frames.*

*You must install the card with its 8310AR-033 Rear Module, occupying two slots in a DFR-8310-C, or a DFR-8310-N frame. To install the card in the DFR-8321 series or OG3-FR series frame, you must use the 8320AR-033 or 8320AR-049 Rear Module, with each rear module occupying four slots in the frame.*

---

## Rear Modules

The procedure for installing the Rear Module in your openGear frame is the same regardless of the frame or module used. However, a different module is required depending on the openGear frame you are using. The Rear Module requires two slots in an openGear DFR-8310 series frame and four slots in an DFR-8321 series and OG3-FR series frames.

The rear module you install for the card depends on the frame you are using.

- **DFR-8310 series frame** — Use the **8310AR-033** Rear Module.
- **DFR-8321 series and OG3-FR series frames** — Use the **8320AR-033** or the **8320AR-049** Rear Modules.

## Power Fail Relay

The 8310AR-033 or 8320AR-033 Rear Modules provide a built in bypass relay from BKGD A to OUT 1 protects your on-air feed when the device is taken off-line and ensures critical program content is not lost.

The purpose of this relay is as follows:

- When the card is removed from the frame, the relay passes video from the BKGD A input to the Output 1 of the card. This allows the card to be serviced without interrupting the video signal.
- If the card loses power, or the frame loses power, the video still passes through.
- When the card boots, the relay will be left in Bypass mode until the card can generate a valid output. Once the card is up and functional, the relay is disabled.

## 8320AR-049 Rear Module

The 8320AR-049 Rear Module provides a passive looping BNC on all four SDI inputs (BKGD A, B, C, and D). The SDI source signal should be connected to the BNC IN input and if required, the SDI input signal may be propagated to one more downstream equipment using the associated BNC Loop output. Refer to the section “**Cabling for the Looping Rear Module**” on page 2-10 for BNC designations and for additional cabling information.

- If you are using the BNC Loop output(s), then the looping SDI cable must drive only one piece of downstream equipment properly terminated with a 75ohm load at all time. If the downstream equipment must be disconnected for servicing, it is recommended to first disconnect the cable at the BNC Loop output of the 8320AR-049 Rear Module, otherwise the looping cable without termination will cause signal reflection that will likely corrupt the QSP-8229A SDI input signal.
- If you are not using the looping output, then the BNC Loop should be left open without any cable or standalone 75ohm termination attached to the BNC.

# Installing the Rear Modules

If the Rear Module is already installed, skip this section.

## To install a rear module in an openGear frame

1. Refer to the user manual for your openGear frame to ensure that the frame is properly installed according to instructions.
2. If you are installing the QSP-8229A in a **DFR-8310 series frame**, Ross Video recommends installing the Rear Module in one of the following combinations:
  - Slots 3, 4
  - Slots 7, 8
  - Slots 5, 6
  - Slots 9, 10



---

**Note** — Ross Video does not recommend installing the card in the Slots 1,2 combination in a DFR-8310 series frame. This combination provides the least air flow cooling in the frame.

---

3. If you are installing the **8320AR-033** Rear Module in a **DFR-8321 series frame** or an **OG3-FR series frame**, Ross Video recommends installing the Rear Module in one of the following combinations:
  - Slots 5, 6, 7, 8
  - Slots 13, 14, 15, 16
  - Slots 9, 10, 11, 12
  - Slots 17, 18, 19, 20



---

**Note** — Ross Video does not recommend installing the card in the Slots 1,2, 3, 4 combination in a DFR-8321 series frame. This combination provides the least air flow cooling in the frame.

---

4. If you are installing the **8320AR-049** Rear Module in a **DFR-8321 series frame** or an **OG3-FR series frame**, Ross Video recommends installing the Rear Module in one of the following combinations:
  - Slots 5, 6, 7, 8
  - Slots 13, 14, 15, 16
  - Slots 9, 10, 11, 12
  - Slots 17, 18, 19, 20
5. Remove the Blank Plates from the rear of the selected card frame slots.
6. Seat the bottom of the Rear Module in the seating slot at the base of the backplane of the frame.
7. Align the top holes of the Rear Module with the screw holes on the top-edge of the frame backplane.
8. Verify that the QSP-8229A aligns with the Rear Module before fully tightening any of the slot screws.
9. Using a Phillips screwdriver and the supplied screws, fasten the Rear Module to the backplane. Do not over tighten.
10. Verify whether your Rear Module Label is self-adhesive by checking the back of the label for a thin wax sheet. You must remove the wax sheet before affixing the label.
11. Affix the supplied Rear Module Label to the BNC area of the Rear Module.
12. Ensure proper frame cooling and ventilation by having all rear frame rails covered with Rear Modules or Blank Plates.

## Installing the Card

Use the following procedure to install the card in an openGear frame:


1. Ensure that the openGear frame is properly installed.
2. If you are installing the QSP-8229A in a **DFR-8310 series frame**, install the card into an odd-numbered slot (e.g. slot 5, 7, or 9).
3. If you are installing the QSP-8229A in a **DFR-8321 series frame** or an **OG3-FR series frame**, and depending on the rear module and slot combination you chose for the rear module, install the card into one of the following slots:
  - **8320AR-033** Rear Module — Install the card in slot 6, 10, 14, or 18.
  - **8320AR-049** Rear Module — Install the card in slot 7, 11, 15, or 19.
4. Hold the card by the edges and carefully align the card edges with the rails in the frame.
5. Fully insert the card into the frame until the card is properly seated in the Rear Module.

# Cabling for the Non-Looping Rear Modules


This section provides information when cabling the 8310AR-033 and 8320AR-033 Rear Modules. These rear modules do not support the looping feature

## Overview

Refer to **Figure 2.4** and **Figure 2.5** for cabling designations when installing the 8310AR-033 and 8320AR-033 Rear Modules respectively.

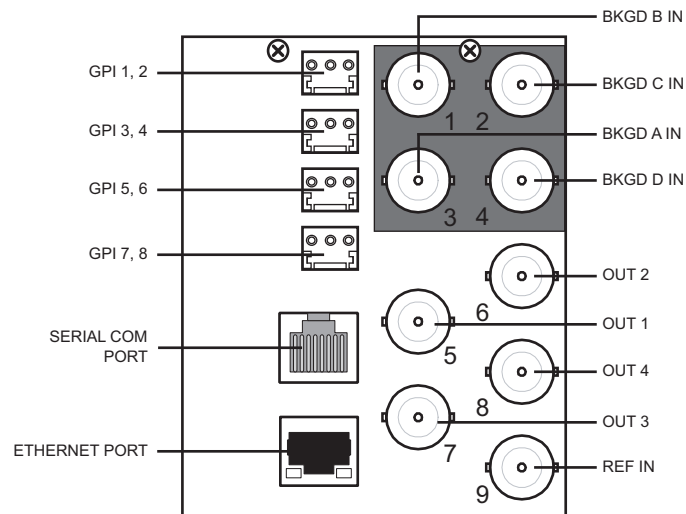

**Figure 2.4** 8310AR-033 Cable Connections

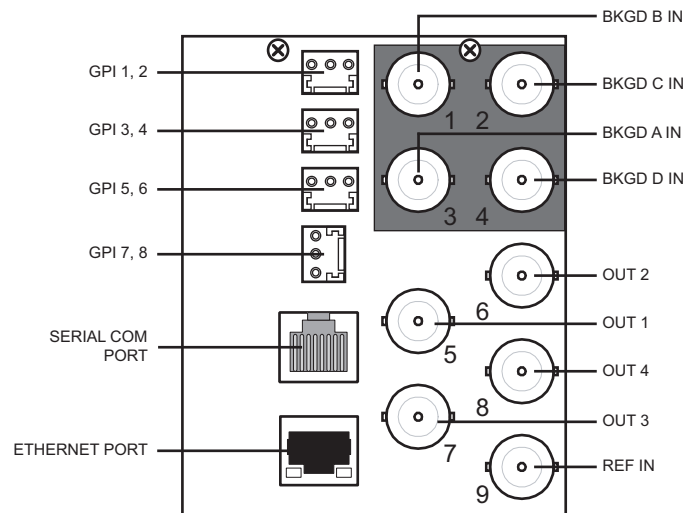

**Figure 2.5** 8320AR-033 Cable Connections

## Cabling the Video Inputs and Outputs

You can use up to 80m of industry standard 75ohm coaxial cable with these rear modules.

### To connect video input and output cables to the Rear Module


1. Connect the appropriate input video sources to the BNC connectors on the Rear Module.
2. Connect the output BNC connectors as required for your facility.
3. To use an external reference source other than the Frame Ref 1 and Frame Ref 2:
  - Connect the reference input source to **BNC 9**.
  - Configure **JP7** for the 75ohm termination on the local reference. Refer to the section “**Card Overview**” on page 2-3 for details.

# Cabling for the Looping Rear Module

The Looping feature is only available for the QSP-8229A when using the **8320AR-049** Rear Module in an DFR-8321 series frame or OG3-FR series frame.

## Overview

Refer to **Figure 2.6** for cabling designations.

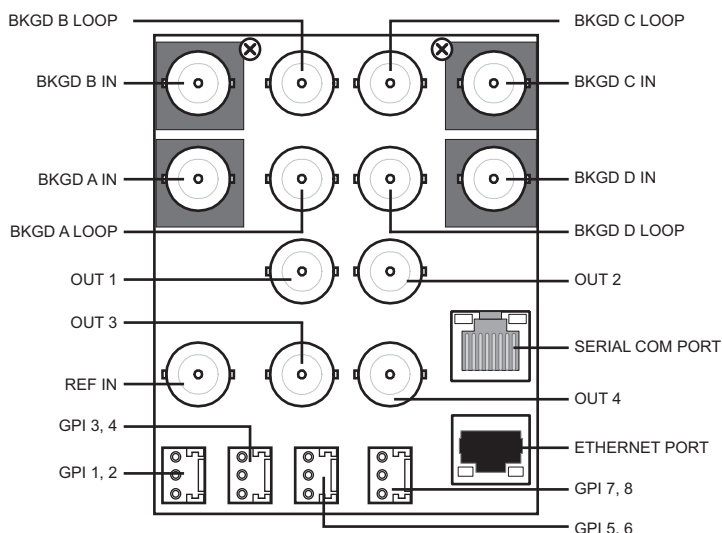

**Figure 2.6** 8320AR-049 Cable Connections

## Cabling the Video Inputs and Outputs

Refer to **Table 2.2** for tested cable lengths. Note that other configurations respecting the total cable lengths are possible, but are not listed here.

**Table 2.2** Cabling Lengths for the 8320AR-049 Rear Module

Configuration	Input Cable Length	Loop Cable Length	Total Cable Length
270Mbps	145m	5m	150m
	5m	145m	150m
1.5Gbps	50m	4m	54m
	4m	50m	54m

### To connect video input and output cables to the Rear Module

1. Connect the appropriate input and output sources to the BNC connectors on the Rear Module. You do not need to terminate the Loop BNC(s) if you are not setting up a looping application.
2. To use an external reference source other than the Frame Ref 1 and Frame Ref 2:
  - Connect the reference input source to **BNC 11**.
  - Configure **JP7** for the 75ohm termination on the local reference. Refer to the section “**Card Overview**” on page 2-3 for details.



---

# Ethernet Port Cabling

The **Ethernet** port on the Rear Module is used to connect to an ethernet network for communications, and software upgrades using the DashBoard Control System.

This section presents a general overview of the ethernet connection process. The exact steps for connecting your card to your facility via an ethernet network depends on the network requirements of your facility.



---

**Note** — *Contact your IT Department before connecting the card to your facility network to ensure that there are no conflicts. They will provide you with an appropriate value for the IP Address, Subnet Mask, and Gateway for the card.*

---

## Ethernet Communication Cabling

In order to properly complete this procedure, you need the following cables and equipment:

- **Ethernet Cable** — This is a standard network CAT-5 cable to connect the card to your facility network. You can use a standard straight-through ethernet cable, with no need for a crossover cable as the card includes an Auto-MDIX ethernet PHY that will switch from straight to crossover automatically as needed. Ross Video does not supply this cable.

### To connect the card to an ethernet network

1. Ensure that you are running DashBoard version 4.0.0 or higher before proceeding. The DashBoard Control System software and user manual are available to download from the Ross Video website.
2. Connect the card to the same subnet as your DashBoard computer or to a network that has a route to the network your DashBoard computer is on. Refer to the section “**Cabling for the Non-Looping Rear Modules**” on page 2-8 for the **Ethernet** port location on your Rear Module.
3. Make a note of the IP Address as this information is required when configuring the communication settings for your card.
  - Network topologies vary greatly between facilities. Contact your IT Department for assistance in connecting your card to the appropriate network at your location.

### For More Information on...

- setting up the ethernet communications for the card, refer to the section “**Ethernet Communication Setup**” on page 3-2.

# GPI Cabling

The QSP-8229A includes eight General Purpose Input (GPI) pins to interface with external equipment. There are eight input pins labeled GPIO 1-8 on the terminal block of the Rear Module (**Figure 2.4, Figure 2.5, or Figure 2.6**). Ports are pre-configured to be only an input (GPI). Electrically, the ports are set up for contact closure to ground, with 4.75Kohm pull-up resistor to +5V, so they default to a logical high state.




**Note** — *The default state for the GPI/O contacts is active low signaling. If a GPI cable is absent from the Rear Module, no GPI will be triggered and executed inadvertently by the card.*

## GPI Cable Connections


The GPI ports are available on four 3-pin WECO® connectors located on the Rear Module. Four 3-pin mating WECO® connectors are provided with the Rear Module. This section provides information for connecting GPI/Tally cables to the installed Rear Modules of your openGear frame.

### To cable the rear module for GPIs


1. Locate the GPI ports on the Rear Module. Refer to the Rear Module labeling and Refer to the section “**Cabling for the Non-Looping Rear Modules**” on page 2-8 for port locations.
2. Wire the GPI ports as follows:
  - The left and right pins are the two GPI signals while the center pin is the common Ground (GND).
  - Refer to **Figure 2.7, Figure 2.8, or Figure 2.9** for GPI configuration on the Rear Module.

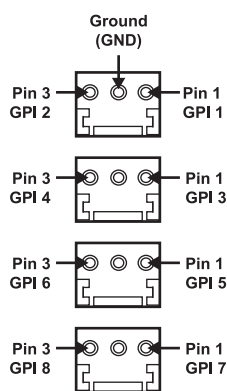

**Figure 2.7** 8310AR-033 GPI Connections

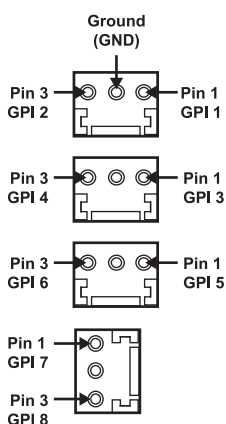

**Figure 2.8** 8320AR-033 GPI Connections

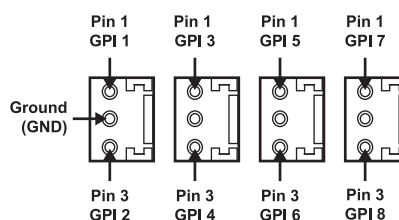

**Figure 2.9** 8320AR-049 GPI Connections

### For More Information on...

- setting up the communications for the GPI ports, refer to the section “**GPI Communication Setup**” on page 3-9.

---

# Tally Cabling

There are three methods by which on-screen tallies can be controlled with the QSP-8229A:

- **GPI** ports — Select this method to control tallies using the GPI ports on the QSP-8229A rear module.
- **Serial COM** port — Select this method to control tallies using the **Serial COM** port on the QSP-8229A rear module. The TSL UMD protocol v3.1 is used to control the tallies. If you select this method, you must also configure the QSP-8229A serial communication port to accept TSL UMD protocol messages.
- **Ethernet** port — Select this method to control tallies using the TSL UMD protocol v3.1 over a UDP or TCP connection via the **Ethernet** port on the QSP-8229A rear module. If you select this method, you must also configure the ethernet communication settings using the **Remote Control** tab.

This section outlines the physical cabling requirements for setting up on-screen tallies for the QSP-8229A. To learn more about configuring the QSP-8229A for on-screen tally communication, refer to the section “**Tally Communication Setup**” on page 3-11.



---

**Note** — *Ensure that you do not enable more than one on-screen tally communication method at any given time. Doing so may cause unpredictable on-screen tally behavior.*

---

## GPI Port Cabling

To cable the GPI ports on the QSP-8229A rear module, refer to the section “**GPI Cabling**” on page 2-12 for details.

To set up the GPI communications, refer to the section “**Tally to GPI Setup**” on page 3-12.

## Serial Port Cabling

This section outlines how to cable serial communications for the QSP-8229A. In order to properly complete this procedure, you need the following cables and equipment:

- **Serial Interface Cable** — This is a serial cable with a RJ-45 connector on one end and a connector on the other end to connect to your serial device. For the best performance, Ross Video recommends using a standard ethernet cable such as a CAT-5 or CAT-5e. **Table 2.3** includes serial cable pinout details. Ross Video does not supply this cable.

### To set up serial communications for the card

1. Refer to **Table 2.3** for pinout information for your required **Serial Interface Cable**.
2. Connect and secure the RJ-45 connector of the **Serial Interface Cable** to the **Serial COM** port on the Rear Module.
3. Connect and secure the other end of the **Serial Interface Cable** to the appropriate port on your serial device. Refer to the user manual for your serial device for pinout information and the required port to use.

### For More Information on...

- on setting up the serial communications, refer to the section “**Tally to Serial Setup**” on page 3-12.

## Serial COM Port Pin Assignment

When building cables to interface to the card **Serial COM** port, it is recommended to use CAT-5 or CAT-5e cable with the standard ethernet wiring color coding. **Table 2.3** shows the pin assignment of the **Serial COM** port located on the Rear Module.

**Table 2.3 RJ-45 Pin Assignment**

RJ45 Pin	RS-232	RS-422	RS-422 Null
1	n/c	Tx+	Rx+
2	Rx	Tx-	Rx-
3	Tx	Rx+	Tx+
4 <sup>a</sup>	+12V	+12V	+12V
5 <sup>a</sup>	+12V	+12V	+12V
6	n/c	Rx-	Tx-
7	GND	GND	GND
8	GND	GND	GND

## Ethernet Port Cabling

If you elect to control tallies using the **Ethernet** port on the QSP-8229A rear module, refer to the section “**Ethernet Port Cabling**” on page 2-11 for cabling details.

To set up the ethernet communications, refer to the section “**Tally to Ethernet Setup**” on page 3-13.

# Configuration

---

## In This Chapter

This chapter provides instructions for configuring the QSP-8229A using the options available in DashBoard.



---

**Note** — *Before proceeding, ensure that you are running DashBoard software version 4.0.0 or higher. The DashBoard Control System software and user manual are available to download from the Ross Video website.*

---

The following topics are discussed:

- Ethernet Communication Setup
- Selecting the Reference Source
- Selecting the Video Format
- Video Input and Output Configuration
- GPI Communication Setup
- Tally Communication Setup
- Loading the Factory Defaults
- Software Upgrades



---

**Operating Tip** — *Wait 30 seconds after the last setting change to ensure all changes are saved to the non-volatile memory of the card.*

---

# Ethernet Communication Setup


To enable the card to perform software upgrades, the card must be configured with valid ethernet settings for the **Ethernet** port on the Rear Module of the card. The settings can be specified manually (**Static**) or may be obtained automatically from a server on your network (**DHCP**).



**Note** — Connect the card to the same network as your DashBoard client computer or to a network that has a route to the network your DashBoard client computer is on. Refer to the section “**Ethernet Port Cabling**” on page 2-11 for cabling details.

## To set up ethernet communications for the card

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Ethernet** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Ethernet** tab located at the bottom of the **Config** tab.

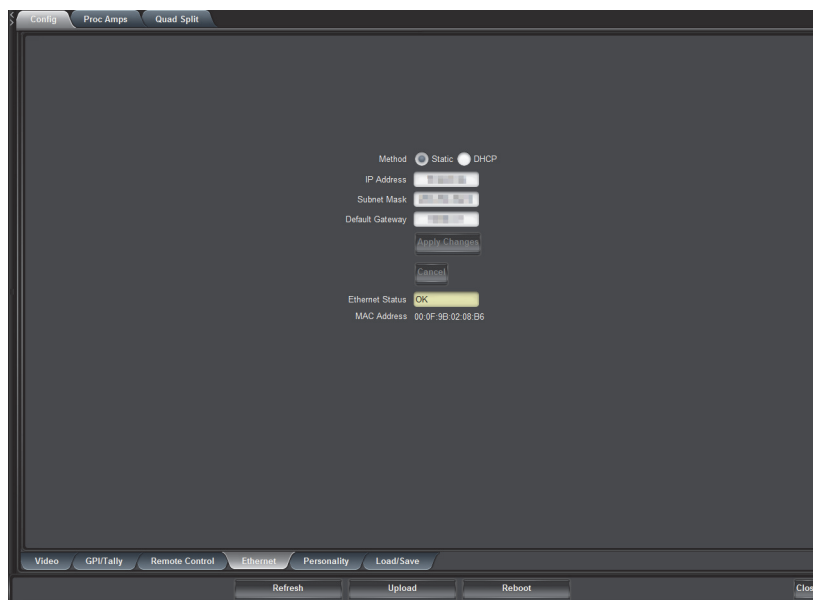

Config Tab — Ethernet Tab

3. To obtain network settings automatically:
  - Select **DHCP** from the **Method** drop-down list.
  - To save the new settings, click **Apply Changes**. Note that clicking **Cancel** will revert to the previous settings.
4. To manually configure the ethernet settings:
  - Select **Static** from the **Method** drop-down list.
  - Enter the **IP Address**, **Subnet Mask**, and **Default Gateway** settings for the card.
  - To save the new settings, click **Apply Changes**. Note that clicking **Cancel** will revert to the previous settings.



**Note** — The **Ethernet Status** field in the **Ethernet** tab displays the current status of your connection. Refer to **Table 5.7** for a list of the messages.

---

## Selecting the Reference Source

The openGear frame supports the distributed frame reference, allowing incoming reference signals to feed timing information to all cards in a frame. Thus, a single composite or tri-level sync signal can be used for multiple cards. Alternatively, each card accepts a reference signal on the rear module to provide additional system timing flexibility.

### Output Format Reference Compatibility

Depending on the reference format you use, the card will only be able to operate in certain formats (**Table 3.1**).

**Table 3.1 Output/Reference Compatibility**

Reference	Output							
	480i 59.94Hz	720p 59.94Hz	1080i 59.94Hz	576i 59.94Hz	720p 50Hz	1080i 50Hz	1080pSF 23.98Hz	1080pSF 24Hz
480i 59.94Hz	✓	✓	✓					
720p 59.94Hz		✓						
1080i 59.94Hz	✓	✓	✓					
576i 59.94Hz				✓	✓	✓		
720p 50Hz					✓			
1080i 50Hz				✓	✓	✓		
1080pSF 23.98Hz							✓	
1080pSF 24Hz								✓

### Selecting a Reference Source

This section provides information for specifying the reference source for your card.




---

**Operating Tip** — Use the **Signal** tab to monitor the Signal status, including the reference and the Background sources. Refer to the section “**Status Tabs**” on page 5-2 for more information.

---

#### To select the reference source

1. From the **Device** tab, select the **Config** tab.
2. Select the **Video** tab located at the bottom of the **Config** tab.

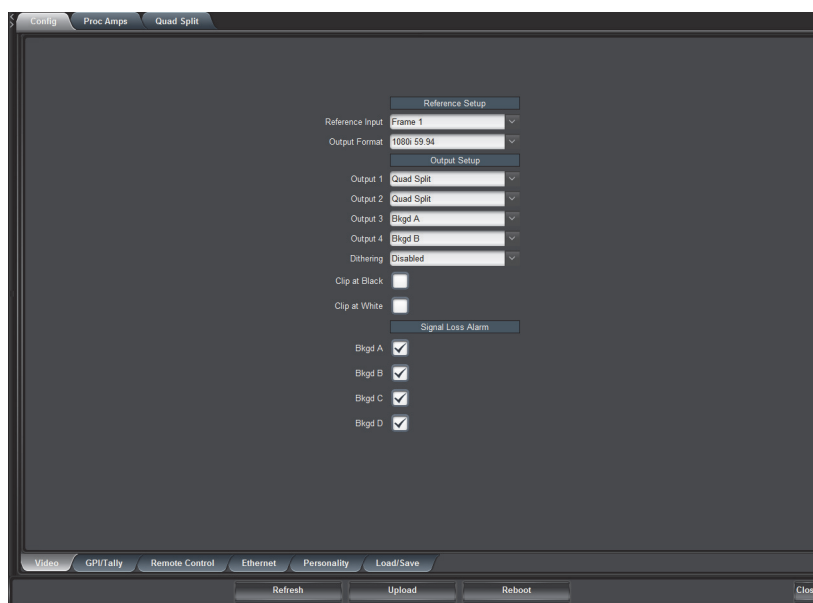

*Config Tab — Video Tab*

3. Select the reference source from the **Reference Input** list. Choose from the following:
  - **Frame 1** — Select this option to use the reference source connected to the **FRAME REF 1** port on the openGear frame.
  - **Frame 2** — Select this option to use the reference source connected to the **FRAME REF 2** port on the openGear frame.
  - **External** — Select this option to use the external reference source connected to **REF IN** on the Rear Module. Use **JP7** on the card to enable or disable a 75ohm terminator on the External Reference input. Refer to the section “**Card Overview**” on page 2-3 for information on configuring **JP7**.




---

# Selecting the Video Format

This section provides information for specifying the output video format for your card.

## To select the video format

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Video** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Video** tab located at the bottom of the **Config** tab.

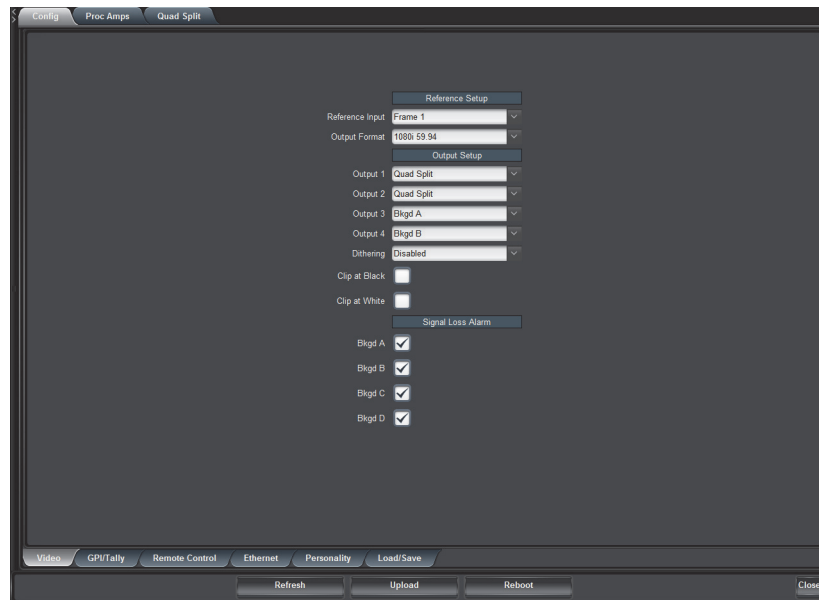

Config Tab — Video Tab

3. Select the card output video format from the **Output Format** menu. Ensure that it is the same format as in the input video format.



---

**Operating Tip** — Use the **Signal** tab to monitor the Signal status, including the reference and the Background sources. Refer to the section “**Status Tabs**” on page 5-2 for more information.

---

---

# Video Input and Output Configuration

This section outlines how to assign a source to an output, add dither, clip to SMPTE black or allow super-black, or clip to SMPTE white or allow super-white.

## *For More Information on...*

- configuring the Quad outputs, refer to the section “**Configuring the Quad Split Sources**” on page 4-4.
- adjusting the black offset and gain for an output, refer to the section “**Adjusting the Proc Amp Controls**” on page 4-2.

## Configuring the Video Outputs

You can configure any of the four outputs independently to display the Quad Split or any of the backgrounds. Note that when a Background (Bkgd) source is fed through full screen, the ancillary data will also pass.

### To configure your video outputs on the card

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Video** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Video** tab located at the bottom of the **Config** tab.
3. From the **Output Setup** area, locate the Output BNC you want to configure.
4. Choose an output to configure as follows:
  - **Output 1** — Select this field to configure the source on Output 1.
  - **Output 2** — Select this field to configure the source on Output 2.
  - **Output 3** — Select this field to configure the source on Output 3.
  - **Output 4** — Select this field to configure the source on Output 4.
5. Select the output that you want to assign to the selected Output BNC from the corresponding **Output** field. You can choose between the following:
  - **Quad Split** — Select this option to assign the Quad Split to the selected output.
  - **Bkgd A** — Select this option to assign Bkgd A to the selected output.
  - **Bkgd B** — Select this option to assign Bkgd B to the selected output.
  - **Bkgd C** — Select this option to assign Bkgd C to the selected output.
  - **Bkgd D** — Select this option to assign Bkgd D to the selected output.
6. From the **Dithering** field, select the type of dithering you want to apply to all outputs. You can choose between the following:
  - **Disabled** — Select this option to disable the Dithering feature.
  - **Enabled low** — Select this option to enable 2 bit dithering.
  - **Enabled medium** — Select this option to enable 3 bit dithering.
  - **Enabled high** — Select this option to enable 4 bit dithering.
7. Enable the Clip White or Clip Black feature as follows:


- **Clip at Black** — Select this box to enable the card to clip to SMPTE black on all outputs. An unchecked box allows super-black.
- **Clip at White** — Select this box to enable the card to clip to SMPTE white on all outputs. An unchecked box allows super-white.

## Configuring the Input Signal Timing Display

The **Timing Display** feature enables you to configure how the input signal timing is reported by DashBoard. This information is displayed in the **Bkgd A, B, C, and D Timing** fields of the **Signal** tab in the number of clocks and lines. Negative values indicate the input signal timing is earlier than the reference. Positive values indicate the input signal timing is later than the reference. Note that there are 4400 clocks per line when using the 1080i 59.94Hz format.

### To configure the input signal timing for your QSP-8229A

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Personality** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Personality** tab located at the bottom of the **Config** tab.

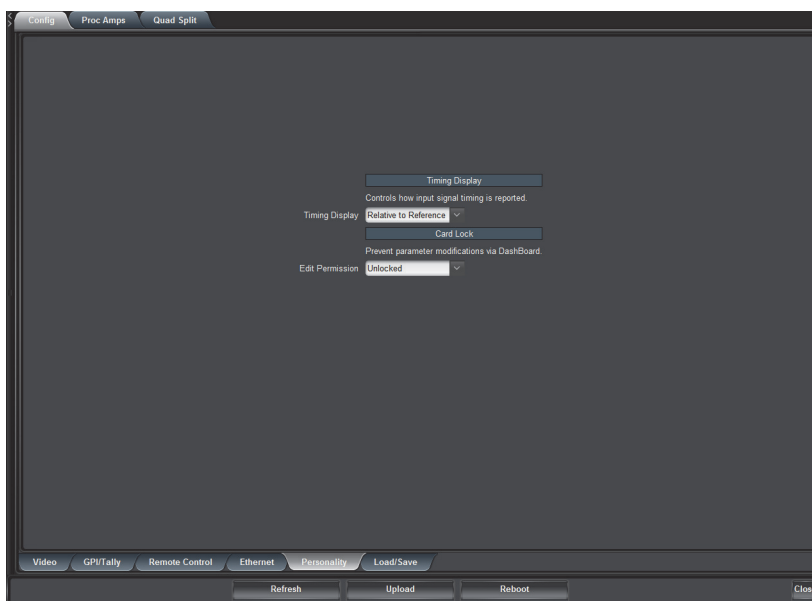

*Config — Personality Tab*

3. Configure how the signal timing by selecting one of the following options from the **Timing Display** menu:
  - **Relative to Reference** — Select this option to display the timing offset values of the SDI inputs and output relative to the selected analog reference as follows:
    - › A negative offset value indicates that the SDI signal is earlier than the analog reference.
    - › A positive value indicates that the SDI signal is later than the analog reference.
  - **Input to Output** — Select this option to display the timing offset values of the SDI BKGD inputs relative to the SDI output of the card as follows:
    - › A negative offset value indicates that the SDI BKGD input signal is earlier than the SDI OUT signal.

- › A positive value indicates that the SDI BKGD input signal is later than the SDI OUT signal.

## Signal Loss Alarm Setup

The **Signal Loss Alarm** feature enables DashBoard to display status alarms when a loss of signal is experienced on the Background input sources. The alarm information displays in the **Signal** tab of DashBoard and on the card-edge LEDs. For more information on the status LEDs, refer to the section “**Card-edge LEDs**” on page 2-4.

### To set up the signal loss alarm

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Video** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Video** tab located at the bottom of the **Config** tab.
3. Enable or disable the alarms by selecting or clearing the required boxes in the **Signal Loss Alarm** area as follows:
  - **Bkgd A** — Select this box to enable DashBoard to report the status of the Background A input source.
  - **Bkgd B** — Select this box to enable DashBoard to report the status of the Background B input source.
  - **Bkgd C** — Select this box to enable DashBoard to report the status of the Background C input source.
  - **Bkgd D** — Selecting this box enables DashBoard to report the status of the Background D input source.

# GPI Communication Setup

This section explains how to configure communications for GPIs on the card using the menus and options available in DashBoard.

## GPI Overview

When configured as a GPI, a port behaves as an input, and can be used to trigger actions such as switching between the Quad Split display or full-screen BKGD input display. A push-button switch, or an ON-OFF switch, may be directly connected between the port and the adjacent ground pin. Minimum pulse duration is 1ms, anything shorter will be filtered out.

## GPI Communication Setup

You can configure the GPI to control the display configuration. Each output can be set to display the Quad Split, a Bkgd source, or to cycle through the sources each time the specific GPI/Tally is triggered.



**Note** — Each GPI should be set to a different function. Setting more than one GPI to the same function can cause unexpected behavior. Multiple GPIs can be set to None at the same time.

### To configure remote control for GPIs

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **GPI/Tally** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **GPI/Tally** tab located at the bottom of the **Config** tab.

Pin	Function	Trigger	Polarity
GPI 1	None	Edge	Low/Falling
GPI 2	None	Edge	Low/Falling
GPI 3	None	Edge	Low/Falling
GPI 4	None	Edge	Low/Falling
GPI 5	None	Edge	Low/Falling
GPI 6	None	Edge	Low/Falling
GPI 7	None	Edge	Low/Falling
GPI 8	None	Edge	Low/Falling

Config Tab — GPI/Tally Tab

3. Assign a transition event to a GPI /Tally by selecting the function from the **Function** drop-down list to the required GPI/Tally. Choose from the following:
  - **None** — Select this option to not assign a function to the selected GPI/Tally. The Trigger and Polarity settings are ignored. This is the default setting.
  - **Output xx - Quad** — Selecting this option causes the specified output, where **xx** represents the output, to display the Quad Split when the GPI is triggered.
  - **Output xx - Bkgd #** — Selecting this option causes the specified output, where **xx** represents the output, to display the specified full-screen input when the GPI is triggered.
  - **Output xx - Cycle** — Selecting this option causes the specified output, where **xx** represents the output, to cycle through the Quad Split and full-screen inputs when the GPI is triggered.
  - **yy Quad - Black** — Selecting this option causes the specified quadrant, where **yy** represents the quadrant (UL, UR, LL, and LR), to show black when the GPI is triggered.
  - **yy Quad - Bkgd #** — Selecting this option causes the specified quadrant, where **yy** represents the quadrant, to show the specified Bkgd source when the GPI is triggered.
  - **yy Quad - Cycle** — Selecting this option causes the specified quadrant, where **yy** represents the quadrant, to cycle through Black and the four inputs when the GPI is triggered.
  - **Bkgd # - Tally x** — Selecting this option causes the GPI to control the specified tally, where **x** represents the tally number, associated with the specified Bkgd input. Refer to the section “**Tally to GPI Setup**” on page 3-12 for details.
4. Select a trigger for the GPI from the **Trigger** column. Choose from the following:
  - **Edge** — Select this option to configure the card to perform the **Function** on either the Rising or Falling Edge of the GPI signal as determined by the **Polarity** setting.
  - **Level** — Select this option to have the GPI action controlled by a static voltage level. The card performs the **Function** when the GPI state is either High or Low as determined by the **Polarity** set in step 5. The action triggered by the GPI input will remain in that state until the GPI level changes. Select this option when using a GPI to control a tally.
5. Select a polarity for the GPI from the **Polarity** column. Choose from the following:
  - **High/Rising** — Select this option to have the GPI triggered on a static High level, or on a Low-to-High pulse.
  - **Low/Falling** — Select this option to have the GPI triggered on a static Low level or on a High-to-Low pulse. This is the default setting.

# Tally Communication Setup


With the on-screen tally display feature, each quadrant of the QSP-8229A supports two tallies (for Program and Preview) with selectable position and color. Tallies can be shown as small circles, or can be drawn into the border surrounding each quadrant. Note that this feature is not enabled by default. This section explains how to enable and configure communications for on-screen tallies using the menus and options available in DashBoard. There are three steps:

1. **Enable the Tally UMD Feature** — The tally on-screen display feature is disabled by default. You must change the **Tally Position** menu item from the default value of **None** to one of the other three options.
2. **Set up Communications** — You must configure the correct type of communication between the device and the QSP-8229A based on the cabling performed in the section “**Tally Cabling**” on page 2-13.
3. **Set up the Tally On-Screen Labels** — Once communications are set up, you can assign a channel for each of the four card inputs, specify how the label information from the on-screen tally device will be processed, select the color of each on-screen tally, and determine the position of the on-screen tallies. Refer to the section “**Set up the Tally On-Screen Labels**” on page 3-14 for details.

## Enable the Tally UMD Feature

Use the following procedure to enable the on-screen tally label display:

1. Display the **Device** tab of the QSP-8229A by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Tally/Border** tab as follows:
  - From the **Device** tab, select the **Quad Split** tab.
  - Select the **Tally/Border** tab located at the bottom of the **Quad Split** tab.

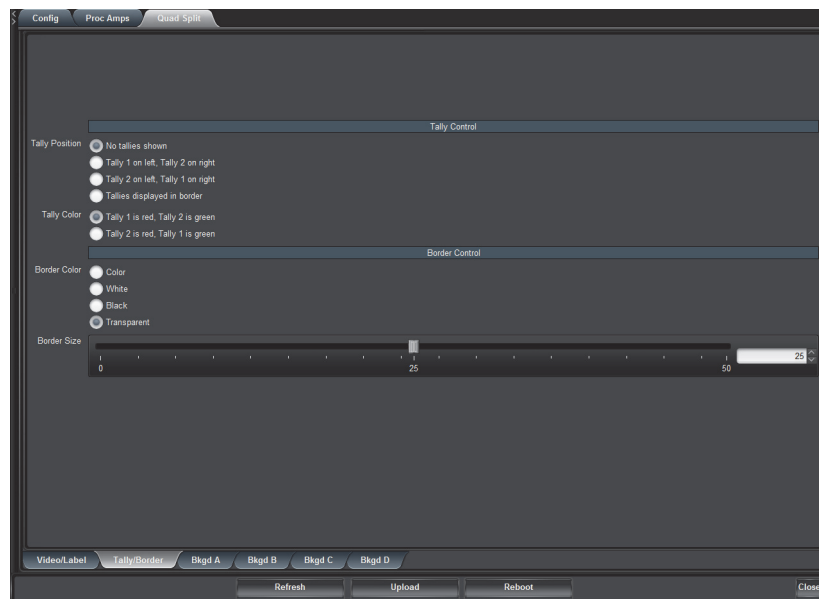

*Quad Split — Tally/Border Tab*

3. Assign the tally on-screen display positions by selecting one of the **Tally Position** options from the **Tally Control** area. Refer to the section “**Tally/Border Tab**” on page 5-12 for a list of options.

# Set up Communications

This section provides instructions on how to set up the communications between the QSP-8229A and the on-screen tally device. The method for setting up communications depends on how the device is connected to your QSP-8229A.

## Tally to GPI Setup




**Note** — Each GPI port should be set to a different function. Setting more than one GPI port to the same function can cause unexpected behavior. Multiple GPI ports can be set to None at the same time.

This section outlines how to set up communications between your on-screen tally device and the QSP-8229A when using GPIs.

Use the following procedure to configure remote GPI control for on-screen tallies:

1. Display the **Device** tab of the QSP-8229A by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **GPI/Tally** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **GPI/Tally** tab located at the bottom of the **Config** tab.

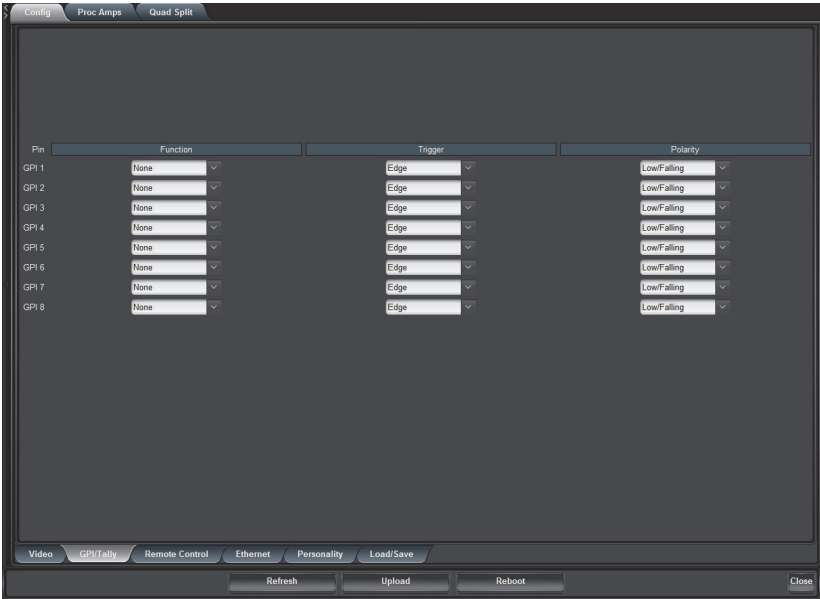

Config — GPI/Tally Tab

3. Assign an event to an on-screen tally by selecting the function from the **Function** drop-down list to the required tally. Choose from the following:
  - **Bkgd # - Tally 1** — Select this option to have the GPI control the first on-screen tally associated with the specified input.
  - **Bkgd # - Tally 2** — Select this option to have the GPI control the second on-screen tally associated with the specified input.
4. Set the **Trigger** to **Level**.

## Tally to Serial Setup


The **Serial Port** area of the **Remote Control** tab includes options for configuring serial communications, using the TSL UMD v3.1 protocol, between the QSP-8229A and the serial



device connected to the **Serial COM** port on the card rear module. This section outlines how to set up serial communications between your on-screen tally device and the QSP-8229A.

Use the following procedure to configure remote serial control for on-screen tallies:

1. Display the **Device** tab of the QSP-8229A by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Remote Control** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Remote Control** tab located at the bottom of the **Config** tab.

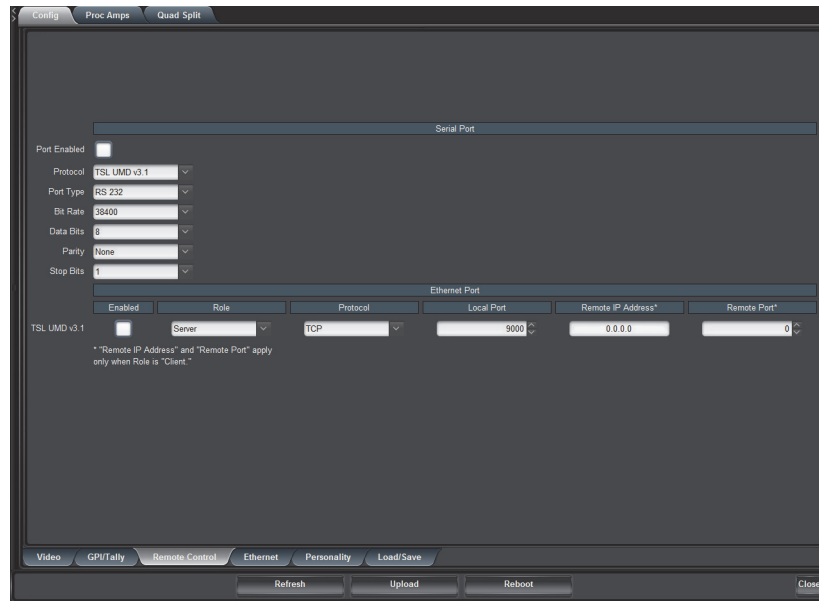

*Config — Remote Control Tab*

3. Select **TSL UMD v3.1** from the **Protocol** menu.
4. Configure the **Port Type**, **Bit Rate**, **Data Bits**, **Parity**, and **Stop Bits** as required by the serial on-screen tally device connected to the QSP-8229A rear module.
5. Select the **Port Enabled** box to enable serial on-screen tally communication from the **Serial COM** port on the QSP-8229A rear module.

## Tally to Ethernet Setup

The **Ethernet Protocol** area of the **Remote Control** tab includes options for configuring communications for the **Ethernet** port on the QSP-8229A rear module. This section outlines how to set up ethernet communications between your on-screen tally device and the QSP-8229A.

Use the following procedure to configure ethernet communications to an on-screen tally device:

1. Display the **Device** tab of the QSP-8229A by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Remote Control** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Remote Control** tab located at the bottom of the **Config** tab.
3. Specify the type of ethernet service for the QSP-8229A from the **Role** menu. Choose from the following:
  - **Server** — Select this option to enable the QSP-8229A to function as a host, or socket listener, on the network. This is the recommended setting.

- **Client** — Select this option to configure the QSP-8229A to function as a service requester that initiates communications with a server.
4. Select the ethernet protocol used by your on-screen tally device from the **Protocol** menu. Choose from the following:
    - **TCP** — Select this option if your on-screen tally device uses the Transmission Control Protocol (TCP) for ethernet communications.
    - **UDP** — Select this option if your on-screen tally device uses the User Data Protocol (UDP) for ethernet communications.
  5. Enter the port number for your on-screen tally device in the **Local Port** field. When the **Role** is set to **Server**, the QSP-8229A will listen on the specified port for incoming connections.
  6. If you selected **Client** in step 3., specify the Remote IP Address and Remote Port number of the remote device to which the QSP-8229A should connect. For example, if you use an external ethernet-to-serial port expander, you would enter the IP address and port number of the serial port expander here.
  7. Select the **TSL UMD v3.1** box to enable ethernet communication from the **Ethernet** port on the QSP-8229A rear module to the tally device.

## Set up the Tally On-Screen Labels


The **Quad Split** tab includes a tab for each card input that enables you to assign a channel for each of the four card inputs, specify how the label information from the on-screen tally device will be processed, select the color (RGB format) of the border, and determine the position of the on-screen tallies. By default, the QSP-8229A displays the static label text as defined in the **Bkgd** field in the Quad Split sub-tab for a source.

### To set the border color and size

1. Display the **Device** tab of the QSP-8229A by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Tally/Border** tab as follows:
  - From the **Device** tab, select the **Quad Split** tab.
  - Select the **Tally/Border** tab located at the bottom of the **Quad Split** tab.
3. To set the border size for all sources, use the **Border Size** slider to adjust the thickness of the border in pixel units. As you adjust the thickness of the border, it expands inwards from the edge of the quadrant. A value of 0 removes the border.
4. To apply the same border color to all sources, select a specific color from the **Border Color** menu located in the **Border Control** area.
5. To apply a unique border color for a source:
  - Select **Color** from the **Border Color** menu.
  - Select the sub-tab for the source you wish to configure a unique border color for.
  - Use the **Red**, **Green**, **Blue**, and **Transparent** sliders to configure the border color for that source.

## To configure an input label content

1. From the **Quad Split** tab, select the sub-tab for the card input you wish to configure.

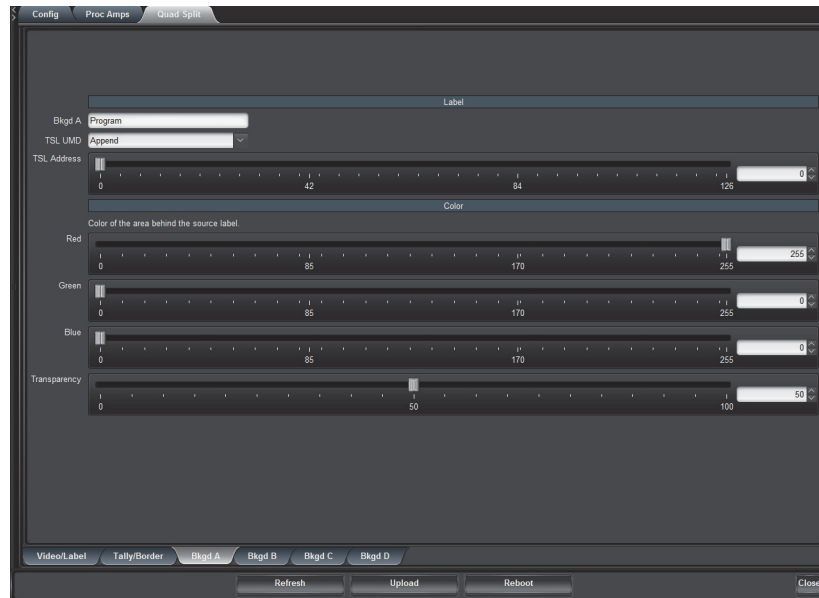

Quad Split — Bkgd A Tab

2. If required, update the on-screen QSP-8229A static label for the input by typing a new name in the **Bkgd** field located at the top of the **Label** area.



**Operating Tip** — When using long strings of text in labels, adding a space or hyphen to the QSP-8229A static label helps ensure proper spacing of the text when displayed on-screen. For example, if you are pre-pending the dynamic label information, add a hyphen at the beginning of the QSP-8229A static label.

3. If the TSL UMD protocol is enabled, the QSP-8229A can add the dynamic label provided by the protocol. Choose one of the following from the **TSL UMD** menu:
  - **Ignore** — Select this option to ignore the dynamic label information from the on-screen tally device and display only the QSP-8229A static label (as defined in step 2.). The TSL UMD protocol only controls the tally indicators.
  - **Append** — Select this option to display the dynamic label information *after* the QSP-8229A static label (as defined in step 2.). This is the default setting.
  - **Prepend** — Select this option to display the dynamic label information from the on-screen tally device *before* the QSP-8229A static label (as defined in step 2.).
  - **Replace** — Select this option to display only the dynamic label information and ignore the QSP-8229A static label.
4. Assign a channel for the card input by entering the source Display Address using the **TSL Address** slider.
5. Configure the area behind the tally source label for the specified card input as follows:
  - Use the sliders in the **Color** area to configure the color of the label area.
  - Use the **Transparency** slider to configure the appearance of the label area from opaque (0), through transparent, to fully off (100).

---

# Loading the Factory Defaults

If required, the card menu parameters can be reset to the factory default values using the option available in the **Load/Save** tab.




---

**Note** — *Ethernet settings, reference input selection, and the output formats are not reset using this method.*

---

## To reset the card to the factory default configuration in DashBoard

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Display the **Load/Save** tab as follows:
  - From the **Device** tab, select the **Config** tab.
  - Select the **Load/Save** tab located at the bottom of the **Config** tab.

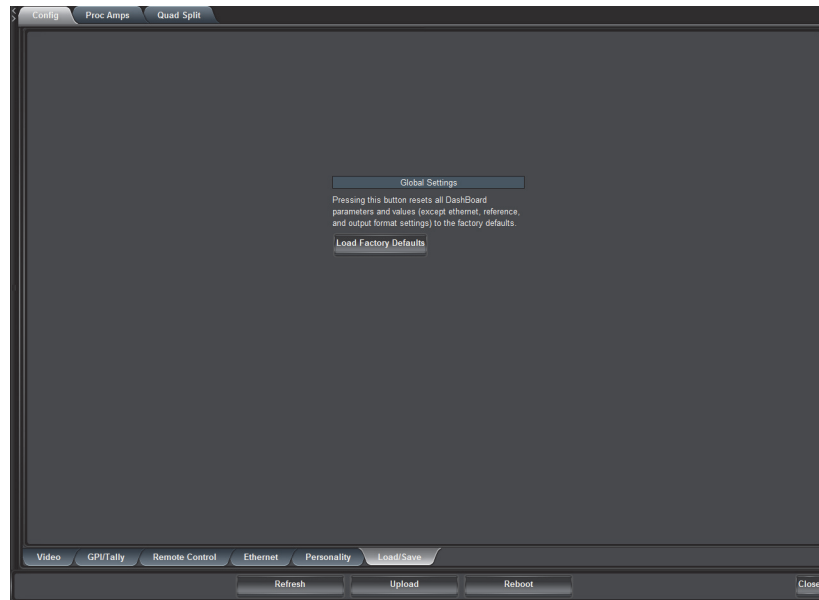

*Config — Load/Save Tab*

3. From the **Global Settings** area, click **Load Factory Defaults** to display the **Confirm** dialog.
4. Press **Yes** to load the factory default values for all menu parameters, or **No** to cancel the load and close the dialog.

---

# Software Upgrades

The card can be upgraded in the field using the **Ethernet** port on the Rear Module and using the options available in DashBoard. Refer to the section “**Ethernet Communication Setup**” on page 3-2 for setting up ethernet communications.



---

**Note** — *This procedure assumes that you are running DashBoard version 4.0.0 or higher.*

---

## To upgrade the software on a card

1. Contact Ross Technical Support for the latest software version file.
2. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
3. From the **Device** tab, click **Upload** to display the **Select file Upload** dialog.
4. Navigate to the \*.bin file you wish to upload.
5. Click **Open**.
6. If you are upgrading a single card, click **Finish** to start the upgrade. Proceed to step 8.
7. If you are upgrading multiple cards:
  - Click **Next >** to display the **Select Destination** menu. This menu provides a list of the compatible cards based on the card selected in step 2.
  - Specify the card(s) to upload the file to by selecting the check box(es) for the cards you wish to upload the file to.
  - Verify that the card(s) you wish to upload the file to. The **Error/Warning** fields indicate any errors, such as incompatible software or card type mismatch.
  - Click **Finish**.
8. Monitor the upgrade.
  - A **Upload Status** dialog enables you to monitor the upgrade process.
  - Note that if the ethernet connection is invalid, such as the ethernet cable is unplugged from the card rear module, the user is prompted to reboot the card when the upgrade is complete. If multiple cards are being upgraded, the user should wait for all to complete, before rebooting them.
  - The card is temporarily taken offline.
  - The reboot process is complete once the status indicators for the **Card State** and **Connection** return to their previous status.



---

**Operating Tip** — *If you are running DashBoard v2.3.0 or lower, you must click **Reboot** in the **Device** tab to complete the upgrade process.*

---

## Troubleshooting

If you encounter problems when upgrading your card software, verify the following:

- Your network settings on the card are valid. Refer to **Table 5.7** for a list of settings.
- Ethernet cable is properly connected if you are uploading the file via a network connection.
- The file you are attempting to load is a \*.bin file that is for the card you are upgrading.



# Operation

---

## In This Chapter

This chapter provides a summary of the operational features, such as Proc Amp controls and assigning input sources to the Quad Split.

The following topics are discussed:

- Adjusting the Proc Amp Controls
- Configuring the Quad Split Sources
- Notes on Timing



---

**Note** — *Before proceeding, ensure that you are running DashBoard software version 4.0.0 or higher. The DashBoard Control System software and user manual are available for download from the Ross Video website.*


---

# Adjusting the Proc Amp Controls

Each output on the card has a Proc Amp that can adjust the black offset, the video gain, the chroma gain and the CB gain. This section briefly outlines how to adjust the options available in the **Proc Amp** tab.

## To adjust an output using a Proc Amp

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. Select an output signal to adjust as follows:
  - Select the **Proc Amps** tab.
  - Select the **Output** tab for the output signal you want to adjust. The **Output** tabs are located at the bottom of the **Proc Amps** tab.

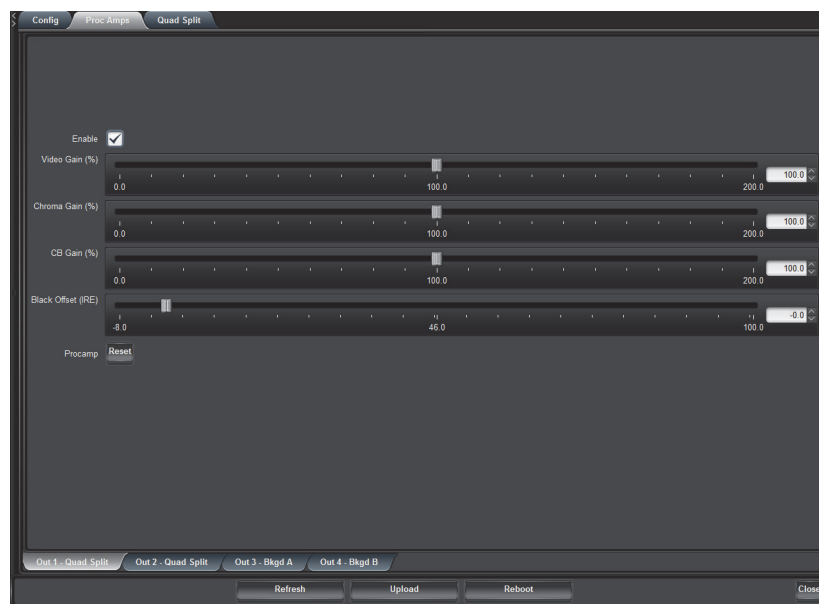

*Proc Amps Tab — Out 1 - Program Tab*

3. Select the **Enable** box to ensure the color adjustments are applied. The **Enable** box must be selected in order for any color correction to take effect on the selected output.
4. Adjust the **Video Gain** of the card video outputs as follows:
  - Use the **Video Gain** slider to adjust the amount of Video Gain you want to apply. Increasing overall gain causes an increase in contrast while also making colors more saturated and vivid. Decreasing overall gain causes a decrease in contrast while de-saturating colors.
5. Adjust the **Chroma Gain** of the card video outputs as follows:
  - Use the **Chroma Gain** slider to adjust the chrominance video signal components (Cr and Cb) simultaneously. Increasing the chroma gain value causes the video signal colors to become increasingly saturated and more vivid. Decreasing the chroma gain value de-saturates color from the video signal until it is black and white.
6. Adjust the **CB Gain** of the card video outputs as follows:
  - Use the **CB Gain** slider to adjust the Cb component of the chrominance video signal. Increasing the Cb Gain value causes the video signal colors to become



increasingly saturated with blue. Decreasing the Cb Gain value desaturates blue from the video signal.

7. Adjust the **Black Offset** of the card video outputs as follows:

- Use the **Black Offset** slider to adjust the Black Offset you want to apply. Increasing the Black Offset value causes a lightening effect. Decreasing the Black Offset value causes a darkening effect.



---

**Operating Tip** — *To reset the Proc Amp settings to the default values, click **Reset** and then **Yes** in the **Confirm** dialog box.*

---

# Configuring the Quad Split Sources

This section briefly describes how to set up your Quad Split sources using the **Quad Split** tab in DashBoard. From the **Quad Split** tab, you can assign any input to any quadrant and add a text label to display at the bottom of the applicable quadrant. All active video content will be visible, including the 480i Line 21 content. Note that when a loss of input in a quadrant occurs, the QSP-8229A fills that quadrant with a blue pattern.



**Note** — *The ancillary data (HANC and VANC) of the Quad Split is empty but filled with valid black.*

## Assigning Sources to the Quad Split

The Quad sources can be any of the four Background sources, or an internally generated black.

### To assign sources to a Quad Split quadrant

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. From the **Device** tab, select the **Quad Split** tab.
3. Select the **Video/Label** tab.

*Quad Split — Video/Label Tab*

4. Select the quadrant you wish to configure.
5. Assign a video source to the specific quadrant by selecting an option from the corresponding drop-down menu. Choose from the following:
  - **Black** — Select this option to assign black to the specific quadrant.
  - **Bkgd A** — Select this option to assign the Bkgd A input to the specific quadrant.
  - **Bkgd B** — Select this option to assign the Bkgd B input to the specific quadrant.
  - **Bkgd C** — Select this option to assign the Bkgd C input to the specific quadrant.
  - **Bkgd D** — Select this option to assign the Bkgd D input to the specific quadrant.


6. To apply a text label to the quadrant:
  - Locate the **Source Label** area of the **Quad Split** tab.
  - Enter a text label in the applicable text box for the input source.
  - Press **Enter** on your keyboard to apply the new text.

## Applying a Border

The Border feature allows you to set the color (RGB format), transparency, and overall thickness of the border that is applied to the specified source. Borders are created from the outside edge of the quadrant and expand inward. The border is applicable to all quadrants.

### To adjust the border for all quadrants

1. Display the **Device** tab of the card by double-clicking its status indicator in the **Basic Tree View**.
2. From the **Device** tab, select the **Quad Split** tab.
3. Select the **Tally/Border** tab.

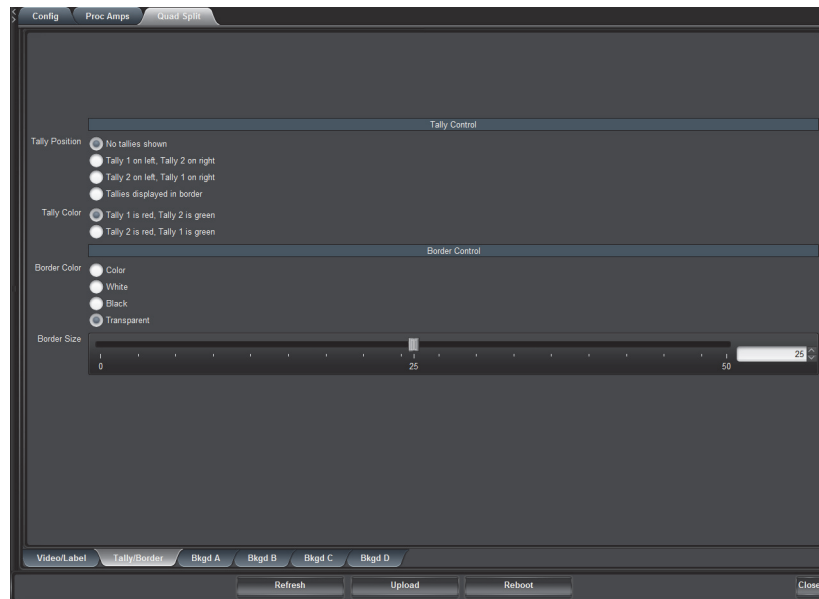

*Quad Split — Tally/Border Tab*

4. Select a **Border Color** option from the **Border Control** area. Note that if you select **Color**, you can apply a different color to each source border as outlined in the section “**To set the border color and size**” on page 3-14.
5. Use the **Border Size** slider to adjust the thickness of the border in pixel units. Notice that as you adjust the thickness of the border, it expands inwards from the edge of the quadrant. A value of 0 removes the border.

---

# Notes on Timing

This section provides additional information on the timing features of the QSP-8229A:

- On the current software release, SDI output timing of the card is currently fixed at 0.5 line after the selected analog reference. For example, when using a 1080i output format, the **Output Timing** field in the **Signal** tab will be +2200 clocks because the output timing measurement is relative to the selected analog reference.
- Each video input has a line sync that can support a full line of SD or HD video including horizontal blanking.
- When showing full screen BKGD inputs (no Quad Split), line syncs are used and all BKGD video inputs must be timed within +/- 0.5 line offset from the selected analog reference. Exceeding this tolerance will result in shifting the full screen output display by one or several lines.
- When using Quad Split, frame syncs are used and the BKGD video inputs do not need to be timed to the selected analog reference. The video scaling requires a frame store operation and the BKGD inputs will be delayed by up to one frame before it is displayed in the Quad Split quadrants.
- All of the video outputs must be the same video format as the video inputs. If the formats do not match, the card reports an error in the Dashboard **Signal Status** area and on the card-edge LEDs.
- When using Quad Split, inputs that are mis-timed will be aligned to the next frame boundary.
- By default, Dashboard displays output timing relative to the reference. Signal timing is reported in Clocks and Lines.
- Use the Timing Display option in the **Personality** tab to configure how Dashboard displays the input signal timing. You can choose to report the timing as relative to the output or relative to the reference.

# DashBoard Menus

---

## In This Chapter

This chapter briefly summarizes the menus, items, and parameters available from the DashBoard Control System for the QSP-8229A. Default values are noted with an asterisk (\*).

The following topics are discussed:

- Status Tabs
- Configuration Tabs
- Proc Amps Tab
- Quad Split Tabs



---

**Note** — *Before proceeding, ensure that you are running DashBoard software version 6.2.0 or higher. The DashBoard software and user manual are available to download from the Ross Video website.*

---

# Status Tabs

The following table summarizes the read-only information displayed in the **Status** tabs. The fields in the **Signal** tab vary in severity from green (valid), yellow (caution), to red (alarm). DashBoard reports the most severe alarm for a single field. Alarm colors are noted within the tables as text set in brackets next to the menu parameter name.

## Signal Tab

Table 5.1 outlines the read-only information displayed in the **Signal** tab for the QSP-8229A.

**Table 5.1 Signal Tab Items**

Tab Title	Item	Parameters	Description
Signal	Reference Status	OK (Green)	Valid reference signal
		No reference (Red)	No signal detected on selected reference input
		Reference Unlocked (Red)	Signal detected, but not locked (or lock lost)
		Invalid Reference (Red)	Signal detected, but incompatible with the current video mode
	Bkgd # Status	OK (Green)	Normal operation
		Alarm Suppressed (Green)	An alarm condition exists but is silenced
		Incompatible (Yellow)	The input video format is incompatible with the output format but the frame rates match
		Unsupported (Red)	The input format is compatible with the output format however the frame rates differ
		No signal (Red)	No signal present on the specified input
	Bypass Relay	Normal (not in bypass) (Green)	Video is being routed through the card; Quad Split may be active
		Active (in bypass) (Red)	BKGD A bypasses the card and is looped passively on Output 1 through the relay
	Timing Display	Relative to Reference	The <b>BKGD Timing</b> fields display the timing values relative to the selected analog reference
		Input to Output	The <b>BKGD Timing</b> fields display the timing values relative to the SDI output of the card
	Bkgd # Timing	## clocks ## lines	Indicates the timing of the specified input signal relative to the reference signal or relative to the output as specified in the <b>Timing Display</b> feature where 1 clock is: <ul style="list-style-type: none"> <li>• 1 period of 27MHz (SD), or</li> <li>• 1 period of 148.x MHz (HD)</li> </ul>
		(Green)	Indicates that the timing is within the specified range for the card
		(Yellow)	Indicates that the card is operating outside the specified line sync range. You may encounter vertical shifts and/or missing ancillary data when viewing at full-screen.

**Table 5.1 Signal Tab Items**

Tab Title	Item	Parameters	Description
Signal	Bkgd # Timing	(Gray)	Indicates the absence of the specified input signal. Verify that the cable is properly secured to the rear module.
	Output Timing	## clocks ## lines	Indicates the timing of the output signals relative to the reference

## Hardware Tab

Table 5.2 outlines the read-only information displayed in the **Hardware** tab for the QSP-8229A.

**Table 5.2 Hardware Tab Items**

Tab Title	Item	Parameters	Description
Hardware	HW Status	OK (Green)	Normal operation; no hardware errors and the correct rear module is installed
		Incomp I/O module (Red)	Card is connected to the wrong rear module
		Alarm suppressed (Green)	Rear module is incompatible and the <b>Incompat Rear Module</b> alarm is disabled
	Voltage (V)	#	Supply Voltage, in Volts
	Current (mA)	#	Current consumption of card in milliamperes
	Power (W)	#	Power consumption of card in Watts
	FPGA Temp	##C <sup>a</sup> / ##F	FPGA core temperature
	FPGA Fan <sup>b</sup>	# RPM	Indicates the card fan speed
	CPU Usage	x.xx / y.yy / z.zz <sup>c</sup>	CPU Load average
	RAM Available	## / ## MB	Memory Used / Total Memory
	CF Card Status	#.## of 2.0 GB used	Displays the amount of memory used on the CompactFlash card
		Missing	CompactFlash card is not present
		Unreadable	An error has occurred, such as incompatible CompactFlash card, or an error reading the card
	Playout RAM	a/b/c/d	Displays RAM memory usage where: <ul style="list-style-type: none"> <li>• <b>a</b> represents the memory in use</li> <li>• <b>b</b> represents the memory cache from previously loaded files</li> <li>• <b>c</b> represents the memory dedicated to the frame sync buffers and related functions. Note that this memory is unavailable for images and animations.</li> <li>• <b>d</b> represents the total playout memory</li> </ul>

- A warning is displayed in DashBoard when the FPGA Core Temperature reaches 85°C. If the temperature reaches 110°C, the card will automatically shut down to avoid permanent damage and will have to be reset, rebooted, or power cycled to resume normal operation.
- This field is displayed for QSP-8229A models (Board Rev 3 or higher).
- The CPU Load average is displayed in the following format where x.xx represents in the last minute, y.yy represents the last five minutes and z.zz is the last fifteen minutes.

## Product Tab

**Table 5.2** outlines the read-only information displayed in the **Hardware** tab for the QSP-8229A.

**Table 5.3 Product Tab Items**

Tab Title	Item	Parameters	Description
<b>Product</b>	Product	QSP-8229A	
	Supplier	Ross Video Ltd.	
	Board Rev	##	Indicates the board version of your card
	Serial Number	#####	Indicates the serial number of your card
	Rear Module	#	Indicates the type of Rear Module in the slot
	Software Rev	##.# build ###	Indicates the software and build versions
	Firmware Rev	##.##	Indicates the FPGA version number



# Configuration Tabs

This section briefly summarizes the options and tabs available in the **Config** tab.

## Video Configuration

Table 5.4 summarizes the **Video** tab options available in DashBoard.

**Table 5.4 Video Tab Options**

Menu	Item	Parameters	Description
<b>Reference Setup</b>	Reference Input	Frame 1	The card is using Frame Reference 1
		Frame 2	The card is using Frame Reference 2
		External	The card is using the reference input on: <ul style="list-style-type: none"><li>• BNC 9 (8310AR-033, 8320AR-033); or</li><li>• BNC 11 (8320AR-049)</li></ul>
	Output Format	#	Specifies the format of the output signal of the card
<b>Output Setup</b>	Output 1	Quad Split*	Output 1 displays the Quad Split as configured using the options in the Quad Split tab
		Bkgd A	Output 1 displays the Bkgd A source
		Bkgd B	Output 1 displays the Bkgd B source
		Bkgd C	Output 1 displays the Bkgd C source
		Bkgd D	Output 1 displays the Bkgd D source
	Output 2	Same parameters as above. The default setting is Quad Split.	
	Output 3	Same parameters as above. The default setting is Bkgd A.	
	Output 4	Same parameters as above. The default setting is Bkgd B.	
	Dithering	Disabled*	Dithering is disabled
		Enabled - low	Dithering is enabled and set to 2bits
		Enabled - medium	Dithering is enabled and set to 3bits
		Enabled - high	Dithering is enabled and set to 4bits
	Clip at Black	Selected	SuperBlack is clipped on all outputs
		Cleared*	SuperBlack is not clipped
	Clip at White	Selected	SuperWhite is clipped on all outputs
		Cleared*	SuperWhite is not clipped
<b>Signal Loss Alarm</b>	Bkgd #	Selected*	An alarm is triggered when a missing or an invalid signal is detected on the specified input
		Cleared	The alarm is suppressed when a missing or an invalid signal is detected on the specified input

## GPI/Tally Configuration

The menu items available in the **GPI/Tally** tab enable you to configure the functions and polarity of each GPI connected to the QSP-8229A.

**Table 5.5 GPI/Tally Setup Menu Items**

Menu	Item	Parameter	Description
GPI #	Function	None*	The port is not configured and the GPI has no effect
		Output # - Quad	When triggered, the specified output displays the Quad Split
		Output # - Bkgd #	When triggered, the specified output displays the specified Bkgd source at full-screen
		Output # - Cycle	On each trigger, the output will cycle through the possible Bkgd sources, and the Quad Split
		# Quad - Black	The specified quadrant displays black when the GPI is triggered
		# Quad - Bkgd #	The specified quadrant displays the selected Bkgd source when the GPI is triggered
		# Quad - Cycle	The specified quadrant output cycles through the available input sources and black when the GPI is triggered
		Bkgd # - Tally 1	Select this option to have the GPI control the first on-screen tally associated with the specified input on the QSP-8229A
		Bkgd # - Tally 2	Select this option to have the GPI control the second on-screen tally associated with the specified input on the QSP-8229A
	Trigger	Edge*	Performs the function when a transition edge is detected on the GPI input. The Low-to-High or High-to-Low active edge is set by the Polarity control.
		Level	Performs the function when a voltage level is driven on the GPI input. The voltage level High or Low is set by the Polarity control.
	Polarity	High/Rising	Sets the polarity of the edge or level trigger. In the case of edge trigger, a Low-to-High transition starts the function. In the case of level trigger, a high level starts the function.
		Low/Falling*	Sets the polarity of the edge or level trigger. In the case of the edge trigger, a High-to-Low transition starts the function. In the case of a level trigger, a low level starts the function.

## Remote Control Configuration

**Table 5.6** outlines the options in the **Remote Control** tab for the QSP-8229A. This tab provides options for configuring communications between the QSP-8229A and a tally device.

**Table 5.6 Remote Control Tab Items**

Menu	Item	Parameter	Description
Serial Port	Port Enabled	Selected	Enables the <b>Serial COM</b> port on the rear module to communicate with a serial device
		Cleared*	Disables the <b>Serial COM</b> port
	Protocol	TSL UMD v3.1	Selects the serial communication protocol for the external device connected to the <b>Serial COM</b> port on the rear module
	Port Type		Selects the electrical standard for the <b>Serial COM</b> port on the rear module. The default is RS 232.
		RS 232*	Select this option if the card is connected to an external device that uses the RS-232 (TIA/EIA-232) transmission standard
		RS 422	Select this option if the card is connected to an external device that uses the RS-422 (TIA/EIA-422) transmission standard. In this mode, the Rx receive end is terminated with a 120ohm resistor on the card.
		RS 422 unterm	Select this option if the card is connected to an external device that uses an unterminated RS-422 transmission standard. In this mode, the Rx receive end is not terminated on the card. This mode is used to daisy-chain several card Rx ports, where only the last one would be terminated. This setting is recommended when the Protocol is set to Timecode.
		RS 422 NULL	Select this option if the card is connected to an external device that uses the standard RS-422 transmission standard with a null pinout. In this mode, the Rx and Tx are swapped on the card port and the Rx receive end is terminated with a 120ohm resistor on the card.
		RS 422 NULL unterm	Select this option if the card is connected to an external device that uses the standard RS-422 unterminated transmission standard with a null pinout. In this mode, the Rx and Tx are swapped on the card port and the Rx receive end is not terminated on the card. This mode is used to daisy-chain several card Rx ports, where only the last one would be terminated.
	Bit Rate	#	Selects the bit rate for the external device connected to the <b>Serial COM</b> port. The default is 38400.

**Table 5.6 Remote Control Tab Items**

Menu	Item	Parameter	Description
<b>Serial Port</b>	Data Bits	#	Selects the number of data bits transmission (character length). The default is 8.
	Parity		Sets the Parity type. The default is None.
	Stop Bits	#	Sets the number of stop bits transmission. The default is 1.
<b>Ethernet Port - TSL UMD v3.1</b>	Enabled	Selected	Enables ethernet communication from the <b>Ethernet</b> port on the QSP-8229A rear module to a device using the Tally Systems Ltd. (TSL) UMD protocol v3.1
		Cleared*	Disables the <b>Ethernet</b> port for tallies
	Role	Server*	The QSP-8229A functions as a host, or socket listener, on the network
		Client	The QSP-8229A functions as a service requester that initiates communications with a server
	Protocol	TCP*	Select this option if your device uses the Transmission Control Protocol (TCP) for ethernet communications
		UDP	Select this option if your device uses the User Data Protocol (UDP) for ethernet communications
	Local Port	#	Specifies the port number for the tally device. The default is 9000.
	Remote IP Address <sup>a</sup>	#	Specifies the IP Address for the server the QSP-8229A sends requests to. The default is 0.0.0.0.
	Remote Port <sup>a</sup>	#	Specifies the port number for the server the QSP-8229A sends requests to. The default is 0.

a. This menu item is only applicable when Role is set to Client.

## Ethernet Configuration

**Table 5.7** outlines the options in the **Ethernet** tab for the QSP-8229A. This tab provides options for configuring the ethernet communication for the QSP-8229A.

**Table 5.7 Ethernet Tab Items**

Menu	Item	Parameter	Description
Ethernet	Method	Static	User manually supplies the Ethernet Setup settings
		DHCP*	Automates the assignment of the Ethernet settings
	IP Address	##.##.###	The IP Address for the card
	Subnet Mask	###.##.#	The subnet mask for the card
	Default Gateway	##.##.#	The gateway for communication outside of the local area network (LAN)
	Apply Changes		Applies and saves any changes made to the <b>Ethernet Settings</b>
	Cancel		Cancels any setting changes and resets the <b>Ethernet Settings</b> to the previous values
	Ethernet Status	OK	Ethernet communications for the card are valid
		Link Down	Ethernet communications for the card are invalid. The ethernet cable may be disconnected from the rear module or the network may be down.
		No IP Address	The following conditions are occurring: <ul style="list-style-type: none"> <li>• The <b>Method</b> is set to <b>DHCP</b>.</li> <li>• The ethernet cable connected to card rear module is securely connected.</li> <li>• A valid IP Address is no longer available. The DHCP server may be down or is still powering up after a loss of power.</li> </ul>
	MAC Address (read-only)	##:##:##:##:##:##	The MAC Address for the card

## Personality Configuration

Table 5.8 outlines the options in the **Personality** tab for the QSP-8229A.

**Table 5.8 Personality Tab Items**

Menu	Item	Parameter	Description
<b>Timing Display</b>	Timing Display	Relative to Reference*	The <b>BKGD A, B, C, D Timing</b> fields in the <b>Signal</b> tab display the timing values relative to the selected analog reference
		Input to Output	The <b>BKGD A, B, C, D Timing</b> fields in the <b>Signal</b> tab display the timing values relative to the SDI output of the card
<b>Card Lock</b>	Edit Permission	Unlocked*	All menu items are unlocked and can be edited
		Locked	All menu items, except this one, are locked and read-only. The card can still be controlled by GPI if this features was enabled prior to locking.
<b>Enable Fan Alarm<sup>a</sup></b>	Stalled Fan	Selected*	The <b>FPGA Fan</b> field in the <b>Signal</b> tab reports when the fan on the card surface is not operating correctly
		Cleared	Disables this reporting feature

a. This field is only displayed for when using Board Rev 3 or higher.

## Load/Save

The menu items available in the **Load/Save** tab enable you to reset menu parameters for the card to the factory default values.

**Table 5.9 Load/Save Tab Items**

Menu	Item	Parameter	Description
<b>Global Settings</b>	Load Factory Defaults		Resets all DashBoard parameters and values (excluding ethernet, reference, and output format settings) to the factory default values

# Proc Amps Tab

The following table summarizes the **Proc Amps** tab options available in DashBoard.

**Table 5.10 Proc Amps Tab Items**

Menu	Item	Parameters	Description
Out #	Enable	Selected*	Enables the adjustment of Proc Amp settings for the selected output
		Cleared	The Proc Amp settings for the selected output are inactive
	Video Gain (%)	0 to 200 <sup>a</sup>	Adjusts the Chroma and Luma Gain values simultaneously
	Chroma Gain (%)	0 to 200 <sup>b</sup>	Adjusts the Cr and Cb values of the output video signals: <ul style="list-style-type: none"> <li>Increasing the gain increases the saturation of colors</li> <li>Decreasing the gain de-saturates the colors until the signal is black and white</li> </ul>
	CB Gain (%)	0 to 200 <sup>c</sup>	Adjusts the Cb component of the chrominance video signal: <ul style="list-style-type: none"> <li>Increasing the value causes the video signal colors to become increasingly saturated with blue</li> <li>Decreasing the value de-saturates blue from the video signal</li> </ul>
	Black Offset (IRE)	-8 to 100 <sup>d</sup>	Selects how much of the input video signal values are mapped to black in the output signal: <ul style="list-style-type: none"> <li>Increasing the value increases the black level and lightens the image</li> <li>Decreasing the value darkens the image</li> </ul>
	Procamp	Reset	Resets the Proc Amp menu settings for the selected output to the default values

- The default value is 100.
- The default value is 100.
- The default value is 100.
- The default value is 0.

# Quad Split Tabs

The following tables summarize the **Quad Split** tab options available in DashBoard.

## Video/Label Tab

**Table 5.11** summarizes the options available in the **Video/Label** tab for the Quad Split.

**Table 5.11 Video/Label Tab Items**

Menu	Item	Parameters	Description
<b>Quadrant Selection</b>	Upper Left	Black	The upper left quadrant displays black
		Bkgd A*	The upper left quadrant displays the Bkgd A source
		Bkgd B	The upper left quadrant displays the Bkgd B source
		Bkgd C	The upper left quadrant displays the Bkgd C source
		Bkgd D	The upper left quadrant displays the Bkgd D source
	Upper Right	Same parameters as above. The default setting is Bkgd B.	
	Lower Left	Same parameters as above. The default setting is Bkgd C.	
	Lower Right	Same parameters as above. The default setting is Bkgd D.	
<b>Source Label</b>	Bkgd A	Bkgd A*	Enter text in this field to configure the label for the specified source. Note that a blank field hides the text overlay in the display quadrant. This label is applied to the Tally/Border tab items, the Bkgd # tab items, and the Config tab items.
	Bkgd B	Bkgd B*	
	Bkgd C	Bkgd C*	
	Bkgd D	Bkgd D*	

## Tally/Border Tab

**Table 5.12** summarizes the options available in the **Tally/Border** tab for the Quad Split.

**Table 5.12 Tally/Border Tab Items**

Menu	Item	Parameters	Description
<b>Tally Control</b>	Tally Position	No tallies shown*	
		Tally 1 on left, Tally 2 on right	Assigns Tally 1 to the left, and Tally 2 to the right
		Tally 2 on left, Tally 1 on right	Assigns Tally 1 to the right, and Tally 2 to the left
		Tallies displayed in border	
	Tally Color	Tally 1 is red, Tally 2 is green*	
		Tally 2 is red, Tally 1 is green	



**Table 5.12 Tally/Border Tab Items**

Menu	Item	Parameters	Description
<b>Border Control</b>	Border Color	Color*	Sets the border around a quadrant to the default color for the source <sup>a</sup>
		Black	Sets the border around the quadrants to black
		White	Sets the border around the quadrants to white
		Transparent	The border around the quadrants is fully transparent
	Border Size	0-50 <sup>b</sup>	Adjusts the width, in pixel units, of the border around the specified source. Note that a value of 0 removes the border.

- a. The default colors for the sources are as follows: Bkgd A is set to tan, Bkgd B is set to purple, Bkgd C is set to cyan, and Bkgd D is set to gray.
- b. The default value is 4.

## Bkgd A, B, C, D Tabs

**Table 5.13** summarizes the menu options in the **BKGD A, B, C, D** sub-tabs located at the bottom of the **Quad Split** tab. Note that the options described below are available for each background source.

**Table 5.13 Bkgd # Tab Items**

Menu	Item	Parameters	Description
<b>Bkgd # - Label</b>	Bkgd #	#	Enter text to assign a new QSP-8229A static label to the source
	TSL UMD	Ignore	The dynamic label information for this input is ignored; the QSP-8229A static label is displayed instead
		Append*	The dynamic label information is displayed after the QSP-8229A static label
		Prepend	The dynamic label information is displayed before the QSP-8229A static label
		Replace	The dynamic label information for this input is displayed; the QSP-8229A static label is ignored
	TSL Address	0-126 <sup>a</sup>	Assigns a Display Address for the specified input
<b>Bkgd # - Color</b>	Red	0-255	Sets the background color of the source label to red
	Green	0-255	Sets the background color of the source label to green
	Blue	0-255	Sets the background color of the source label to blue
	Transparency	0-100	Sets the background of the source label to 0 (opaque), transparent, to 100 (fully transparent). The default value is 50.

- a. The default value for Bkgd A is 0, Bkgd B is 1, Bkgd C is 2, and Bkgd D is 3.



# Appendix E. Software Licenses

---

## In This Appendix

This appendix provides third-party software license information for your QSP-8229A card. This product includes multiple software components which are individually licensed under one or more of the following licenses included in this appendix.

This appendix contains the following sections:

- BSD
- Dual GPL/Free Type
- GPL
- LGPL
- IJG
- MIT
- zlib

---

# BSD

Copyright (c) 1991,1993, The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Kenneth Almquist.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. <BSD Advertising Clause omitted per the July 22, 1999 licensing change <ftp://ftp.cs.berkeley.edu/pub/4bsd/README.Impt.License.Change>> California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---

# Dual GPL/Free Type

Portions of this software are copyright (C) 1996-2002 The FreeType Project ([www.freetype.org](http://www.freetype.org)). All rights reserved.  
This project is also covered under the GPL v2.

---

# GPL

## GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

### Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

### TERMS AND CONDITIONS

#### 0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

#### 1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

## 2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

## 3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

## 4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

## 5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

## 6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized),

the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## 7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

## 8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

## 9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

## 10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

## 11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.



Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

## **12. No Surrender of Others' Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

## **13. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

## **14. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

## **15. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

## **16. Limitation of Liability.**

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## **17. Interpretation of Sections 15 and 16.**

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

---

# IJG

The authors make NO WARRANTY or representation, either express or implied, with respect to this software, its quality, accuracy, merchantability, or fitness for a particular purpose. This software is provided "AS IS", and you, its user, assume the entire risk as to its quality and accuracy.

This software is copyright (C) 1991-1998, Thomas G. Lane.

All Rights Reserved except as specified below.

Permission is hereby granted to use, copy, modify, and distribute this software (or portions thereof) for any purpose, without fee, subject to these conditions:

- (1) If any part of the source code for this software is distributed, then this README file must be included, with this copyright and no-warranty notice unaltered; and any additions, deletions, or changes to the original files must be clearly indicated in accompanying documentation.
- (2) If only executable code is distributed, then the accompanying documentation must state that "this software is based in part on the work of the Independent JPEG Group".
- (3) Permission for use of this software is granted only if the user accepts full responsibility for any undesirable consequences; the authors accept NO LIABILITY for damages of any kind.

---

# LGPL

## GNU LESSER GENERAL PUBLIC LICENSE Version 3, 29 June 2007 Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

This version of the GNU Lesser General Public License incorporates the terms and conditions of version 3 of the GNU General Public License, supplemented by the additional permissions listed below.

### 0. Additional Definitions.

As used herein, "this License" refers to version 3 of the GNU Lesser General Public License, and the "GNU GPL" refers to version 3 of the GNU General Public License.

"The Library" refers to a covered work governed by this License, other than an Application or a Combined Work as defined below.

An "Application" is any work that makes use of an interface provided by the Library, but which is not otherwise based on the Library. Defining a subclass of a class defined by the Library is deemed a mode of using an interface provided by the Library.

A "Combined Work" is a work produced by combining or linking an Application with the Library. The particular version of the Library with which the Combined Work was made is also called the "Linked Version".

The "Minimal Corresponding Source" for a Combined Work means the Corresponding Source for the Combined Work, excluding any source code for portions of the Combined Work that, considered in isolation, are based on the Application, and not on the Linked Version.

The "Corresponding Application Code" for a Combined Work means the object code and/or source code for the Application, including any data and utility programs needed for reproducing the Combined Work from the Application, but excluding the System Libraries of the Combined Work.

### 1. Exception to Section 3 of the GNU GPL.

You may convey a covered work under sections 3 and 4 of this License without being bound by section 3 of the GNU GPL.

### 2. Conveying Modified Versions.

If you modify a copy of the Library, and, in your modifications, a facility refers to a function or data to be supplied by an Application that uses the facility (other than as an argument passed when the facility is invoked), then you may convey a copy of the modified version:

- a) under this License, provided that you make a good faith effort to ensure that, in the event an Application does not supply the function or data, the facility still operates, and performs whatever part of its purpose remains meaningful, or
- b) under the GNU GPL, with none of the additional permissions of this License applicable to that copy.

### 3. Object Code Incorporating Material from Library Header Files.

The object code form of an Application may incorporate material from a header file that is part of the Library. You may convey such object code under terms of your choice, provided that, if the incorporated material is not limited to numerical parameters, data structure layouts and accessors, or small macros, inline functions and templates (ten or fewer lines in length), you do both of the following:

- a) Give prominent notice with each copy of the object code that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the object code with a copy of the GNU GPL and this license document.

### 4. Combined Works.

You may convey a Combined Work under terms of your choice that, taken together, effectively do not restrict modification of the portions of the Library contained in the Combined Work and reverse engineering for debugging such modifications, if you also do each of the following:

- a) Give prominent notice with each copy of the Combined Work that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the Combined Work with a copy of the GNU GPL and this license document.
- c) For a Combined Work that displays copyright notices during execution, include the copyright notice for the Library among these notices, as well as a reference directing the user to the copies of the GNU GPL and this license document.
- d) Do one of the following:
  - 1) Convey the Minimal Corresponding Source under the terms of this License, and the Corresponding Application Code in a form suitable for, and under terms that permit, the user to recombine or relink the Application with a modified version of the Linked Version to produce a modified Combined Work, in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.
  - 2) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (a) uses at run time a copy of the Library already present on the user's computer system, and (b) will operate properly with a modified version of the Library that is interface-compatible with the Linked Version.
- e) Provide Installation Information, but only if you would otherwise be required to provide such information under section 6 of the GNU GPL, and only to the extent that such information is necessary to install and execute a modified version of the Combined Work produced by recombining or relinking the Application with a modified version of the Linked Version. (If you use option 4d0, the Installation Information must accompany the Minimal Corresponding Source and Corresponding Application Code. If you use option 4d1, you must provide the Installation Information in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.)

### 5. Combined Libraries.

You may place library facilities that are a work based on the Library side by side in a single library together with other library facilities that are not Applications and are not covered by this License, and convey such a combined library under terms of your choice, if you do both of the following:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities, conveyed under the terms of this License.

- b) Give prominent notice with the combined library that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

#### **6. Revised Versions of the GNU Lesser General Public License.**

The Free Software Foundation may publish revised and/or new versions of the GNU Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library as you received it specifies that a certain numbered version of the GNU Lesser General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that published version or of any later version published by the Free Software Foundation. If the Library as you received it does not specify a version number of the GNU Lesser General Public License, you may choose any version of the GNU Lesser General Public License ever published by the Free Software Foundation.

If the Library as you received it specifies that a proxy can decide whether future versions of the GNU Lesser General Public License shall apply, that proxy's public statement of acceptance of any version is permanent authorization for you to choose that version for the Library.

---

# MIT

Copyright 1987, 1988 by MIT Student Information Processing Board.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose is hereby granted, provided that the names of M.I.T. and the M.I.T. S.I.P.B. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. and the M.I.T. S.I.P.B. make no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

---

# **zlib**

Copyright (C) 1995-1998 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution. Jean-loup Gailly Mark Adler [jloup@gzip.org](mailto:jloup@gzip.org) [madler@alumni.caltech.edu](mailto:madler@alumni.caltech.edu)

The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files <ftp://ds.internic.net/rfc/rfc1950.txt> (zlib format), [rfc1951.txt](ftp://ds.internic.net/rfc/rfc1951.txt) (deflate format) and [rfc1952.txt](ftp://ds.internic.net/rfc/rfc1952.txt) (gzip format).

# Appendix B. Specifications

---

## In This Appendix

This appendix provides information on the specifications for your QSP-8229A. Note that specifications are subject to change without notice.

The following topics are discussed:

- 8310AR-033 and 8320AR-033 Specifications
- 8320AR-049 Specifications

---

## 8310AR-033 and 8320AR-033 Specifications

Table 7.1 provides technical specifications when using the 8310AR-033 or 8320AR-033 Rear Modules.

**Table 7.1 QSP-8229A Technical Specifications - 8310AR-033 and 8320AR-033**

Category	Parameter	Specification
Serial Digital Video Inputs	Number of Inputs	4
	SDI Data Rates and SMPTE Standards Accommodated	SMPTE 259M (270 Mbps) SMPTE 292M (1.485 Gbps)
	Impedance	75 Ohms
	Return Loss	< -15dB, 0 to 1.5GHz
	Equalization	80m
Serial Digital Video Outputs	Number of Outputs	4
	Impedance	75 Ohms
	Return Loss	OUT 1: -15dB, 0 to 1.5GHz OUT 2-4: <-15dB, 0 to 1.5GHz
	Signal Level	800mV +/-10%
	DC Offset	0+/-50mV
	Rise and Fall Time	SD: 900ps typical HD: 150ps typical
	Overshoot	<10% typical
Power	Power Consumption	22W



---

## 8320AR-049 Specifications

Table 7.2 provides technical specifications when using the 8320AR-049 Rear Module.

**Table 7.2 QSP-8229A Technical Specifications - 8320AR-049**

Category	Parameter	Specification
Serial Digital Video Inputs	Number of Looping Inputs	4
	SDI Data Rates and SMPTE Standards Accommodated	SMPTE 259M (270 Mbps) SMPTE 292M (1.485 Gbps)
	Impedance	75 Ohms
	Return Loss	Not applicable for looping input
	Equalization	50 m
Serial Digital Video Outputs	Number of Outputs	4
	Number of Looping Outputs	4 ( <i>8320AR-049 Rear Module only</i> )
	Impedance	75 Ohms
	Return Loss	OUT 1-4: <15dB, 0 to 1.5GHz
	Signal Level	800mV +/-10%
	DC Offset	0+/-50mV
	Rise and Fall Time	SD: 900ps typical HD: 150ps typical
	Overshoot	<10% typical
Power	Power Consumption	22W



# Appendix C. Service Information

---

## In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

---

# Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your QSP-8229A, the following basic troubleshooting checklist may help identify the source of the problem. If the card or frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “**Contact Us**” section.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Reference Signal Status** — Verify that the analog reference (blackburst or tri-level) is supplied on one of the three reference inputs. Check the Reference Input and the Output Format settings. Also check the status of the reference by navigating to the Reference Status field located on the Signal tab in DashBoard.
4. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
5. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
6. **Unit Exchange** — Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.
7. **Re-load the Factory Defaults** — If the card appears to be working and reports no errors, but is not generating an active picture or outputs black, restoring the default factory configuration may fix the problem.

---

## Warranty and Repair Policy

The QSP-8229A is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your QSP-8229A proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this QSP-8229A has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This QSP-8229A User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the QSP-8229A are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

### In Case of Problems

Should any problem arise with your QSP-8229A, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your QSP-8229A. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

# Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

## Technical Support

Telephone: +1 613 • 652 • 4886  
After Hours Emergency: +1 613 • 349 • 0006  
Email: [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

## General Information

Telephone: +1 613 • 652 • 4886  
Fax: +1 613 • 652 • 4425  
Email: [solutions@rossvideo.com](mailto:solutions@rossvideo.com)  
Website: <http://www.rossvideo.com>

## Visit Us

Visit our website for:

- Company information and news
- Related products and full product lines
- Online catalog
- Testimonials