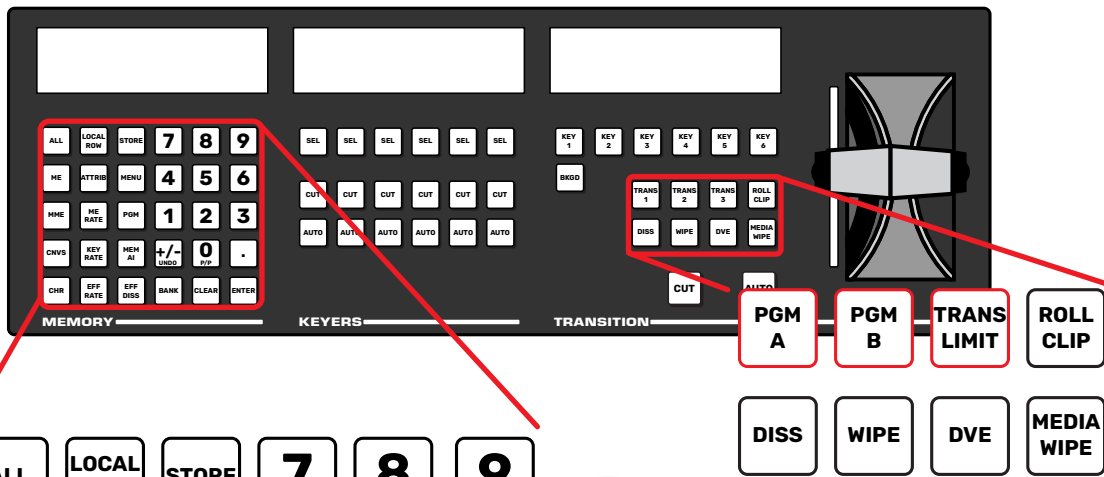The User buttons in the Memory and Transition areas can be assigned to a number of different functions from the Personality menu. The assignments shown here are default values that allow you to easily access different switcher functions. The button caps to be replaced are shown in red and the replacement button cap is included in this kit.

The Fixed buttons in the Memory area are not user assignable but their functionality is different in an Acuity switcher. The button caps to be replaced are shown in dotted red and the replacement button cap is included in this kit.

Additional inserts can be found in the Documentation kit for your TouchDrive control panel. If an insert for the function you want to assign to a User button is not in the kit, you can download a template from the Ross website to print your own inserts.

User/Fixed Buttons - Trans and Memory

□ User Buttons

▢ Fixed Buttons

MEMORY

ALL	LOCAL ROW	STORE	7	8	9
ME	ATTRIB	MENU	4	5	6
MEM USR1	ME RATE	RECALL CLIP/CC	1	2	3
MEM USR2	KEY RATE	KEYS ONLY	+/- UNDO	0 P/P	. RUN CC
MEM USR3	EFF RATE	EFF DISS	BANK	CLEAR	ENTER

Transition buttons: PGM A | PGM B | TRANS LIMIT | ROLL CLIP

DISS | WIPE | DVE | MEDIA WIPE

Printable Inserts

If you do not have the replacement button caps than came with your TD panel, you can create replacement inserts for your existing buttons.

Print this page out on a clear lexan and cut out the inserts shown below. Ensure that you print the page at **Actual Size** to ensure the inserts are the proper size.

MEM USR1 | MEM USR2 | MEM USR3 | RECALL CLIP/CC | KEYS ONLY | · RUN CC

PGM A | PGM B | TRANS LIMIT

ROSS

4880DR-506-02