


Getting Started

CAUTION: Before you set up and operate **XPression™ Studio GO!**, **BlueBox GO!**, or **Prime GO!**, read the safety instructions in the manuals for all applicable devices.

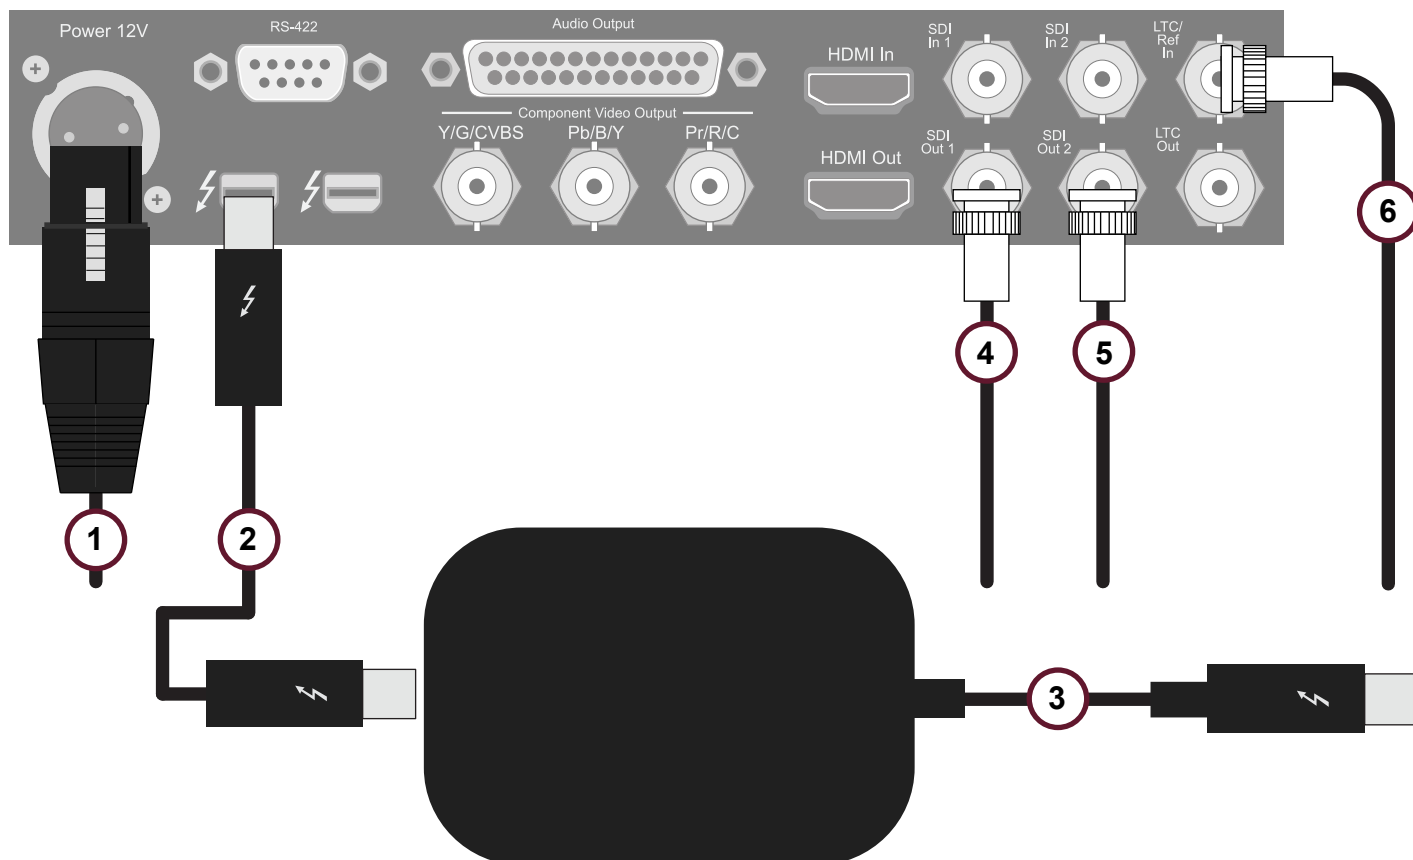

- 1 Connect the power cable from the power connector to an outlet.
- 2 Connect the Thunderbolt™ 2 cable from the Thunderbolt 2 port on the box to the Thunderbolt 2 port on the StarTech® adapter.
- 3 Connect the Thunderbolt 3 cable from the StarTech adapter to the Thunderbolt 3 port on the laptop.
- 4 Connect video output cable from the HD/SDI **SDI Out 1** BNC connector to the required destination.
- 5 Connect video output cable from the HD/SDI **SDI Out 2** (Key Out) BNC connector to the required destination.
- 6 Connect reference input cable to the **Ref In** BNC connector.
- 7 Power up the video interface by pressing the power button (⏻) on the front of the box.
Note: Always power up the box before powering up the laptop.
- 8 Power up the laptop.
- 9 Install the AJA® IOXT™ driver (see **XPression GO! AJA IOXT Driver Installation** instructions for details).
- 10 Install the XPression software.



Need Help?

Technical Support: (+1) 613-652-4886
Email: techsupport@rossvideo.com