


## Getting Started

⚠ CAUTION: Before you set up and operate **Trackless Studio**, read the safety instructions in the manuals for all applicable devices.

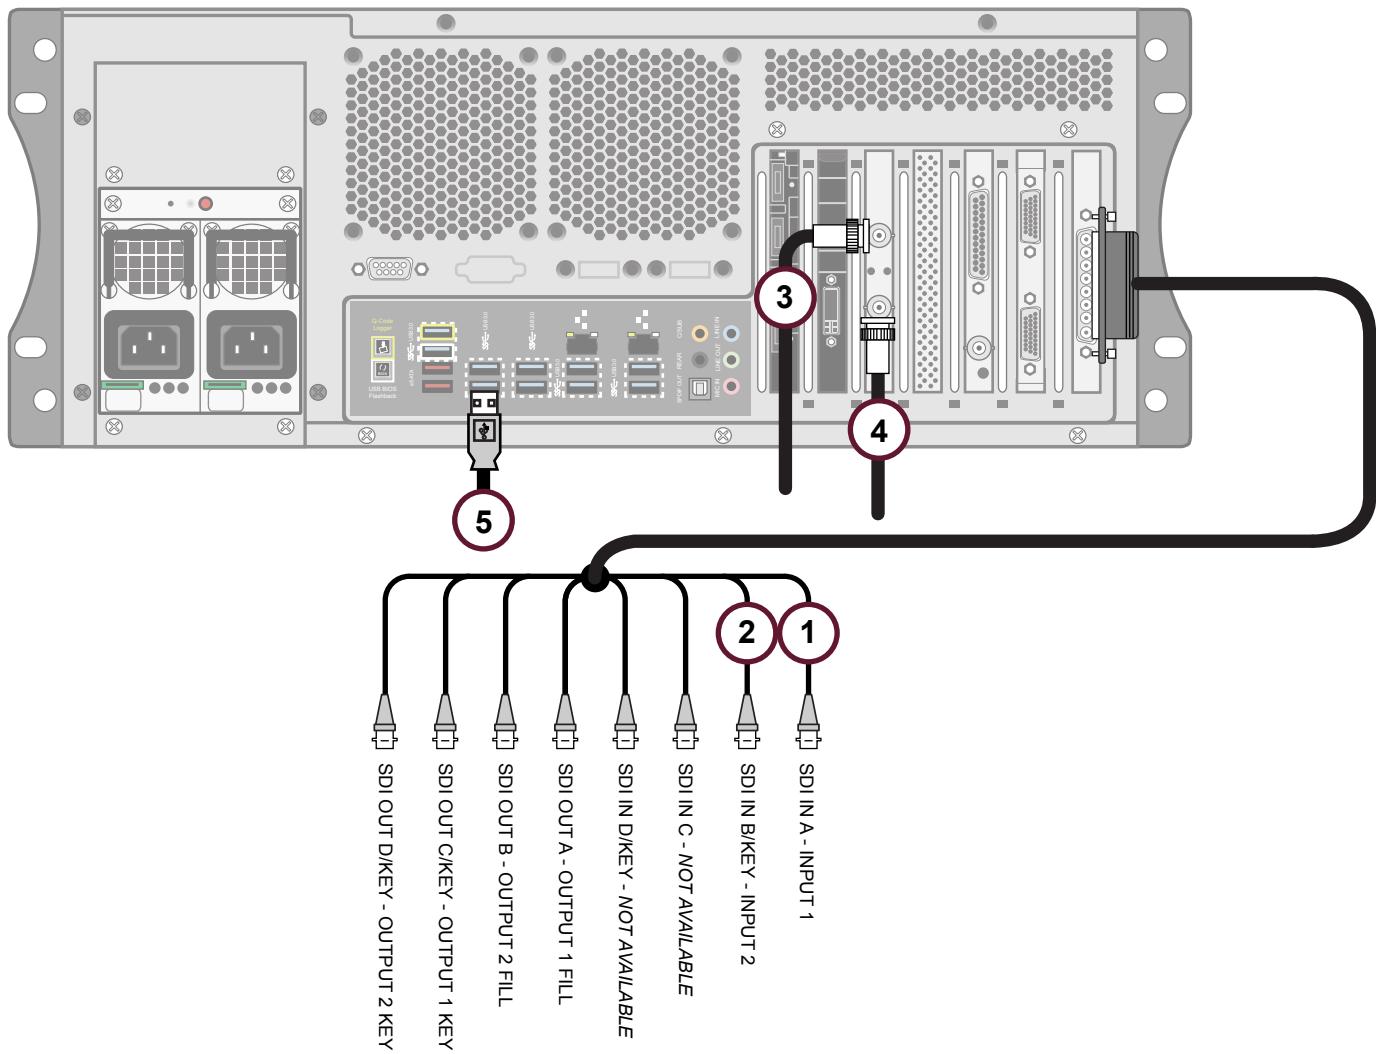

- 1 Connect Camera 1 to **SDI IN A**.
- 2 Connect Camera 2 to **SDI IN B/KEY**.
- 3 Connect Camera 3 to **SDI IN C** (if using 4-input XPression machine).
- 4 Connect Camera 4 to **SDI IN D** (if using 4-input XPression machine).
- 5 Connect the shotbox controller to a **USB** port (if using the shotbox option).
- 6 Power up the XPression system by pressing the power button (⊕) on the front of the box.



**Need Help?**

Technical Support: (+1) 613-652-4886  
Email: [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)