


ADA-8405-C

Analog Audio and Timecode Distribution Amplifier User Manual

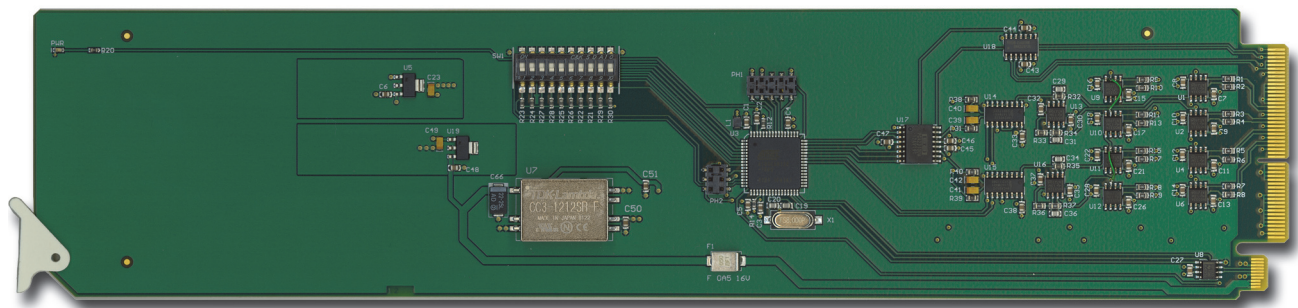

Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross
CEO, Ross Video
dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

ADA-8405-C · User Manual

- Ross Part Number: 8405CDR-004-03
- Release Date: January 18, 2018.

The information contained in this Guide is subject to change without notice or obligation.

Copyright

©2018 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Safety Notices

Refer to the “**Important Regulatory and Safety Notices**” document that accompanied your product.

Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as certification or Declaration of Compliance for the product is available upon request by contacting techsupport@rossvideo.com. Please include the product; model number identifiers and serial number and country that compliance information is needed in request.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio

communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notice — *Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.*

Canada

This Class “A” digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules.

Cet appareil numérique de la classe “A” est conforme à la norme NMB-003 du Canada.

European Union

This equipment is in compliance with the essential requirements and other relevant provisions established under regulation (EC) No 765/2008 and Decision No 768/2008/EC referred to as the “New Legislative Framework”.



Warning — *This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.*

Australia/New Zealand

This equipment is in compliance with the provisions established under the Radiocommunications Act 1992 and Radiocommunications Labeling (Electromagnetic Compatibility) Notice 2008.

Korea

This equipment is in compliance with the provisions established under the Radio Waves Act.

Class A equipment (Broadcasting and communications service for business use)

This device is a business-use (Class A) EMC-compliant device. The seller and user are advised to be aware of this fact. This device is intended for use in areas outside home.

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
Class A Equipment (Industrial Broadcasting & Communication Equipment)	This equipment is Industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home.

International

This equipment has been tested under the requirements of CISPR 22:2008 or CISPR 32:2015 and found to comply with the limits for a Class A Digital device.

Notice — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the “**Contact Us**” section of this manual. All openGear products are covered by a generous 5-year warranty

and will be repaired without charge for materials or labor within this period. See the “**Warranty and Repair Policy**” section in this manual for details.

Environmental Information

The equipment may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

Company Address



Ross Video Limited

8 John Street
Iroquois, Ontario, K0E 1K0
Canada

Ross Video Incorporated

P.O. Box 880
Ogdensburg, New York
USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): techsupport@rossvideo.com

E-mail (General Information): solutions@rossvideo.com

Website: <http://www.rossvideo.com>

Contents

Introduction	1
Overview.....	1-2
Features.....	1-2
Functional Block Diagrams	1-3
User Interfaces	1-4
DashBoard Control System	1-4
Card-edge Controls.....	1-4
Documentation Terms and Conventions.....	1-5
Installation	2
Before You Begin	2-2
Static Discharge	2-2
Unpacking.....	2-2
Installing the ADA-8405-C	2-3
Rear Modules for the ADA-8405-C	2-3
Installing a Rear Module	2-3
Installing the ADA-8405-C	2-4
Cabling for the ADA-8405-C	2-5
DFR-8310 Series Frame Cabling Overview.....	2-5
DFR-8321 and OG3-FR Series Frame Cabling Overview	2-5
Software Upgrades.....	2-6
User Controls	3
Card Overview	3-2
Configuring the DIP Switches	3-3
Control and Monitoring Features.....	3-5
Status and Selection LEDs on the ADA-8405-C	3-5
DashBoard Menus	4
Status Tabs	4-2
Product Tab	4-2
Settings Tab	4-3
Specifications	5
Technical Specifications	5-2
Service Information	6
Troubleshooting Checklist.....	6-2
Warranty and Repair Policy.....	6-3

Introduction

In This Chapter

This chapter contains the following sections:

- Overview
- Functional Block Diagrams
- User Interfaces
- Documentation Terms and Conventions

A Word of Thanks

Congratulations on choosing an openGear ADA-8405-C Analog Audio and Timecode Distribution Amplifier with Remote Gain. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your ADA-8405-C, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

Overview

The ADA-8405-C is a remote gain analog audio distribution amplifier designed for broadcast use. It can be used as either a mono 1x8, or two channel (stereo) 1x4 audio DA. When used with a Full Rear Module, it provides eight copies of the single (mono) input signal or four copies each of the two (stereo) inputs.

The 8320AR-043 Split Rear Module can support two ADA-8405-C cards, each operating as a 1x4 audio DA. This can be used to separate left and right stereo pair signals to be amplified in separate paths for critical signals.

The ADA-8405-C is also ideal to distribute Timecode (LTC) throughout a facility. In single channel, 1x8 mode, the ADA-8405-C provides eight copies of the incoming single when used with the Full Rear Modules or four copies of the incoming signal when used with the 8320AR-043 Split Rear Module.

Features

The following features make the ADA-8405-C the best solution for distributing analog audio signals:

- 1x8 Mono or 1x4 stereo analog audio distribution
- +/- 15dB remote gain control
- Summing capability
- Low distortion
- 1x8 or high density 1x4 Timecode (LTC) Distribution
- Higher density with up to 20 cards per frame in the DFR-8321 and OG3-FR series frames using 8320AR-043 Split Rear Modules
- Balanced inputs/outputs
- 5-year transferable warranty

Functional Block Diagrams

This section provides the functional block diagrams that outline the workflow of the ADA-8405-C.

Figure 1.1 illustrates the ADA-8405-C when the **Operating Mode** is set to **Stereo DA (2x4)** and using the 8310AR-042 or 8320AR-042 rear modules.

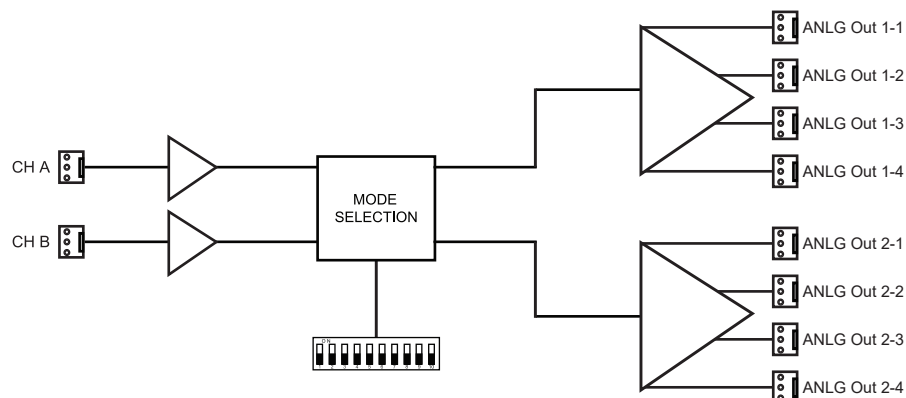


Figure 1.1 Simplified Block Diagram — 8310AR-042 and 8320AR-042 Full Rear Module

Figure 1.2 illustrates the ADA-8405-C when using the 8320AR-043 split rear module.

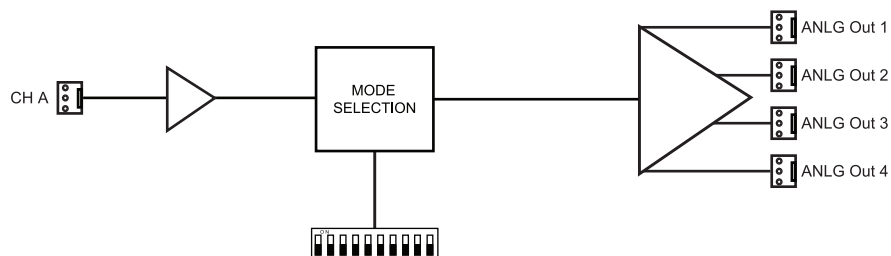


Figure 1.2 Simplified Block Diagram — 8320AR-043 Split Rear Module

User Interfaces

The ADA-8405-C offers the following interfaces for control and monitoring.

DashBoard Control System

The DashBoard Control System enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with other cards in the frame through the MFC-8300 Series Network Controller Card.

For More Information on...

- the menus in DashBoard, refer to the chapter “**DashBoard Menus**” on page 4-1.
- using DashBoard, refer to the ***DashBoard User Manual*** available from our website.

Card-edge Controls

The ADA-8405-C provides card-edge controls for adjusting the output levels, selecting the operation mode, and configuring remote control options. The front-edge of the ADA-8405-C also includes LEDs that display the status of the input signals. As selections are made in the menus, the LEDs display the status of the input signals.

For More Information on...

- adjusting the output levels, refer to the section “**Card Overview**” on page 3-2.
- using the DIP switches on the card-edge, refer to the section “**Configuring the DIP Switches**” on page 3-3.
- monitoring the status using the card-edge LEDs, refer to the section “**Control and Monitoring Features**” on page 3-5.

Documentation Terms and Conventions

The following terms and conventions are used throughout this manual.

Terms

The following terms are used:

- **“Board”**, and **“Card”** refer to openGear terminal devices within openGear frames, including all components and switches.
- **“DashBoard”** refers to the DashBoard Control System.
- **“DFR-8300 series frame”** refers to all versions of the 10-slot (DFR-8310 series) and 20-slot (DFR-8321 series) frames and any available options unless otherwise noted.
- **“OG3-FR series frame”** refers to all versions of the OG3-FR series frame and any available options unless otherwise noted.
- **“openGear frame”** refers to DFR-8300 series frame and the OG3-FR series frame that houses the ADA-8405-C card.
- **“Operator”** and **“User”** refer to the person who uses ADA-8405-C.
- **“System”** and **“Video system”** refer to the mix of interconnected production and terminal equipment in your environment.

Conventions

The following conventions are used:

- The **“Operating Tips”** and **“Note”** boxes are used throughout this manual to provide additional user information.

Installation

In This Chapter

This chapter provides instructions for installing the Rear Module(s) for the ADA-8405-C, installing the card into the frame, cabling details, and updating the card software.

The following topics are discussed:

- Before You Begin
- Installing the ADA-8405-C
- Cabling for the ADA-8405-C
- Software Upgrades

Before You Begin

Before proceeding with the instructions in this chapter, ensure that your openGear frame is properly installed according to the instructions in its user manual.

Static Discharge

Whenever handling the ADA-8405-C and other related equipment, please observe all static discharge precautions as described in the following note:



ESD Susceptibility — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

Unpacking

Unpack each ADA-8405-C you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

Installing the ADA-8405-C

This section outlines how to install a Rear Module in an openGear frame. The same procedure applies regardless of the frame or card type. However, the specific Rear Module you need to install depends on the frame you are using.

Rear Modules for the ADA-8405-C

The Rear Module for the ADA-8405-C depends on the openGear frame you are installing the card into.

- **DFR-8310 series frame** — The **8310AR-042** Full Rear Module is required. The ADA-8405-C is not compatible with the DFR-8310-BNC frames.
- **DFR-8321 and OG3-FR series frames** — The **8320AR-042** Full Rear Module, or the **8320AR-043** Split Rear Module can be used. When using a Full Rear Module, use the even numbered slots, such as 2 or 4, to ensure that the card aligns with the rear module.

Installing a Rear Module

If the Rear Module is already installed, proceed to the section “**Installing the ADA-8405-C**” on page 2-4.

To install a Rear Module in your openGear frame

1. Locate the card frame slots on the rear of the frame.
2. Remove the Blank Plate from the slot you have chosen for the ADA-8405-C installation.
3. Install the bottom of the Rear Module in the **Module Seating Slot** at the base of the frame’s back plane. (**Figure 2.1**)

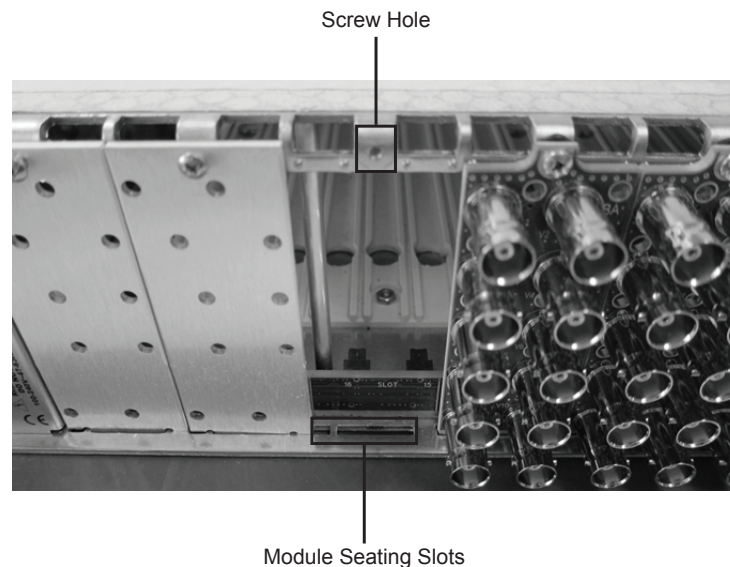


Figure 2.1 Rear Module Installation in an openGear Frame (ADA-8405-C not shown)

4. Align the top hole of the Rear Module with the screw on the top-edge of the frame back plane.
5. Using a Phillips screwdriver and the supplied screw, fasten the Rear Module to the back plane of the frame. Do not over tighten.

6. Ensure proper frame cooling and ventilation by having all rear frame slots covered with Rear Modules or Blank Plates.

Installing the ADA-8405-C

This section outlines how to install the ADA-8405-C in an openGear frame. If the ADA-8405-C is to be installed in any compatible frame other than a Ross Video product, refer to the frame manufacturer's manual for specific instructions.

To install the ADA-8405-C in an openGear frame

1. Locate the Rear Module you installed in the procedure “**Installing a Rear Module**” on page 2-3.
2. Hold the ADA-8405-C by the edges and carefully align the card-edges with the slots in the frame.
3. Fully insert the card into the frame until the rear connection plus is properly seated in the Rear Module.
4. Verify whether your label is self-adhesive by checking the back of the label before applying the label to the rear module surface.
5. Affix the supplied **Rear Module Label** to the BNC area of the Rear Module.

Cabling for the ADA-8405-C

This section provides information for connecting cables to the installed Rear Modules. Connect the input and output cables according to the following sections.

DFR-8310 Series Frame Cabling Overview

The ADA-8405-C is used with the following Rear Modules:

- **8310AR-042** Full Rear Module — Each module occupies one slot and accommodates one card. This rear module provides two analog inputs, and eight analog outputs. (**Figure 2.2**)

DFR-8321 and OG3-FR Series Frame Cabling Overview

The ADA-8405-C is used with the following Rear Modules:

- **8320AR-042** Full Rear Module — Each module occupies two slots and accommodates one card. This rear module provides two analog inputs and eight analog outputs. (**Figure 2.2**)
- **8320AR-043** Split Rear Module — Each module occupies two slots and accommodates two cards. This rear module provides one analog input and four analog outputs per card. (**Figure 2.3**)

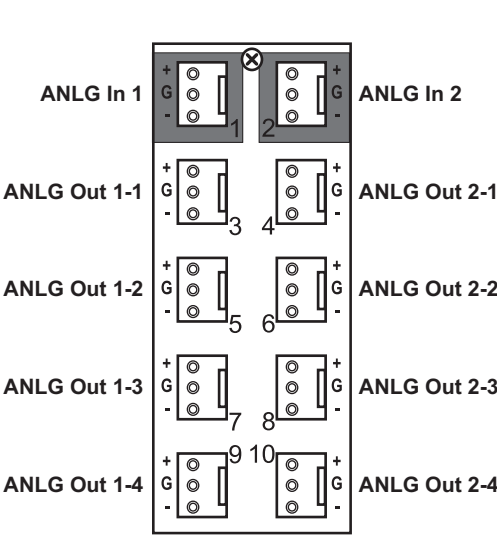


Figure 2.2 Cable Connections for the **8310AR-042** and **8320AR-042** Full Rear Modules

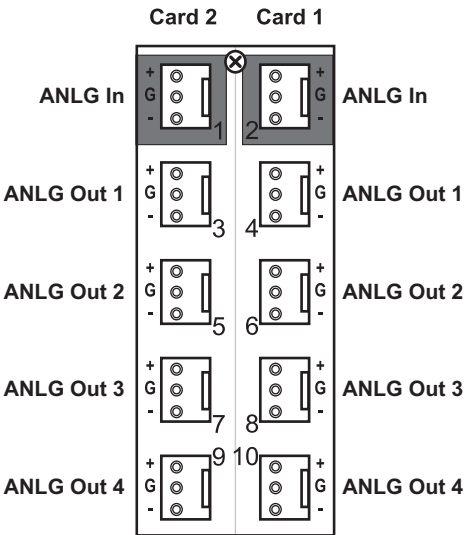


Figure 2.3 Cable Connections for the **8320AR-043** Split Rear Module

Software Upgrades

The card can be upgraded in the field via the MFC-8300 series Network Controller card in your frame.



Note — *DashBoard version 3.0.0 or higher is required for this procedure.*

To upgrade the software on the ADA-8405-C

1. Contact Ross Technical Support for the latest software version file.
2. Display the **Device View** of the card by double-clicking its status indicator in the **Basic Tree View**.
3. From the **Device View**, click **Upload** to display the **Select file for upload** dialog.
4. Navigate to the *.bin upload file you wish to upload.
5. Click **Open**.
6. If you are upgrading a single card, click **Finish**. Proceed to step 8.
7. If you are upgrading multiple cards:
 - Click **Next >** to display the **Select Destination** menu. This menu provides a list of the compatible cards based on the card selected in step 2.
 - Specify the card(s) to upload the file to by selecting the check box(es) for the cards you wish to upload the file to.
 - Verify that the card(s) you wish to upload the file to. The **Error/Warning** fields indicate any errors, such as incompatible software or card type mismatch.
 - Click **Finish**.
8. Monitor the upgrade.
 - Monitor the upgrade progress bar displayed in DashBoard.
 - The card(s) are automatically re-booted and temporarily taken offline during the re-boot process. The process is complete once the status indicators for the **Card State** and **Connection** fields return to their previous status.

User Controls

In This Chapter

This chapter provides a general overview of the user controls available on the ADA-8405-C.

The following topics are discussed:

- Card Overview
- Configuring the DIP Switches
- Control and Monitoring Features

Card Overview

This section provides a general overview of the ADA-8405-C DIP Switches. Refer to **Figure 3.1** for DIP Switch location.

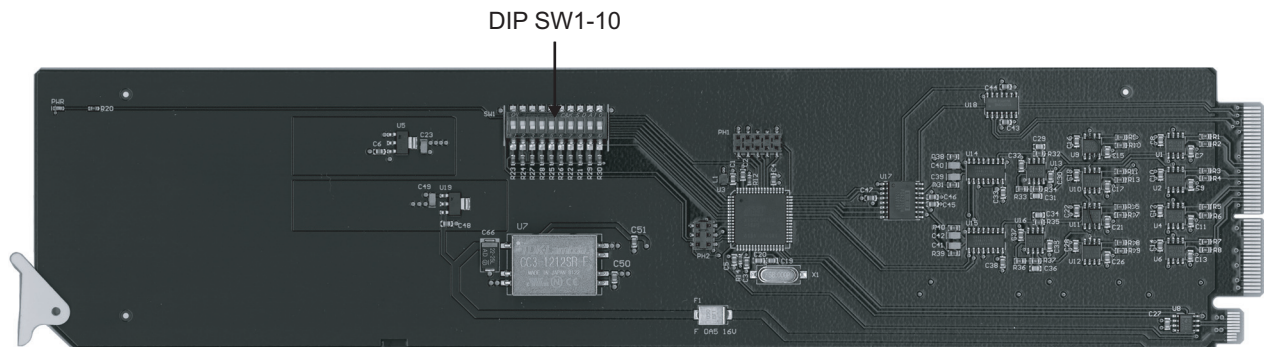


Figure 3.1 ADA-8405-C — Components

SW1 — Remote Control

Use **SW1** to disable remote control of the ADA-8405-C from DashBoard.

Set **SW1** as follows:

- **ON** — Select this setting to disable remote control from DashBoard. The parameters and settings cannot be changed via DashBoard and must be changed using the card-edge controls. You can still monitor the status of the card using DashBoard.
- **OFF** — Select this setting to control the ADA-8405-C exclusively from DashBoard. The card-edge controls are ignored. This is the default setting.

SW2 — DIP Switch Control

Use **SW2** to determine whether DIP Switch settings are applied or ignored.

Set **SW2** as follows:

- **ON** — DIP Switch status is reported in DashBoard, and DIP Switch settings are applied. Any parameter adjustments made in DashBoard are ignored.
- **OFF** — DIP Switch status is reported in DashBoard, however DIP Switch settings are ignored. Parameter adjustments made in DashBoard are applied. This is the default setting.

SW3, SW4 — Output Mode Selection

SW3 and **SW4** are used in conjunction to set the output mode of the ADA-8405-C. Refer to the section “Setting the Output Mode” on page 3-3 for details.

SW5

This DIP Switch is not implemented.

SW6 - SW10 — Gain Control

These switches are used in conjunction to apply a specific Gain value (dB). Refer to the section “Specifying the Gain” on page 3-3 for details.

Configuring the DIP Switches

This section provides a brief summary of the DIP Switches of the ADA-8405-C. Refer to **Figure 3.1** for the DIP Switch locations. **Figure 3.2** shows all the DIP Switches in the **OFF** position.

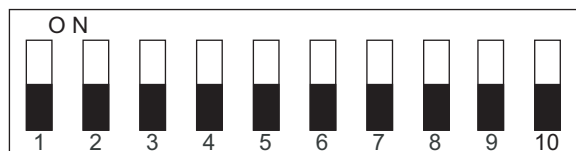


Figure 3.2 DIP Switches — OFF Positions

Enabling Card-edge Control

Ensure that **SW1** is set to **ON** and **SW2** is set to **ON** if you are going to use the card-edge DIP Switches to change settings on the card. You can still monitor the card status in DashBoard.

Setting the Output Mode

SW3 and **SW4** are used in conjunction to set the output mode of the ADA-8405-C. **Table 3.1** lists the combinations of DIP Switch settings for **SW3** and **SW4**.

Table 3.1 Setting the Output Mode

SW3	SW4	Mode Selected
OFF	OFF	Stereo DA (1x4)
OFF	ON	Mono DA (1x8)
ON	ON	Stereo Sum

Specifying the Gain

SW6-SW10 are used in conjunction to specify the coarse level gain adjustment applied to the output of the ADA-8405-C. **Table 3.2** lists the combinations of DIP Switch settings for **SW6-SW10**.

Table 3.2 Specifying the Gain

SW6	SW7	SW8	SW9	SW10	Gain (dB)
OFF	OFF	OFF	OFF	OFF	UNITY
OFF	OFF	OFF	OFF	ON	1
OFF	OFF	OFF	ON	OFF	2
OFF	OFF	OFF	ON	ON	3
OFF	OFF	ON	OFF	OFF	4
OFF	OFF	ON	OFF	ON	5
OFF	OFF	ON	ON	OFF	6
OFF	OFF	ON	ON	ON	7
OFF	ON	OFF	OFF	OFF	8
OFF	ON	OFF	OFF	ON	9
OFF	ON	OFF	ON	OFF	10

Table 3.2 Specifying the Gain

SW6	SW7	SW8	SW9	SW10	Gain (dB)
OFF	ON	OFF	ON	ON	11
OFF	ON	ON	OFF	OFF	12
OFF	ON	ON	OFF	ON	13
OFF	ON	ON	ON	OFF	14
OFF	ON	ON	ON	ON	15
ON	OFF	OFF	OFF	OFF	UNITY
ON	OFF	OFF	OFF	ON	-1
ON	OFF	OFF	ON	OFF	-2
ON	OFF	OFF	ON	ON	-3
ON	OFF	ON	OFF	OFF	-4
ON	OFF	ON	OFF	ON	-5
ON	OFF	ON	ON	OFF	-6
ON	OFF	ON	ON	ON	-7
ON	ON	OFF	OFF	OFF	-8
ON	ON	OFF	OFF	ON	-9
ON	ON	OFF	ON	OFF	-10
ON	ON	OFF	ON	ON	-11
ON	ON	ON	OFF	OFF	-12
ON	ON	ON	OFF	ON	-13
ON	ON	ON	ON	OFF	-14
ON	ON	ON	ON	ON	-15

Control and Monitoring Features

This section provides information on the card-edge LEDs for the ADA-8405-C. Refer to **Figure 3.3** for the location of the LEDs.

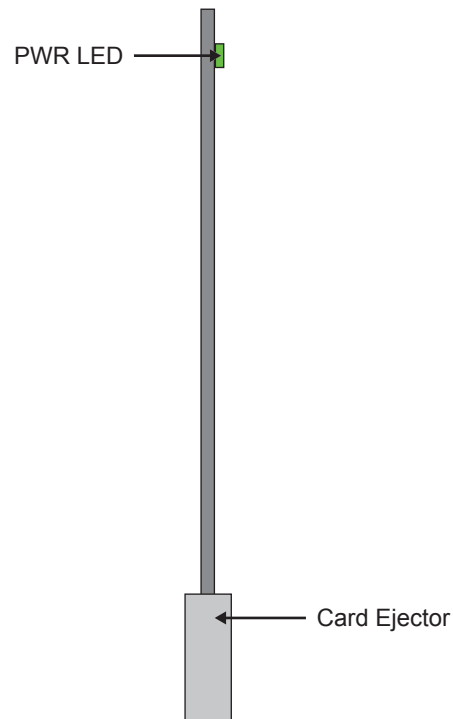


Figure 3.3 ADA-8405-C Card-edge LEDs

Status and Selection LEDs on the ADA-8405-C

Table 3.3 describes the PWR LED.

Table 3.3 LEDs on the ADA-8405-C

LED	Color	Display and Description
PWR	Green	When lit, this LED indicates the card is powered on.

DashBoard Menus

In This Chapter

This chapter briefly summarize the menus, items, and parameters available from DashBoard for the ADA-8405-C. Parameters marked with an asterisk (*) are the factory default values.

The following topic is discussed:

- Status Tabs
- Settings Tab



Operating Tip — *Wait 30 seconds after the last setting change to ensure all changes are saved to the non-volatile memory of the card.*

Status Tabs

This section summarizes the read-only information displayed in the Status tabs.

Product Tab

Table 4.1 summarizes the read-only information displayed in the **Product** tab.

Table 4.1 Product Tab Items

Tab Title	Item	Parameters	Description
Card Info (Read-only)	Card Name	Analog Audio and Timecode Distribution Amplifier	
	Product	ADA-8405-C	
	Supplier	Ross Video Ltd.	
	Serial Number	#	Indicates the serial number of the board
	Software Rev	#.##	Indicates the software version

Settings Tab

Table 4.2 summarizes the **Settings** options available in DashBoard.

Table 4.2 Settings Menu Items

Tab Title	Item	Parameters	Description
Settings	Mode	Stereo DA (2x4)	ANLG In 1 outputs to ANLG Out 1-1, 1-2, 1-3, and 1-4 ANLG In 2 outputs to ANLG Out 2-1, 2-2, 2-3, and 2-4
		Mono DA (1x8)	ANLG In 1 outputs to all eight ANLG outputs
		Stereo Sum	Card outputs a sum of ANLG In 1 and 2 to all eight ANLG outputs
	STEREO Gain Control	0 to 100	Adjusts the audio gain for all outputs
	Left Trim Control (dB)	-15 to +15	Specifies the coarse level gain adjustment applied to ANLG In 1
	Right Trim Control (dB)	-15 to +15	Specifies the coarse level gain adjustment applied to ANLG In 2

Specifications

In This Chapter

This chapter provides the technical specification information for the ADA-8405-C. Note that specifications are subject to change without notice.

The following topics are discussed:

- Technical Specifications

Technical Specifications

This section provides the technical specifications for the ADA-8405-C.

Table 5.1 ADA-8405-C Technical Specifications

Category	Parameter	Specification
Analog Inputs	Number of Inputs	8310AR-042 and 8320AR-042: 2 8320AR-043: 1
	Input Impedance	>20Kohm, balanced
	Connector	WECO®
	Maximum Input Level	+27.5dBu
Performance	Gain	-15dB to +15dB
	Frequency Response	±0.1dB from 20Hz to 20kHz
	Noise	<-85dBu, 10kHz to 22kHz at unity gain
	Inter-channel Crosstalk	<90dB 20Hz to 20kHz
	Harmonic Distortion	<0.01%
Analog Outputs	Maximum Output Level	+27dBu
	Impedance	66ohm balanced
	Isolation	>60dB
Power	Maximum Power Consumption	>4.5W

Service Information

In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your ADA-8405-C, the following basic troubleshooting checklist may help identify the source of the problem. If the frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “**Contact Us**” section.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Re-seat the Card in the Frame** — Eject the card and reinsert it in the frame.
4. **Check Control Settings** — Verify all user-adjustable component settings.
5. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
6. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
7. **Card Exchange** — Exchanging a suspect card with a card that is known to be working correctly is an efficient method for localizing problems to individual cards.

Warranty and Repair Policy

The ADA-8405-C is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your ADA-8405-C proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this ADA-8405-C has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This ADA-8405-C User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the ADA-8405-C are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

In Case of Problems

Should any problem arise with your ADA-8405-C, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your ADA-8405-C. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Technical Support

Telephone: +1 613 • 652 • 4886
After Hours Emergency: +1 613 • 349 • 0006
Email: techsupport@rossvideo.com

General Information

Telephone: +1 613 • 652 • 4886
Fax: +1 613 • 652 • 4425
Email: solutions@rossvideo.com
Website: <http://www.rossvideo.com>

Visit Us

Visit our website for:

- Company information and news
- Related products and full product lines
- Online catalog
- Testimonials