


Basic Cabling

⚠ CAUTION: Before you set up and operate this product, refer to the Important Safety and Regulatory Notices document included in the shipping box.

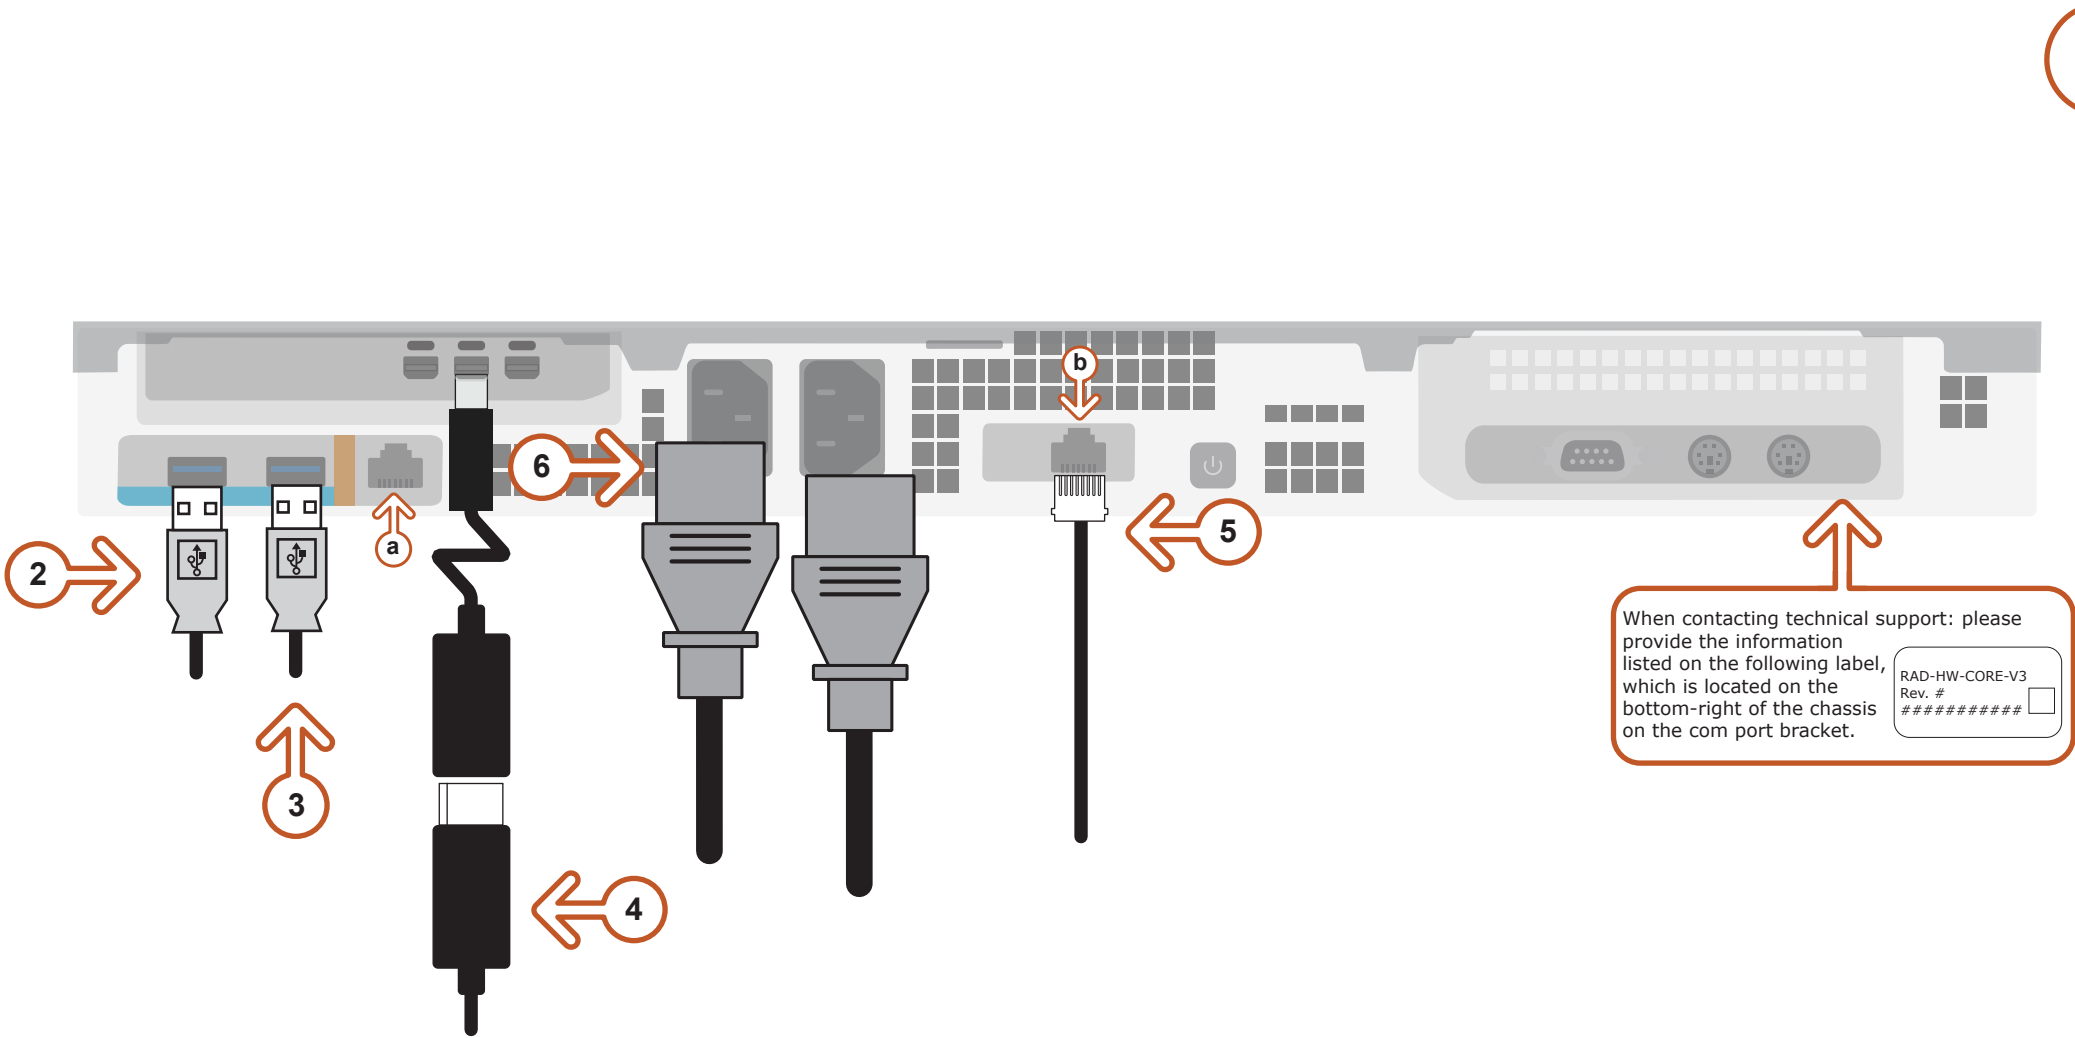

- 1** Use the supplied Rack Mount Kit to mount the system in a 19" EIA equipment rack.  
*For information on installing the chassis in a rack, see the provided document "Installing the Chassis in a Rack".*

**2** Plug the supplied Keyboard into one of the **USB** ports.

**3** Plug the supplied Mouse into one of the **USB** ports.

**4** Connect a Monitor (customer supplied) to any of the three mini-display ports using the mini-display port to display port adapter.  
*KVM extenders (customer supplied) are required when the system monitor, keyboard, and mouse are located remotely from the rack room.*
- 5** Plug an Ethernet cable from your Local Area Network into either the **1G (a)** or **10G (b) Ethernet** port.  
*The system can be connected to the Internet or restricted production network. The network connection is also used to distribute assets and for the RossTalk/Smart GPI feature.*

**6** Connect power cords from the AC ports on the system to the mains power.  
*The system power supplies are auto-sensing and can use either 110 VAC or 220 VAC.*