



CAUTION: Before proceeding, refer to the "Important Regulatory and Safety Notices to Service Personnel" document that was included with your unit. It is also recommended to refer to the *NEWT-IPX User Guide* which is available for download from our website.

This document outlines how to desk mount the NEWT-IPX.


You will need:

- One Phillips #2 screwdriver
- One NEWT-IPX module
- One Ear Bracket Kit (Ross P/N: NEWT-BRKT-EARS)


To desk mount the NEWT-IPX

1. Set the NEWT-IPX on a flat, and static-free surface with the logo side down.
2. Use the provided screws to fasten each Ear Bracket to the NEWT-IPX chassis.

★ It is recommended to diagonally oppose the Ear Brackets in opposite corners.

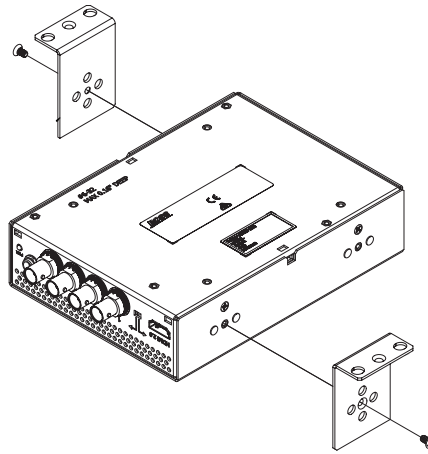

3. Secure the NEWT-IPX to the desktop using the screws which suit your mounting application.

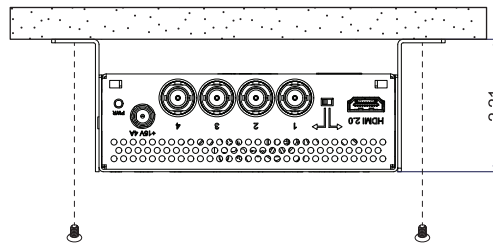

4. Secure the NEWT-IPX power supply.

Cabling the NEWT-IPX

Refer to the *NEWT-IPX Quick Start Guide* for cabling details and further installation steps.