



# UMA-9017

## SDI Utility Monitoring Amplifier

### User Manual



# UMA-9017 User Manual

- Ross Part Number: **9017DR-004-04**
- Release Date: November 14, 2012.

The information contained in this manual is subject to change without notice or obligation.

## Copyright

© 2012 Ross Video Limited. All rights reserved.

This work is proprietary and confidential to Ross Video Limited, its subsidiaries and its other affiliated corporations and may not be copied, distributed, sold or otherwise used or relied upon without the express written permission of Ross Video Limited. Reproduction or reverse engineering of copyrighted software is prohibited.

## Patents

This product is protected by the following US Patents: 4,205,346; 5,115,314; 5,280,346; 5,561,404; 7,034,886; 7,508,455; 7,602,446; 7,834,886; 7,914,332.

This product is protected by the following Canadian Patents: 2039277; 1237518; 1127289. Other patents pending.

## Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

## Trademarks

-  is a registered trademark of Ross Video Limited.
-  is a trademark of Ross Video Limited.
- Ross, ROSS, ROSS®, and MLE are registered trademarks of Ross Video Limited.
- VELCRO® is a registered trademark of Velcro Industries B.V.
- All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

# Important Regulatory and Safety Notices to Service Personnel

Before using this product and any associated equipment, refer to the “**Important Safety Instructions**” listed below to avoid personnel injury and to prevent product damage.

Product may require specific equipment, and/or installation procedures to be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these specific requirements.

## Symbol Meanings



**Protective Earth** — This symbol identifies a Protective Earth (PE) terminal, which is provided for connection of the supply system's protective earth (green or green/yellow) conductor.



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



**Warning** — The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**Caution** — The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



**Warning Hazardous Voltages** — This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.



**ESD Susceptibility** — This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

## Important Safety Instructions



- 1. Warning –** Read these instructions.
- 2.** Keep these instructions.
- 3.** Heed all warnings.
- 4.** Follow all instructions.
- 5.** The safe operation of this product requires that a protective earth connection be provided. A grounding conductor in the equipment's supply cord provides this protective earth. To reduce the risk of electrical shock to the operator and service personnel, this ground conductor must be connected to an earthed ground.
- 6.** Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit in to your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinching particularly at plugs, convenience receptacles, and point where they exit from the apparatus.
- 7. Warning – Indoor Use: WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 8.** Do not block ventilation openings. Install in accordance with manufacturer's instructions.
- 9.** Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10.** Do not use this apparatus near water.
- 11.** Only use attachments/accessories specified by the manufacturer.
- 12.** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13.** Clean only with a dry cloth.
- 14.** To avoid electrical shock, disconnect the A/C power cord before any servicing.
- 15.** Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damage, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## EMC Notices

### **United States of America FCC Part 15**

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



**Notice — Changes or modifications to this equipment not expressly approved by Ross Video Limited could void the user's authority to operate this equipment.**

---

### **CANADA**

This Class “A” digital apparatus complies with Canadian ICES-003.

Cet appareil numerique de la classe “A” est conforme a la norme NMB-003 du Canada.

### **EUROPE**

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

### **INTERNATIONAL**

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002**, and found to comply with the limits for a Class A Digital device.



**Notice — This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.**

---

## **Maintenance/User Serviceable Parts**

Routine maintenance to this GearLite product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the

“Contact Us” section on the last page of this manual. All GearLite products are covered by a generous 3-year warranty and will be repaired without charge for materials or labor within this period. See the “Warranty and Repair Policy” section in this manual for details.

## Environmental Information

**The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.**

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

# Introduction

## Overview

The UMA-9017 SDI Utility Monitoring Amplifier is a highly flexible monitoring solution for SDI signals, and part of a growing family of GearLite self-contained, small brick-format modules.


The UMA-9017 addresses high-quality imaging requirements by converting the eight MSBs of an SDI signal to analog composite (CVBS), Y/C, RGB, or component video. A 10bit DAC and special filtering techniques used in the design achieve a low-artifact video output.

The front panel of the UMA-9017 chassis provides a power status LED for visual reference. In addition, user-selectable settings are available to place the UMA-9017 into the proper operating mode. Some of these modes are: monochrome output, 75% color bar pattern, and vertical interval blanking.

The UMA-9017 provides conversion of 525 and 625 SDI signals (SMPTE 259M). RGB, YUV, or composite plus Y/C outputs are available. NTSC, PAL, and PAL-N composite standards are supported. Special measures have been taken to ensure excellent return loss at both input and output. This guarantees error-free performance with short cables.

The UMA-9017 is delivered with a universal power adaptor and line cord suitable for the country of use. Various mounting options are included that allow a wide range of installation choices. The UMA-9017 provides a flexible broadcast-quality monitoring solution in a small, stand-alone package.

## Simplified Block Diagram

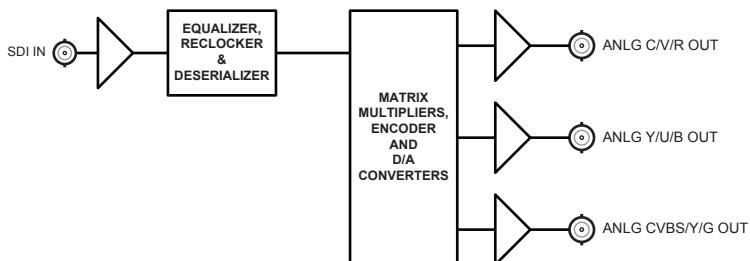

**Figure 1** Simplified Block Diagram of UMA-9017 Functions

## Features

The UMA-9017 includes the following features:

- NTSC, PAL, or PAL-N operation
- 10bit DAC resolution
- 8bit data processing
- One SDI input
- Reclocking to reduce jitter and noise
- YUV, RGB or CVBS + YC outputs
- Automatic input cable equalization >250m (>820ft) of Belden 8281
- Color bar test signal with valid SDI input
- Excellent I/O specifications
- Terminating input 75ohms
- Visual indicator LED for power status
- Small brick form factor
- 5V universal adapter with locking DC connector
- 3-year warranty

# Installation

## Static Discharge

Whenever handling the UMA-9017 and other related equipment, please observe all static discharge precautions as described in the following note:



**ESD Susceptibility** — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments, such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

## Unpacking

Unpack each UMA-9017 you received from the shipping container and check the contents to ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

## Mounting and Installation

The UMA-9017 can be mounted in any convenient location. However, to ensure long life for this product, observe the following precautions and operating requirements:

- Maintain an ambient temperature of 20°C to 40°C.
- Allow for air circulation around the chassis for convectional cooling.

Many different mounting positions are possible with the included mounting hardware. Some installation options are permanent and require careful consideration of the final positioning before installation. Please note that in some mounting locations, the power adaptor must be affixed in a similar manner as the chassis.

Other possible options include the use of adhesive magnetic sheets (not included) affixed to the chassis and the power adaptor, for removable mounting on metal cabinets etc.

Cable ties may be necessary in some applications to relieve strain on the mounting hardware and the connectors.


## Surface Mount Strips

The included VELCRO® brand surface mount strips allow the GearLite module and power supply to be affixed to a permanent location during use and easily

removed for adjustments. Carefully consider the installation location before proceeding; the adhesive is very aggressive and is not easily removed. The adhesive will cure fully in 24 hours.

### To install the Surface Mount Strips

1. Remove the **Protective Backing Film** from the adhesive on the bottom of the two VELCRO® brand **Surface Mount Strips**.
2. Adhere the **Surface Mount Strips** to the bottom side of the chassis. (**Figure 2**)

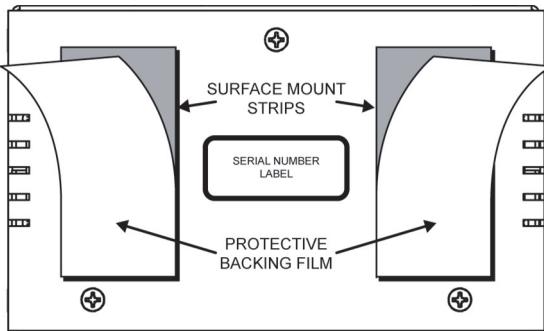

**Figure 2** Surface Mount Installation Option

3. Remove the **Protective Backing Film** from the other side of the VELCRO® brand **Surface Mount Strips**.
4. Press the chassis into position on the surface you want to mount it to.

**Operating Tip** — An additional VELCRO® brand **Surface Mount Strip** is available to mount the power adapter.

### Non-Slip Pads

Four non-slip adhesive pads have been supplied for desktop placements. Simply remove the protective backing film from the adhesive and affix one non-slip pad to each of the four corners on the bottom of the chassis.

### Optional Mounting Accessories


Ross Video is committed to providing practical solutions for the needs of your high-quality broadcast facility.

## **Flat Metal Plate**

Use the flat metal plate for permanent mounting to a rack, a desk, or any other location where bolts or screws can be applied. Be sure to position the module to allow for operator adjustments, if required.

### **To install the Flat Metal Plate**

- 1.** Remove the **2** screws from the bottom of the chassis.
- 2.** Install the **Flat Metal Plate** onto the bottom of the chassis (**Figure 3**) using the screws provided in the Mounting Kit. Do not use the screws removed during **Step 1**.

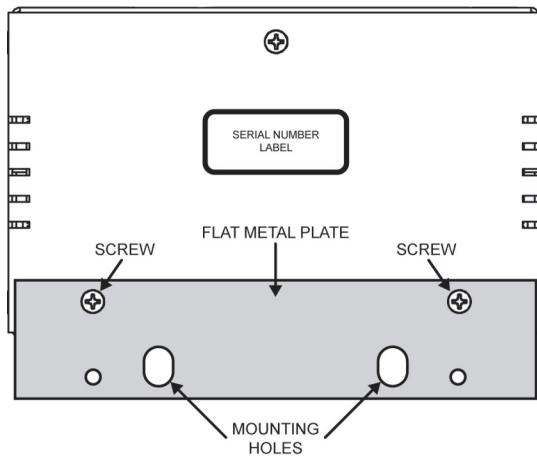


**Figure 3** Flat Metal Plate Installation Option

- 3.** Install the chassis in the desired location using the **Mounting Holes** on the **Flat Metal Plate**. Mounting screws are not provided by Ross Video.

## **Angle Mounting Bracket**

The Angle Mounting Bracket (**Figure 4**) allows a single GearLite module to be installed in positions not possible with the flat metal plate. The bracket has a 90° angle. Mounting screws are not provided by Ross Video.

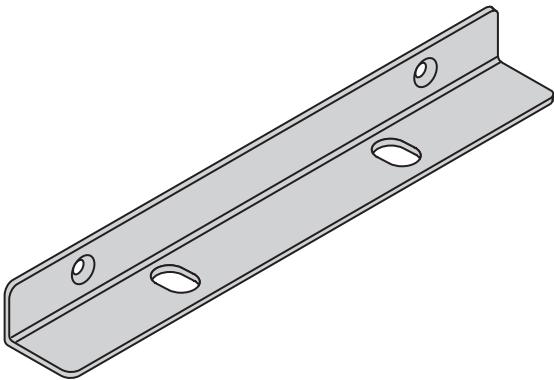

**Figure 4** Angle Mounting Bracket

# Setup

## Power Adapter and Supply

Connect the PS-9000 power adaptor to the power supply connector. The PS-9000 provides up to 2A of regulated +5V DC (5%). The DC power cord has a locking connector that securely fastens into the power supply DC jack on the UMA-9017. The UMA-9017 has a standard miniature power jack (center pin positive).

If using an adaptor other than the PS-9000, ensure that:

- the polarity is correct
- the voltage is +5V DC regulated to 5%
- sufficient current for the UMA-9017 is supplied




**Caution** — *Use of improper adaptors may damage the UMA-9017 and will void the warranty.*

Installations outside of North America using line voltages of 200-240V require a plug, certified for the country of use, to be installed on the supplied line cord. Refer to the section “**Important Regulatory and Safety Notices to Service Personnel**” at the front of this manual for details.

## Cable Connections Overview


Connect the cables to the UMA-9017 according to the designations indicated on the chassis label and **Figure 5**. The input is internally terminated at 75ohm. It is not necessary to terminate unused outputs.

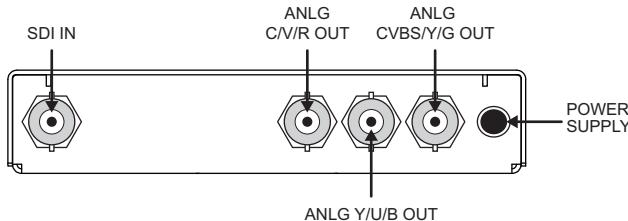

**Figure 5** UMA-9017 Connections

## DIP Switches

An 8-position DIP switch allows the user to configure the UMA-9017 to fit into almost any installation. Refer to **Figure 6** for DIP Switch locations.

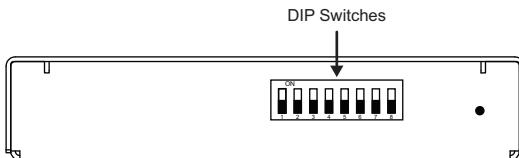

**Figure 6** UMA-9017 — DIP Switch Locations

**Table 1** outlines how to set **SW1** to **SW8**. The following conventions are used:


- ↑ Set the DIP switch in the UP position
- ↓ Set the DIP Switch in the DOWN position

**Table 1 DIP Switch Positions**

SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	Setting
↑	↑							NTSC (525)
↑	↓							PAL-N (625)
↓	↓							PAL-B/G (625)
		↑						Chroma on
		↓						Chroma off
			↑					Pass VI
			↓					Blank VI
				↑				Setup on
				↓				Setup off
					↑			Normal
					↓			Color Bars
						↑		Composite + Y/C
						↓		Component
							↑	RGB
							↓	YUV

## Status LEDs

The front panel of the module has an LED that displays the input status. **Figure 7** indicates the location of the LEDs.

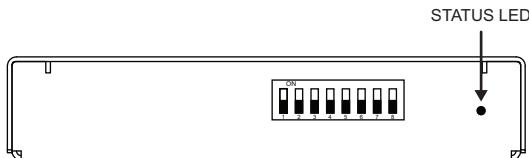

**Figure 7** UMA-9017 — LEDs

**Table 2** describes the status LEDs available on the UMA-9017. Note that the UMA-9017 is operating correctly when the STATUS LED is lit.

**Table 2 Status LED Descriptions**

LED	Color	Function
STATUS	Green	When lit green, this LED indicates that the UMA-9017 is powered on and functioning correctly.
	Flashing	When flashing green, this LED indicates that there is an input signal error, or the UMA-9017 is set to output Color Bars.
	Off	When off, this LED indicates a loss of power to the UMA-9017.

# Specifications

## Technical Specifications

Specifications are subject to change without notification.

**Table 3 UMA-9017 — Technical Specifications**

Category	Parameter	Specification
Serial Digital Video Input	Number of Inputs	1
	Signal Standards Accommodated	SMPTE 259M (conversion at 270Mbps only)
	Impedance	75ohm terminating
	Return Loss	>19dB to 270MHz
	Equalization (Belden 8281 cable)	Automatic, up to 26dB (250m of cable) @ 270Mbps
Analog Monitoring Output	Number of Outputs	3
	Video	Composite plus Y/C or RGB or YUV
	Impedance	75ohm
	Return Loss	>45dB to 6MHz
	Isolation	>44dB to 6MHz
	Signal Level	See <b>Table 4</b> on page 16
	DC Offset for RGB or Composite Video	<± 50mV
	Frequency Response	±0.25dB to 5MHz, typically -1dB @ 5.75MHz
	Differential Phase	<1%
	Differential Gain	<1°
Power	Outputs Short Circuit Protected	Yes
	RMS Noise (unweighted)	-53dB 0-5.0MHz
	Required Voltage	+5V DC (5% regulation)
	Current Consumption	>425mA typical
	Total Power	>2.2W typical

**Table 3 UMA-9017 — Technical Specifications**

Category	Parameter	Specification
Other	Operating Range	20°C to 40°C ambient
	Dimensions	13cm x 9cm x 2.5cm (5" x 3.5" x 1")
	Weight	312g (11oz)

## Analog Video Levels

**Table 4 Analog Video Levels**

Video Format	Standard Levels	
Composite Video	NTSC	1Vp-p
	PAL-B/G	
	PAL-N	
RGB (for 100% Color Bar input signal)	525 SETUP ON	Video Level 714mV
		Sync Level 286mV
	525 SETUP OFF	Video Level 700mV
		Sync Level 286mV
	625	Video Level 700mV
		Sync Level 300mV
YUV (for 100% Color Bar input signal)	525 SETUP ON	Y Video 714mV
		Y Sync 286mV
		U/V Levels 934mV
	525 SETUP OFF	Y Video 714mV
		Y Sync 286mV
		U/V Levels 934mV
	625	Y Video 700mV
		Y Sync 300mV
		U/V Levels 700mV

# Service Information

## Warranty and Repair Policy

The GearLite UMA-9017 is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of THREE (3) years from the date of delivery to the customer. In the event that your GearLite UMA-9017 proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this GearLite UMA-9017 has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the THREE (3) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This GearLite SDI Utility Monitoring Amplifier User Manual of our Digital Products line provides all pertinent information for the safe installation and operation of your GearLite Product. Ross Video policy dictates that all repairs to the GearLite UMA-9017 are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

## *In Case of Problems*

Should any problem arise with your GearLite UMA-9017, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your GearLite UMA-9017. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

***Notes:***



## Contact Us

**Contact our friendly and professional support representatives for the following:**

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

### Technical Support

Telephone: +1 613 • 652 • 4886

After Hours Emergency: +1 613 • 349 • 0006

Email: [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

### General Information

Telephone: +1 613 • 652 • 4886

Fax: +1 613 • 652 • 4425

Email: [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website: <http://www.rossvideo.com>

## Visit Us

Visit our website for:

- Company information and news
- Related products and full product lines
- Online catalog
- Testimonials



Video Production Technology