


UDA-8705A

Analog Utility Distribution Amplifier User Manual

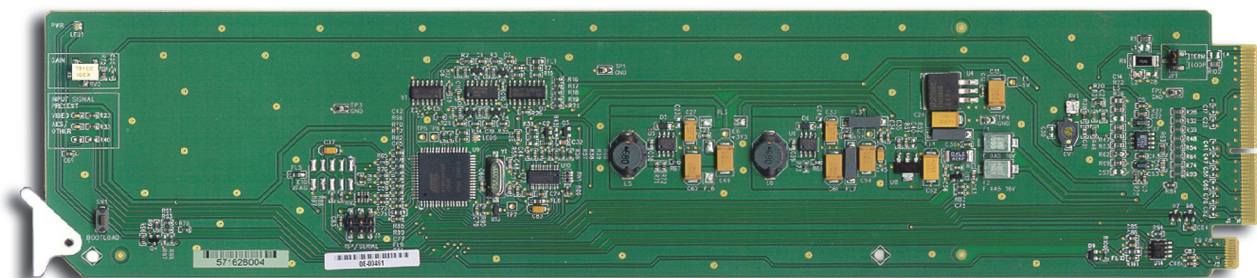

Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross
CEO, Ross Video
dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

UDA-8705A · User Manual

- Ross Part Number: 8705ADR-004-03
- Release Date: January 18, 2018.

The information contained in this Guide is subject to change without notice or obligation.

Copyright

©2018 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Safety Notices

Refer to the “**Important Regulatory and Safety Notices**” document that accompanied your product.

Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as certification or Declaration of Compliance for the product is available upon request by contacting techsupport@rossvideo.com. Please include the product; model number identifiers and serial number and country that compliance information is needed in request.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio

communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notice — *Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.*

Canada

This Class “A” digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules.

Cet appareil numérique de la classe “A” est conforme à la norme NMB-003 du Canada.

European Union

This equipment is in compliance with the essential requirements and other relevant provisions established under regulation (EC) No 765/2008 and Decision No 768/2008/EC referred to as the “New Legislative Framework”.



Warning — *This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.*

Australia/New Zealand

This equipment is in compliance with the provisions established under the Radiocommunications Act 1992 and Radiocommunications Labeling (Electromagnetic Compatibility) Notice 2008.

Korea

This equipment is in compliance with the provisions established under the Radio Waves Act.

Class A equipment (Broadcasting and communications service for business use)

This device is a business-use (Class A) EMC-compliant device. The seller and user are advised to be aware of this fact. This device is intended for use in areas outside home.

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
Class A Equipment (Industrial Broadcasting & Communication Equipment)	This equipment is Industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home.

International

This equipment has been tested under the requirements of CISPR 22:2008 or CISPR 32:2015 and found to comply with the limits for a Class A Digital device.

Notice — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the “**Contact Us**” section of this manual. All openGear products are covered by a generous 5-year warranty

and will be repaired without charge for materials or labor within this period. See the “**Warranty and Repair Policy**” section in this manual for details.

Environmental Information

The equipment may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

Company Address



Ross Video Limited

8 John Street
Iroquois, Ontario, K0E 1K0
Canada

Ross Video Incorporated

P.O. Box 880
Ogdensburg, New York
USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): techsupport@rossvideo.com

E-mail (General Information): solutions@rossvideo.com

Website: <http://www.rossvideo.com>

Contents

Introduction	1
Overview.....	1-2
Features.....	1-2
Functional Block Diagrams	1-3
User Interfaces	1-4
DashBoard Menus for the UDA-8705A.....	1-4
Card-edge Controls.....	1-4
SNMP Monitoring and Control	1-4
Documentation Terms and Conventions.....	1-5
 Installation	 2
Before You Begin	2-2
Static Discharge	2-2
Unpacking.....	2-2
Installing the UDA-8705A.....	2-3
Supported Rear Modules	2-3
Installing a Rear Module	2-3
Installing the UDA-8705A	2-4
Cabling for the UDA-8705A	2-5
DFR-8310 Series Frame Cabling Overview.....	2-5
DFR-8321 Series Frame Cabling Overview.....	2-5
 User Controls	 3
Card Overview	3-2
Control and Monitoring Features.....	3-3
Status LEDs on the UDA-8705A	3-3
 DashBoard Menus	 4
Status Tabs	4-2
Signal Tab.....	4-2
Product Tab	4-3
Setup Tab	4-4
 Specifications	 5
Technical Specifications	5-2
 Service Information	 6
Troubleshooting Checklist.....	6-2
Bootload Button	6-2
Warranty and Repair Policy.....	6-3

Introduction

In This Chapter

This chapter contains the following sections:

- Overview
- Functional Block Diagrams
- User Interfaces
- Documentation Terms and Conventions

A Word of Thanks

Congratulations on choosing an openGear UDA-8705A Analog Utility Distribution Amplifier. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your UDA-8705A, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

Overview

The UDA-8705A is an analog general-purpose distribution amplifier. It is very useful in digital systems when there is a requirement for the distribution of a few analog signals, such as a color black reference.

The UDA-8705A is a general-purpose amplifier for use in the distribution of analog SD-video, Tri-level sync or AES-3id audio. It is intended for use in situations where cable equalization and differential input are not needed, and clamping is not required. Gain is adjustable over a wide range of 3dB.

This amplifier is DC-coupled and will faithfully provide all aspects of a video input signal to eight identical output copies with very low distortion. The use of new generation integrated circuits and innovative engineering has resulted in excellent performance combined with economy.

Features

The following features make the UDA-8705A the best solution for general analog distribution:

- 8 analog video outputs
- DC Coupled
- Wide adjustable gain range of 3dB
- Low distortion
- Option to function as an 1x8 DA with a passive looping input (*requires the 8310AR-032 or 8320AR-032 split rear modules*)
- Excellent isolation between outputs
- Power to each card is individually fused
- Reports status and configuration remotely via the DashBoard Control System
- Fits openGear frames
- Fully compliant with openGear specifications
- 5-year transferable warranty

Functional Block Diagrams

This section provides a functional block diagrams that outline the workflow of the UDA-8705A.

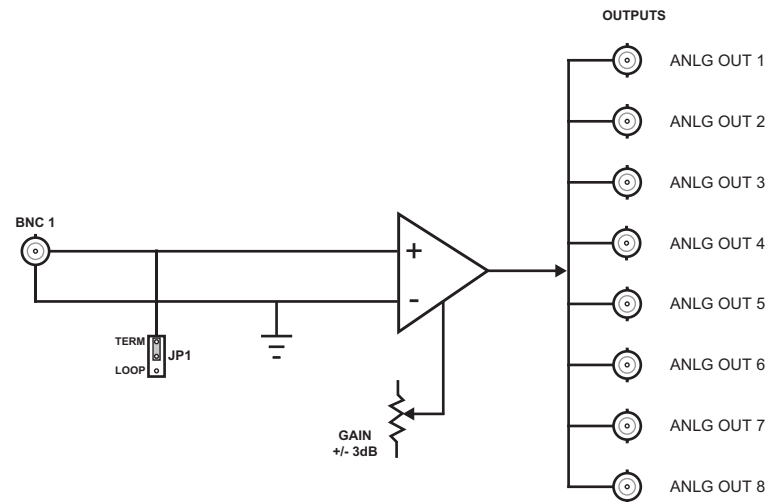


Figure 1.1 UDA-8705A without Looping, Full Rear Module — Simplified Block Diagram

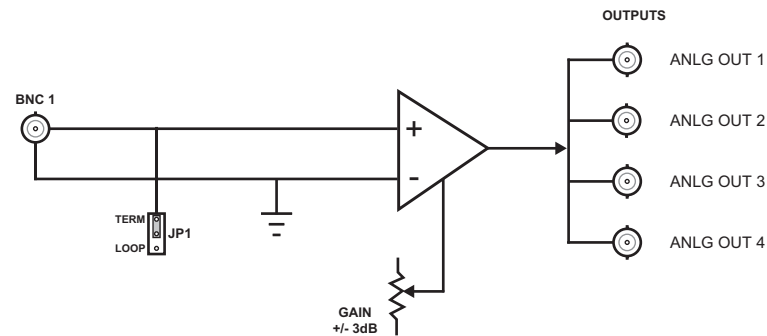


Figure 1.2 UDA-8705A without Looping, Split Rear Module — Simplified Block Diagram

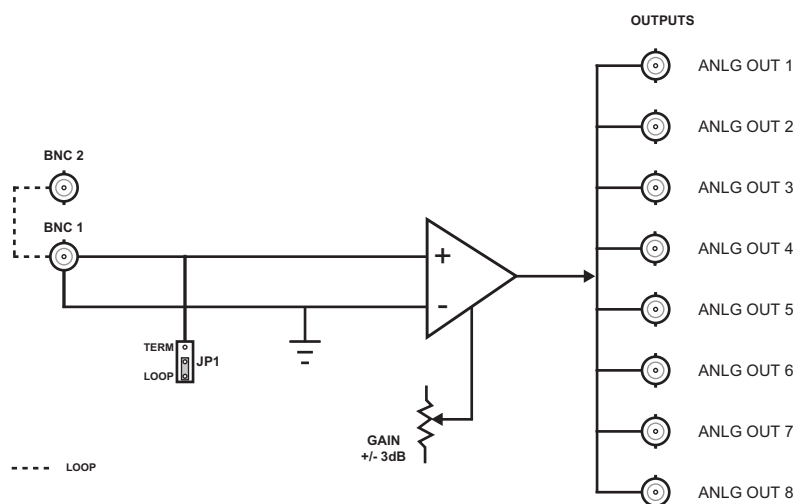


Figure 1.3 UDA-8705A with Looping, Full Rear Module — Simplified Block Diagram

User Interfaces

The UDA-8705A includes the following user interfaces.

DashBoard Menus for the UDA-8705A

DashBoard enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with other cards in the frame through the Network Controller Card.

For More Information on...

- menus and parameters available in DashBoard for the UDA-8705A, refer to the chapter “**DashBoard Menus**” on page 4-1.
- using DashBoard, refer to the *DashBoard User Manual*.
- configuring a Network Controller Card, refer to the *MFC-8300 Series* or *MFC-OG3 Series User Manual*.

Card-edge Controls

The UDA-8705A includes card-edge controls for adjusting the gain, and configuring an 75ohm termination on the input of the UDA-8705A. LEDs enable you to monitor the input signals, and communication activity of the UDA-8705A.

For More Information on...

- card-edge controls, refer to the section “**Card Overview**” on page 3-2.
- LEDs on the card, refer to the section “**Control and Monitoring Features**” on page 3-3.

SNMP Monitoring and Control

The Network Controller Card in the openGear frame provides optional support for remote monitoring of your frame and the using Simple Network Management Protocol (SNMP), which is compatible with many third-party monitoring and control tools.

For More Information on...

- SNMP controls on this card, refer to your UDA-8705A Management Information Base (MIB) file.
- SNMP Monitoring and Control, refer to the manual for your openGear frame.

Documentation Terms and Conventions

The following terms and conventions are used throughout this manual.

Terms

The following terms are used:

- **“Board”**, and **“Card”** refer to openGear terminal devices within openGear frames, including all components and switches.
- **“DashBoard”** refers to the DashBoard Control System.
- **“DFR-8300 series frame”** also includes all version of the DFR-8310 series and DFR-8321 series frames and any available options unless otherwise noted.
- **“openGear frame”** refers to the DFR-8300 series and OG3-FR series frames that house the UDA-8705A.
- **“Operator”** and **“User”** refer to the person who uses UDA-8705A.
- **“System”** and **“Video system”** refer to the mix of interconnected production and terminal equipment in your environment.

Conventions

The following conventions are used:

- The **“Operating Tips”** and **“Note”** boxes are used throughout this manual to provide additional user information.

Installation

In This Chapter

This chapter provides instructions for installing the rear module(s) for the UDA-8705A, installing the card into the frame, and cabling details.

The following topics are discussed:

- Before You Begin
- Installing the UDA-8705A
- Cabling for the UDA-8705A

Before You Begin

Before proceeding with the instructions in this chapter, ensure that your openGear frame is properly installed according to the instructions in the manual for your frame.

Static Discharge

Throughout this chapter, please heed the following cautionary note:



ESD Susceptibility — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

Unpacking

Unpack each UDA-8705A you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

Installing the UDA-8705A

This section outlines how to install a rear module in an openGear frame. The same procedure applies regardless of the frame or card type.

Supported Rear Modules

The specific rear module you need to install depends on the frame you are using and if you require the looping feature. Note that the available cable designations differ between the type of module used. Refer to the section “**Cabling for the UDA-8705A**” on page 2-5 for details.

DFR-8310 Series Frames

Use one of the following rear modules:

- **8310AR-030** Rear Module — Use this rear module if you do not require the looping feature. Note that the **8310AR-030** has the symbol “**A**” in the top left corner of the module face. Ensure to terminate the input on the card by setting **JP1** to **TERM**.
- **8310AR-032** Rear Module — Use this rear module to access the looping feature. Note that the **8310AR-032** has the symbol “**K**” in the top left corner of the module face. If the input is looped on the rear module to another device, set **JP1** to **LOOP**. If looping is not used, either set **JP1** to **TERM**, or terminate the input externally at BNC 2.
- The UDA-8705A is also compatible with the DFR-8310-BNC frames. However, this frame does not support the looping feature of the UDA-8705A.

DFR-8321 and OG3-FR Series Frames

Use one of the following rear modules:

- **8320AR-030** Full Rear Module — Use this rear module if you do not require the looping feature. Note that the **8320AR-030** has the symbol “**A**” in the top left corner of the module face. Ensure to terminate the input on the card by setting **JP1** to **TERM**.
- **8320AR-032** Full Rear Module — Use this rear module to access the looping feature. Note that the **8320AR-032** has the symbol “**K**” in the top left corner of the module face. If the input is looped on the rear module to another device, set **JP1** to **LOOP**. If looping is not used, either set **JP1** to **TERM**, or terminate the input externally at BNC 2.
- **8320AR-031** Split Rear Module — Use this rear module to densely populate your frame. Because the looping feature is not available when using this rear module, ensure that the input for each card is terminated on the card by setting **JP1** to **TERM**.

Installing a Rear Module

If you are installing the UDA-8705A in a DFR-8310-BNC frame, or the Rear Module is already installed, proceed to the section “**Installing the UDA-8705A**” on page 2-4.

To install a rear module in your openGear frame

1. Locate the card frame slots on the rear of the frame.
2. Remove the Blank Plate from the slot you have chosen for the UDA-8705A installation.
3. Install the bottom of the rear module in the **Module Seating Slot** at the base of the frame’s back plane. (**Figure 2.1**)

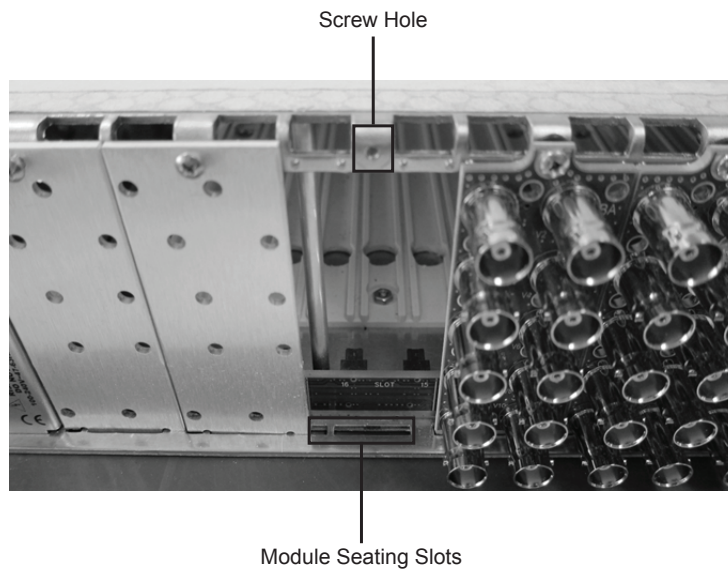


Figure 2.1 Rear Module Installation in an openGear Frame (UDA-8705A not shown)

4. Align the top hole of the rear module with the screw on the top-edge of the frame back plane.
5. Using a Phillips screwdriver and the supplied screw, fasten the rear module to the back plane of the frame. Do not over tighten.
6. Ensure proper frame cooling and ventilation by having all rear frame slots covered with rear modules or Blank Plates.

Installing the UDA-8705A

This section outlines how to install the UDA-8705A in a openGear frame.

To install the UDA-8705A in an openGear frame

1. Locate the rear module you installed in the procedure “**Installing a Rear Module**” on page 2-3.

Notice — *Heat and power distribution requirements within a frame may dictate specific slot placements of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using convectional cooling.*

2. Hold the UDA-8705A by the edges and carefully align the card-edges with the slots in the frame.
3. Fully insert the card into the frame until the rear connection plus is properly seated in the rear module.
4. Verify whether your label is self-adhesive by checking the back of the label for a thin wax sheet. You must remove this wax sheet before affixing the label to the rear module surface.
5. Affix the supplied **Rear Module Label** to the BNC area of the rear module.

Cabling for the UDA-8705A

This section provides information for connecting cables to the installed rear modules on the openGear frames. The input of the UDA-8705A can be terminated on the card depending on the rear module used. It is not necessary to terminate unused outputs.

DFR-8310 Series Frame Cabling Overview

The UDA-8705A is used with the following rear modules:

- **8310AR-030** Rear Module — Each rear module occupies one slot and accommodates one card. This rear module provides one analog input, and eight analog outputs. (**Figure 2.2**)
- **8310AR-032** Rear Module — Each rear module occupies one slot and accommodates one card. This rear module provides eight outputs, and one looping output. (**Figure 2.3**)

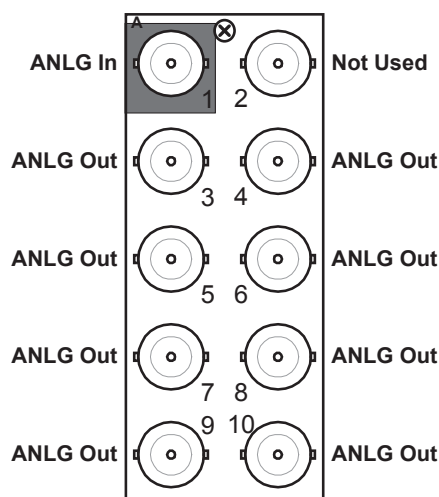


Figure 2.2 Cable Connections for the 8310AR-030 and 8320AR-030 Rear Modules

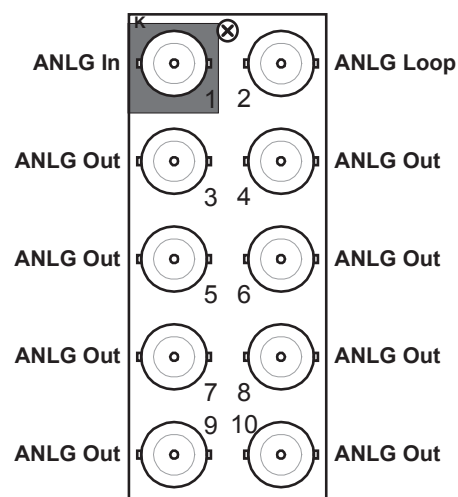


Figure 2.3 Cable Connections for the 8310AR-032 and 8320AR-032 Rear Modules

DFR-8321 Series Frame Cabling Overview

The UDA-8705A is used with the following rear modules:

- **8320AR-030** Full Rear Module — Each rear module occupies two slots and accommodates one card. This rear module provides one analog input, and eight analog outputs. (**Figure 2.2**)
- **8320AR-032** Full Rear Module — Each rear module occupies two slots and accommodates one card. This rear module provides one analog input, one looping output, and eight analog outputs. (**Figure 2.3**)
- **8320AR-031** Split Rear Module — Each rear module occupies two slots and accommodates one card. This rear module provides one analog input, and four analog outputs per card. (**Figure 2.4**)

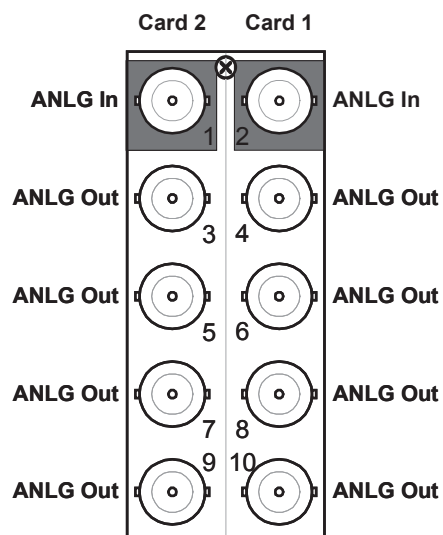


Figure 2.4 Cable Connections for the **8320AR-031** Rear Module

User Controls

In This Chapter

This chapter provides a general overview of the user controls available on the UDA-8705A.

The following topics are discussed:

- Card Overview
- Control and Monitoring Features

Card Overview

This section provides a general overview of the UDA-8705A components.

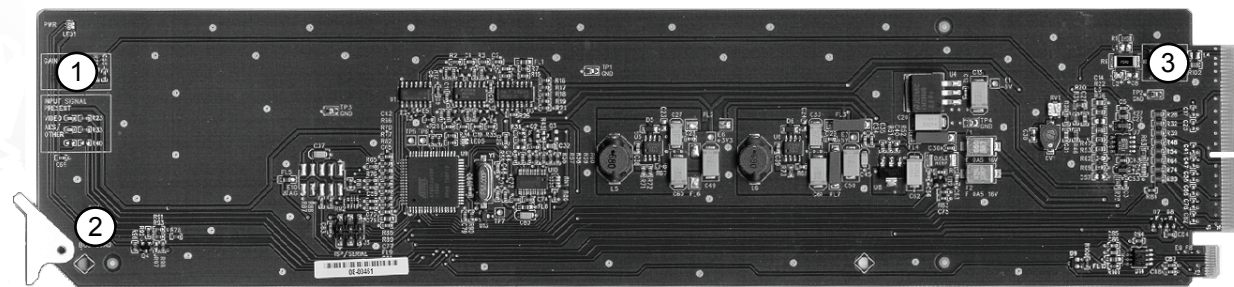


Figure 3.1 UDA-8705A — Components

1) Gain Adjustment (RV2)	2) Bootload Button (SW1)	3) Local Termination (JP1)
-----------------------------------	-----------------------------------	-------------------------------------

1. Gain Adjustment (**RV2**)

Use **RV2** to adjust the Gain level of the UDA-8705A. This control provides a gain range of +/- 3dB.

2. Bootload Button (**SW1**)

This button is used for factory service in the unlikely event of a complete card failure.

3. Local Termination (**JP1**)

Use **JP1** to configure an optional 75ohm termination on the input of the UDA-8705A as follows:

- **TERM** — Select this option to terminate the input signal on the card. This is the default.
- **LOOP** — Select this option to leave the input unterminated. For example, use this setting if you wish to loop the signal to another device.

For More Information on...

- the LEDs available on the card-edge, refer to the section “**Control and Monitoring Features**” on page 3-3.
- the bootload process, refer to the section “**Bootload Button**” on page 6-2.

Control and Monitoring Features

This section describes the LEDs on the UDA-8705A. Refer to **Figure 3.2** for the LED locations.

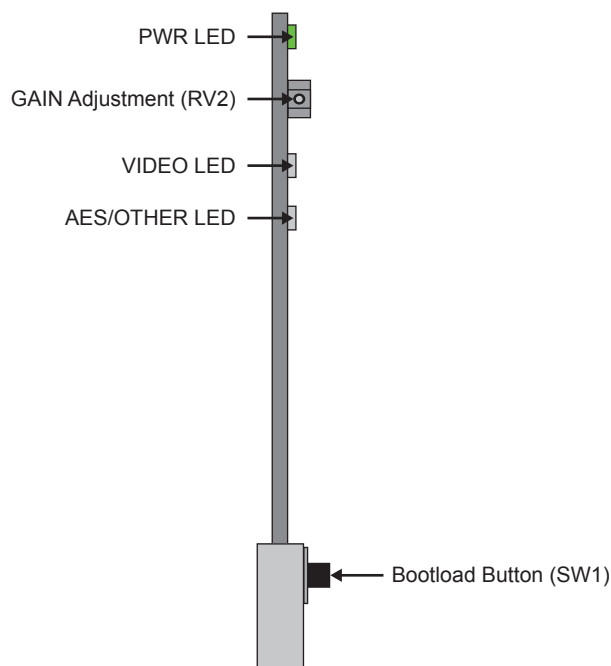


Figure 3.2 UDA-8705A Card-edge Controls

Status LEDs on the UDA-8705A

Table 3.1 provides information on the LEDs located on the UDA-8705A card-edge.

Table 3.1 LEDs on the UDA-8705A

LED	Color	Display and Description
PWR	Green	When lit green, this LED indicates that the card is operating normally and no anomalies have been detected.
	Flashing Green	When flashing green, this LED indicates that the card requires a software upgrade.
	Orange	When lit orange, this LED indicates that the card is running internal diagnostics while powering up.
	Red	When lit red, this LED indicates that an error has occurred. Re-seat the card in the frame, verify the rear module type and connections, or call Ross Technical Support.
	Off	When not lit, this LED indicates that the card is not powered.
VIDEO^a		When lit, this LED indicates that a valid analog video input signal is present on BNC 1.
AES/OTHER^a		When lit, this LED indicates a valid AES signal, or some other analog signal, is present on the input. The signal must be greater than 0.5Vp-p.

- a. Slowly changing, or small amplitude signals, will pass through the card, but the LEDs may be unlit. In this case, it is recommended to disable the Notify on Input Loss alarm in DashBoard. Note that the Input Signal Present threshold is set to assume a level of 1Vp-p.

DashBoard Menus

In This Chapter

This section briefly summarizes the menus, items, and parameters available from the DashBoard for the UDA-8705A. Parameters marked with an asterisk (*) are the factory default values.

The following topics are discussed:

- Status Tabs
- Setup Tab



Operating Tip — *Wait 30 seconds after the last setting change to ensure all changes are saved to the non-volatile memory of the card.*

Status Tabs

The **Status** tabs provide read-only information such as software revision issue, signal status, and power consumption of the UDA-8705A. The fields in the **Status** tabs vary in severity from green (valid) to red (alarm). DashBoard reports the most severe alarm for a single field. Alarm colors are noted as text set in brackets next to the menu parameter name.

Signal Tab

Table 4.1 summarizes the read-only information displayed in the **Signal** tab.

Table 4.1 Signal Tab Items

Tab Title	Item	Parameters	Description
Signal	Signal Status	Video Present (Green)	Indicates the card is passing valid analog video
		AES/Other (Green)	Indicates the card is passing AES audio or other analog signals
		No Input (Green)	Indicates one of the following has occurred: • No input signal is detected • Signal is below the detection threshold • The Notify on Loss of Input alarm is disabled
		No Input (Red)	Indicates one of the following has occurred: • No input signal is present • Signal is below 0.5Vp-p • The Notify on Loss of Input alarm is enabled
	Signal Format	#	Indicates the valid video format detected
		Unknown Video	Indicates a video signal is present, but the format is not supported
		No Signal	Indicates the video signal is absent
		AES/Other	Indicates an audio, or other analog, signal is detected

Hardware Tab

Table 4.2 summarizes the read-only information displayed in the **Hardware** tab.

Table 4.2 Hardware Tab Items

Tab Title	Item	Parameters	Description
Hardware	Voltage (mV)	#	Supply Voltage
	Current (mA)	#	Current consumption of card
	Rear Module	#	Indicates the installed rear module
	CPU Headroom	#	Processing power available
	RAM Available	#	On-board processing memory available
	EE Bank	#	Storage count

Product Tab

Table 4.3 summarizes the read-only information displayed in the **Product** tab.

Table 4.3 Product Tab Items

Tab Title	Item	Parameters	Description
Product	Product	UDA-8705A	
	Supplier	Ross Video Ltd.	
	Board Rev	##	
	Serial Number	#####	Indicates the serial number of the card
	Software Rev	#	Indicates the software version

Setup Tab

Table 4.4 summarizes the **Setup** options available in DashBoard for the UDA-8705A.

Table 4.4 Setup Menu Items

Tab Title	Item	Parameters	Description
Setup	Notify on Loss of Input	Selected*	Signal Status field in the Signal tab ignores a loss of input
		Cleared	Signal Status field in the Signal tab reports a loss of input

Specifications

In This Chapter

This chapter provides the technical specification information for the UDA-8705A. Note that specifications are subject to change without notice.

The following topics are discussed:

- Technical Specifications

Technical Specifications

This section provides the technical specifications for the UDA-8705A.

Table 5.1 UDA-8705A Technical Specifications

Category	Parameter	Specification
Analog Input	Number of Inputs	8310AR-030, 8320AR-030: 1
		8310AR-032, 8320AR-032: 1
		8320AR-031: 1
	Impedance	75ohm terminating
	Return Loss	43dB to 5MHz
		35dB to 20MHz
	Nominal Signal Level	1Vp-p (video, AES-3id)
Analog Outputs	Number of Outputs	8310AR-030, 8320AR-030: 8
		8310AR-032, 8320AR-032: 8 plus 1 looping
		8320AR-031 Rear Module: 4
	Impedance	75ohm
	Return Loss	45dB to 5MHz
		41dB to 20MHz
	Isolation	51dB to 5MHz
		40dB to 20MHz
	DC Offset	<30mV
	Frequency Response	±0.08dB to 10MHz
		±0.2dB to 20MHz
	Differential Phase	NTSC: <0.1°
		PAL: <0.3°
Performance (all outputs loaded)	Differential Gain	NTSC: <0.1%
		PAL: <0.1%
	RMS Noise (unweighted)	68dB
	Gain Range	±3dB
	Gain Stability	<0.2% per 10°C
	Delay	NTSC: 7ns (9° @ 3.58MHz)
		PAL: 7ns (11° @ 4.43MHz)
	Chrominance-to-Luminance Delay	<2.0ns
Power	Line Rate Window Tilt	<0.1%
	Field Rate Window Tile	<0.1%
	Bandwidth	-3dB @ 56MHz Typical
	Total Power Draw	<1.5W

Service Information

In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your UDA-8705A, the following basic troubleshooting checklist may help identify the source of the problem. If the frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “**Contact Us**” section.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
4. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
5. **Unit Exchange** — Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.

Bootload Button

In the unlikely event of a complete card failure, you may be instructed by a Ross Technical Support specialist to perform a complete software reload on the UDA-8705A.

To reload the software on a UDA-8705A

1. Eject the card from the frame.
2. Press and hold the **Bootload** button, while re-inserting the card into the frame.
3. Release the button.
 - The **PWR** LED flashes green while the card is waiting for a new software load.
 - If a new software load is not sent to the card within 60 seconds, the card will attempt to restart with its last operational software load.
 - Software loads can be sent to the UDA-8705A via the connection on the rear of the frame.

Warranty and Repair Policy

The UDA-8705A is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your UDA-8705A proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this UDA-8705A has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This UDA-8705A User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the UDA-8705A are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

In Case of Problems

Should any problem arise with your UDA-8705A, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your UDA-8705A. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Technical Support

Telephone: +1 613 • 652 • 4886
After Hours Emergency: +1 613 • 349 • 0006
Email: techsupport@rossvideo.com

General Information

Telephone: +1 613 • 652 • 4886
Fax: +1 613 • 652 • 4425
Email: solutions@rossvideo.com
Website: <http://www.rossvideo.com>

Visit Us

Visit our website for:

- Company information and news
- Related products and full product lines
- Online catalog
- Testimonials