


The 1 ME to 2 ME Upgrade option allows you to access two MEs from your Carbonite 1M or Carbonite 1-A control panel. The ME 1 and ME 2 buttons replace the last two AUX buttons on your control panel.


1

Locate the **ME 1** and **ME 2** buttons in the Documentation Kit that came with your Carbonite control panel.

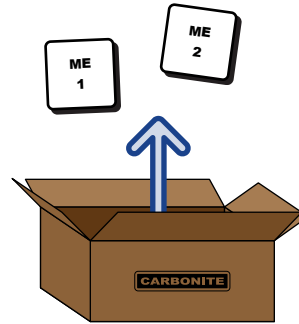


2

Locate the last two **AUX** buttons on your Carbonite control panel.

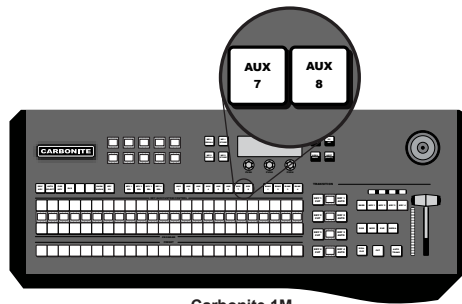

Carbonite 1M


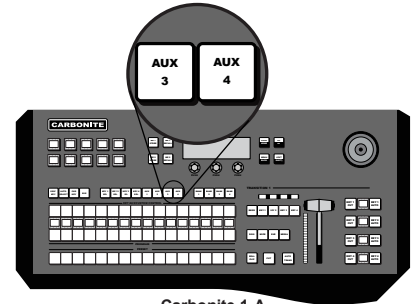


Carbonite 1-A

3

Remove the **AUX** Cap Assembly from the Switch Assembly by grasping it firmly and pulling away from the control panel surface.

Remove both the **AUX** buttons.

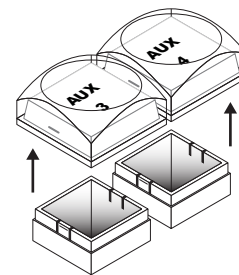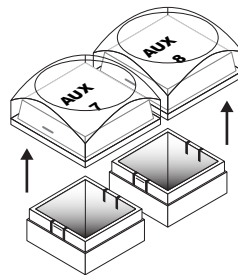

4

Aligning the notches on the sides of the **ME** Cap Assembly to the tabs on the sides of the Switch Assembly, press the Cap Assembly down onto the Switch Assembly with a rolling motion until they click together.

Install both the **ME 1** and **ME 2** buttons.

